11″

8.5″

4.25″

2.75″

HOME DECORATORS COLLECTION®

Item #1015304605
Model #26LE31027

USE AND CARE GUIDE

9 FT SMART GRAND DUCHESS TWINKLING BALSAM FIR LED PRE-LIT GARLAND



powered by HUBSPACE™ SMART HOME PLATFORM

THANK YOU

We appreciate the trust and confidence you have placed in HOME DECORATORS COLLECTION through the purchase of this 9 FT SMART GRAND DUCHESS TWINKLING BALSAM FIR LED PRE-LIT GARLAND. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing HOME DECORATORS COLLECTION!

Safety Information — For Indoor and Outdoor Use

Please read and understand this entire manual before attempting to assemble, operate or install the product. Please retain this manual for future reference, as these contain important information.

IMPORTANT SAFETY INSTRUCTION

When using electrical products, basic precautions should always be followed, including the following:

- READ AND FOLLOW ALL SAFETY INSTRUCTIONS.
- Read and follow all instructions that are on the product or provided with the product.
- Do not use an extension cord.
- Reference the National Electrical Code, ANSI/NFPA 70, specifically for the installation of wiring and clearance from power and lighting conductors.
- Installation work and electrical wiring must be done by qualified person (s) in accordance with all applicable codes and standards, including fire-rated construction.
- Do not install or use within 10 feet of a pool.
- Do not use in a bathroom.
- WARNING: Risk of Electrical Shock. When used outdoors, install only to a covered Class A GFCI protected receptacle that is weatherproof with the power unit connected to the receptacle. If one is not provided, contact a qualified electrician for proper installation. Ensure that the power unit and cord do not interfere with completely closing the receptacle cover.
- WARNING: Risk of Fire. Installation involves special wiring methods to run wiring through a building structure. Consult a qualified electrician.
- WARNING: Not for use with receptacles that are weatherproof only when the receptacle is covered (attachment plug cap not inserted and receptacle cover closed).

SAVE THESE INSTRUCTIONS - This manual contains important safety and operating instructions for power units.

- Do not use seasonal products outdoors unless marked suitable for indoor and outdoor use. When products are used in outdoor applications; connect the product to a Ground Fault Circuit Interrupting (GFCI) outlet. If one is not provided, contact a qualified electrician for proper installation.
- This seasonal-use product is not intended for permanent installation or use.
- Do not mount or place near gas or electric heaters, fireplaces, candles or other similar sources of heat.
- Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails.
- Do not let LEDs rest on the supply cord or on any wire.
- Unplug the product when leaving the house, when retiring for the night, or if left unattended.
- This is an electric product — not a toy! To avoid risk of fire, burns, personal injury and electric shock, it should not be played with or placed where small children can reach it.
- Do not use this product for other than its intended use.
- Do not hang ornaments or other objects from cord, wire, or light string.
- Do not place lighting string on carpeting, drapes, furniture, or allow it to contact vinyl siding while the power is on.

Pre-Assembly

PACKAGE CONTENTS




Part	Description
A	9ft Smart Grand Duchess Twinkling Balsam Fir Led Pre-Lit Garland (Attached - A 10 function push button foot pedal with cord and plug)

Instructions

1

- Safely cut the 2 plastic zip ties a the back of the packaging - for the ease of removal.

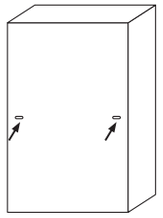

* Dotcom packaging is not applicable.

2 Shaping of the Garland

- Begin to gently bend and shape the branch tips into a desired directional position.

3


- To illuminate, fully insert the garland's plug into a working GFCI outlet or an outdoor rated extension cord.

Functions

Select Your Light Sets Function:

By pressing the Function button, located at the base of the plug, you can then select from one of the following 10 functions listed below:

1. Demo
2. Steady Warm White
3. Steady Multi
4. Twinkling Warm White
5. Slow Fade Warm White
6. Slow Fade Multi
7. Slow Color Variable
8. Fast Flip Warm White to Multi
9. Slow Flip Warm White to Multi
10. Slow Fade Warm White to Multi

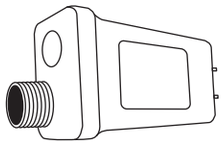

Timer Feature

6 HOUR "ON" / 18 HOUR "OFF" OPERATION

- Locate the function button - located on the base of the plug.
- Select a lighting function - in which you wish to set for 6 hours "On" & 18 hours "Off".

1) To **Activate** the 6 hour "On"/18 hour "Off" timer feature.
   * Press & hold the button, located on the plug, for 10 seconds - then release.
   *The lights will Flash warm white color - 3 times - indicating that the timer feature has been activated.
2) To **Deactivate** the the 6 hour "On"/18 hour "Off" timer feature.
   * Simply press the button, located on the plug, until reaching the "Off" Function.
   *Upon reaching the "Off" Function, the lights will Flash multicolor - 3 times -indicating that the timer feature has now been deactivated.

Please Note: When selecting one of the available 10 functions, upon the timer feature's deactivation, the timer feature will remain deactivated, until timer activation procedure is repeated.

Troubleshooting

- Failure to light; unplug the product and check to see that the GFCI outlet is functioning.

Safety Information (continued)

- Do not close doors or windows on the product or extension cords as this may damage the wire insulation.
- Do not cover the product with cloth, paper or any material not part of the product when in use.
- To reduce the risk of fire and electric shock: a) do not install on trees having needles, leaves or branch coverings of metal or materials which look like metal; and b) do not mount or support strings in a manner that can cut or damage wire insulation.
- SAVE THESE INSTRUCTIONS.

Warranty

LIMITED WARRANTY

This product is warranted to be free from defects in workmanship and materials for up to three seasonal years from date of purchase. If it fails to do so, please contact the Customer Service Team at 1-877-592-5233 or visit www.HomeDepot.com/Hubspace.

Questions, problems, missing parts? Before returning to the store,
call Customer Service
8 a.m. - 7 p.m., EST, Monday-Friday, 9 a.m. - 6 p.m., EST, Saturday

1-877-592-5233

HOMEDEPOT.COM/HUBSPACE

Retain this manual for future use.

Document #: 26LE31027

Safety Information (continued)

- When storing the product, carefully remove the product from wherever it is placed, including tree branches, or bushes to avoid any undue strain or stress on the product conductors, connections, and wires.
- When not in use, store neatly in a cool, dry location protected from sunlight.

This device complies with Part 15 of the FCC Rules.
Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: This lighting string is rated 18 Volt DC.
Do not replace or modify any connectors on this product. Discard product if connector is damaged. Make sure connectors are fully inserted and any connector rings are twisted until completely secured such that the ring can no longer be turned and the two portions of the connector are completely assembled.


Responsible Party- U.S. Contact Information:
Company: HOME DEPOT INC
Address:2455 PACES FERRY ROAD ATLANTA, GA 30339
Customer service toll-free Number : For Hubspace call 1-877-592-5233

FCC MODEL NO.: DPSR15-S100
Contains Transmitter Module FCC ID:2AB2Q-LA02305

To Connect Multiple Garland Sections


1 Connecting End-to-End.

- To add a second garland section to the initial (plugged-in) garland section, first unthread the "cover cap" (exposing the female end of the coaxial) of the initial (plugged-in) garland section.
  NOTE: Connect up to 3 strands of garland end-to-end.

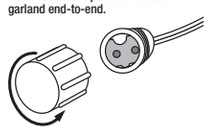


2

- Take the second garland section to be connected to the initial (plugged-in) garland section and unthread the cover cap between the plug and the second garland section. Remove the plug from the second garland section, as it is no longer needed, leaving an exposed male coaxial connector.
  NOTE: The extra plugs remaining from the add-on garland sections can be kept for parts supply.

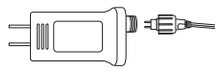

3

- Proceed in making a coaxial end-to-end plug connection by connecting the female coaxial from the initial (plugged-in) garland section with that of the male coaxial end from the second garland section, then thread the cover cap tightly.
  The end-to-end connection and synchronization procedure is now complete!
  Note: To add each additional garland section (up to 3 strands of garland end-to-end), follow the above 3-step procedure.
  PLEASE NOTE: Upon completion of the end-to-end connection of each additional garland section, if synchronization of the combined garlands does not occur, simply unplug the initial garland section from the 120 V power source (outlet), and then plug back-in to the 120 V power source (outlet) to ensure that all of the connected 3 strands of garland are synchronized in color and function.

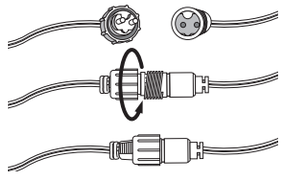

Operation

4 HUBSPACE - APPLICATION SETUP

1. Download the Hubspace™ app from the App Store or the Google Play Store.
2. Sign in if you have a Hubspace account, or register to create an account and then sign in.
3. Make sure your garland is connected to power.

NOTE:
- This Hubspace product requires a 2.4GHz Wi-Fi network, which most routers provide.
- If you do not see your Wi-Fi network name when you attempt to connect your product, please check your router settings or move your product closer to your Wi-Fi router.

4. Tap the "+" button in the upper-right corner of the app screen to add your product.

NOTE:
- Bluetooth access is required for product setup. Android phones must also enable Location services to allow for Bluetooth scanning.

5. Scan the QR code located on the adaptor or the Quick Start Guide.



NOTE:
- The QR code can be found on the adaptor or on the Quick Start Guide.
- The QR code must be scanned from inside the Hubspace app.
- If the QR code cannot be scanned, you can enter the code manually. Tap "Scan problem? Enter the code" and follow the instructions.
- If you cannot locate the QR code or are having trouble scanning the QR code, press the push button for 5 seconds to put the device into setup mode and follow the app instructions or move your product closer to your Wi-Fi router.

6. Control your Grand Duchess product using the Hubspace app.
   - Change the brightness and select preset options.
   - Set on/off timer.
   - Create schedules for product to turn on/off in selected modes.
   - Create groups of garlands so they can be controlled at one time.
7. Set up your Voice Assistant.
   - You can connect your smart Grand Duchess to Google Assistant and Alexa from the Hubspace app. Or, you can sign in to Alexa app or Google Assistant and connect to your Hubspace products from there.