
Item# 1001 573 998
Model# CG3aA015CR1D30

HAMPTON BAY®

USE AND CARE GUIDE

INTERIOR LED FLUSHMOUNT

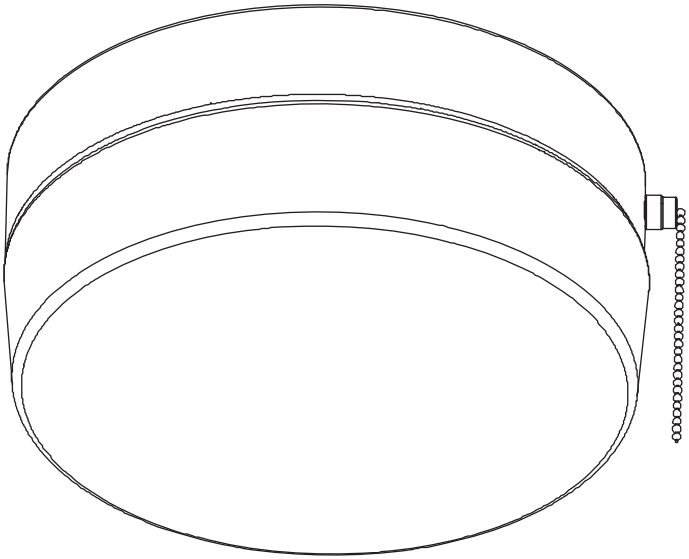

Questions, problems, missing parts? Before returning to the store,
call Hampton Bay Customer Service
8 a.m. - 7 p.m., EST, Monday – Friday, 9 a.m. – 6 p.m., EST, Saturday

1-800-841-1350

HAMPTONBAY.COM

THANK YOU

We appreciate the trust and confidence you have placed in Hampton Bay through the purchase of this interior LED flushmount. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Hampton Bay!

Table of Contents

Table of Contents 2
Safety Information 2
Warranty 2
What is covered 2
What is not covered 2
Pre-Installation 3
Planning Installation 3
Installation 4
Care & Cleaning 6
Troubleshooting 6
Compatibility 6

Safety Information

WARNING: PRODUCT MUST BE INSTALLED BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED, IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE.

Carefully read and understand the information given in this manual before beginning the assembly and installation. Failure to do so could lead to electric shock, fire or other injuries which could be hazardous or even fatal.

- Be sure the electricity to the wires you are working on is shut off. Either remove the fuse or turn off the circuit breaker.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

WARNING: Risk of fire or electric shock. LED Flushmount installation requires knowledge of luminaires electrical systems. If not qualified, do not attempt installation. Contact a qualified electrician.

WARNING: To prevent wiring damage or abrasion, do not expose wiring to edges of sheet metal or other sharp objects.

NOTICE: Do not make or alter any open holes in an enclosure of wiring or electrical components during installation.

NOTICE: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
—Reorient or relocate the receiving antenna.
—Increase the separation between the equipment and receiver.
—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
—Consult the dealer or an experienced radio/TV technician for help.

Warranty

WHAT IS COVERED

The manufacturer warrants this lighting fixture to be free from defects in materials and workmanship for a period of five (5) years from date of purchase. This warranty applies only to the original consumer purchaser and only to products used in normal use and service. If this product is found to be defective, the manufacturer's only obligation, and your exclusive remedy, is the repair or replacement of the product at the manufacturer's discretion, provided that the product has not been damaged through misuse, abuse, accident, modifications, alterations, neglect or mishandling.

WHAT IS NOT COVERED

This warranty shall not apply to any product that is found to have been improperly installed, set-up, or used in any way not in accordance with the instructions supplied with the product. This warranty shall not apply to a failure of the product as a result of an accident, misuse, abuse, negligence, alteration, or faulty installation, or any other failure not relating to faulty material or workmanship. This warranty shall not apply to the finish on any portion of the product, such as surface and/or weathering, as this is considered normal wear and tear.

The manufacturer does not warrant and specially disclaims any warranty, whether express or implied, of fitness for a particular purpose, other than the warranty contained herein. The manufacturer specifically disclaims any liability and shall not be liable for any consequential or incidental loss or damage, including but not limited to any labor / expense costs involved in the replacement or repair of said product.

Contact the Customer Service Team at 1-800-841-1350 or visit www.HAMPTONBAY.com.

Pre-Installation


PLANNING INSTALLATION

WARNING: Shut off power at the circuit breaker or fuse panel before removing the old fixture.


Read all instructions before assembly. Before starting installation of this fixture or removal of a previous fixture, disconnect the power by turning off the circuit breaker or by removing the fuse at the fuse box. To avoid damaging this product, assemble it on a soft, non-abrasive surface such as carpet or cardboard.

NOTE: Keep your receipt and these instructions for proof of purchase.

TOOLS REQUIRED


Wire Strippers


Safety Goggles

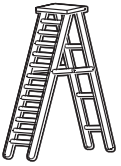
Ladder


Gloves


Flathead Screwdriver


Phillips Screwdriver


Electrical Tape



Wire Cutters

HARDWARE INCLUDED

NOTE: Hardware not shown to actual size.








Part	Description	Quantity
AA	Wire nut	3
BB	Junction box screw	2
CC	Pull cord	1

Pre-Installation (continued)

PACKAGE CONTENTS


Part	Description	Quantity
A	Mounting plate	1
B	Mounting screw	2
C	Housing	1
D	Pull chain	1
E	Lock nut	2
F	Shade	1

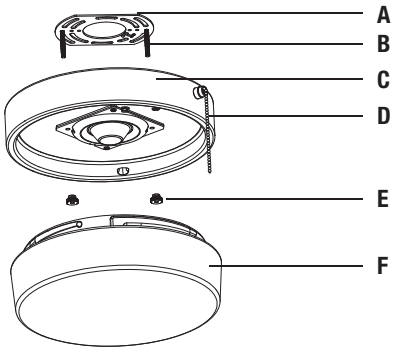

Installation


1 Loosen the lock nuts

- ☐ Loosen the two lock nuts (E) and separate the housing (C) and mounting plate (A).

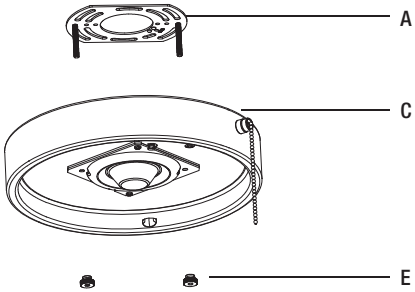


2 Mount the mounting plate

- ☐ Put the mounting plate (A) onto the junction box and fix with junction box screws (BB).

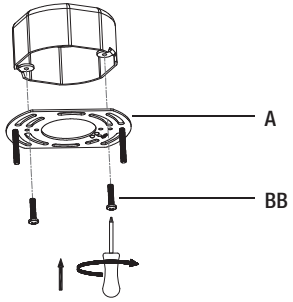


3 Connect the wires

- ☐ Connect the black and white wires of the fixture with two wires of the same colors from the junction box. Secure together using wire nuts (AA).
- ☐ Connect the grounding wire of the fixture with the one from the junction box. Secure together using a wire nut (AA).

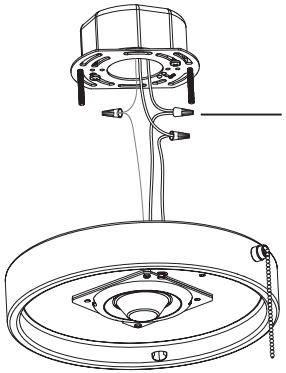


4 Mount the housing

□ Align the keyholes on the housing (C) with the mounting screws (B). Screw lock nuts (E) onto the pre-set mounting screws (B) to secure the housing.

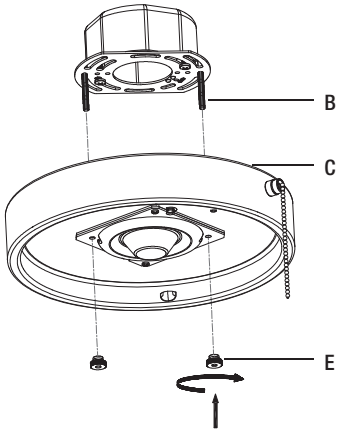


5 Install the shade

□ Align the slots on the shade (F) with the buckle point on the inside of the housing (C). Turn the shade (F) clockwise carefully and confirm it locks into place.

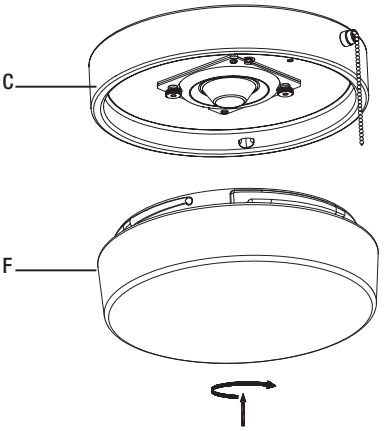


6 Turn on the light

□ Restore power to the junction box. Pull the chain (D) to activate the fixture.

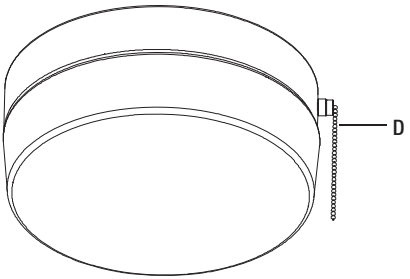

7 Extend the pull chain

□ If the pull chain (D) is not long enough, you can connect the pull cord (CC) to the pull chain (D). Insert the bead at the end of the pull chain (D) into the connector at the end of the pull cord (CC).

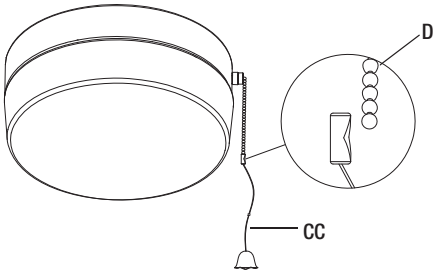

Care and Cleaning

- ☐ Clean the fixture with a soft, dry cloth.
- ☐ Do not use any cleaners with chemicals, solvents, or harsh abrasives.

WARNING: Shut off power at the circuit breaker or fuse panel before cleaning the fixture.

Troubleshooting

Problem	Possible Cause	Solution
The fixture will not light.	The power is off.	☐ Ensure the power supply is On.
	The circuit breaker is off.	☐ Ensure the circuit breaker is in the On position.
The fuse blows or the circuit breaker trips when the light is turned on.	The wires are crossed or the power wire is grounding out.	☐ Check the wire connections. ☐ Contact a qualified electrician or call the Customer Service Team at 1-800-841-1350.

Compatibility

FOR USE WITH DIMMER MODELS:
LUTRON: DVCL-153PR-WH, TGCL-153PH-WH, MACL-153MH-WH, P-PKG1W-WH-R, MSCL-OP153MH-WH, TG-600PR-WH, DV-600PR-WH, MS-OPS2MH-WH, PD-6WCL-WH-R, MACL-153MR-WH, MACL-153MH-LA, DVWCL-153PH-WH, CTCL-153PDH-IV, TGCL-153PR-WH, CTCL-153PR-WH, MRF2-6CL-WH, MRF2-6ND-120-WH, MACL-153M-WH, SCL-153P-WH, DVWCL-153PH-LA, DVF-103P-WH
LEVITON: R62-06674-P0W, C22-6672-1LW, LEVITON 6631, R08-TSL06-1KT, M02-DSL06-3PW
COOPER: AAL06-C1, SAL06P-LA-K
LEGRAND: HCL453PTCCCV6
For a complete list of compatible dimmers, please visit Homedepot.com

This LED Flush Mount is designed to be surface-mounted onto a 3 in./4 in. junction box. Junction box types, sizes, and site conditions vary. Ensure compatibility with the fit, wiring, and mounting.
Refer to the information below.

Recommended junction box type	Recommended distance between two keyholes
3 in.	2.75 in. /3.5 in.
4 in.	2.75 in. /3.5 in.

HAMPTON BAY®

Questions, problems, missing parts? Before returning to the store, call Hampton Bay Customer Service
8 a.m. – 7 p.m., EST, Monday – Friday, 9 a.m. – 6 p.m., EST, Saturday

1-800-841-1350
HAMPTONBAY.COM
Retain this manual for future use.

FCC compliance information is listed as below:
Responsible party: Leedarson America, Inc.
Responsible party address: 300 Technology Court SE Suite 100, Smyrna, GA 30082
Telephone number: (678) 293-8382