132*192MM

FRIGIDAIRE

EFR786-BLACK/EFR786-RED

REFRIGERATOR
use & care

Introduction 2
Important Safety Information 3
Name of the Parts 4
Important Safety Instructions 5-6
Installation Instructions 6-7
Operating The Refrigerator 8
Changing The Reversible Door 10
Care and Maintenance 11
Troubleshooting Guide 12-13
Limited Warranty 14
Product Specifications 15

USA/CANADA 1-800-968-9853 www.curtisint.com/frigidaire

2 INTRODUCTION

Welcome to our *family*

Thank you for bringing Frigidaire into your home! We see your purchase as the beginning of a long relationship together.

This manual is your resource for the use and care of your refrigerator. Read it before using your appliance. Keep it handy for future reference. If something doesn't seem right, the troubleshooting section will help you with common issues.

FAQs, helpful tips and videos, cleaning recommendations, and product registration are available at www.frigidaire.com.

We are here for you! Visit our website, www.curtisint.com/frigidaire, anytime for help. We may be able to help you avoid a service visit. If you do need service, we can get that started for you.

Installation Checklist

Doors
- ☐ Handles are secure and tight
- ☐ Doors seal completely for cabinet on cabinet

Leveling
- ☐ Refrigerator is level side-to-side and slightly elevated in front to avoid rubbing on floor (rear leveling legs should be higher than back)
- ☐ Cabinet is sitting solid on all corners

Electrical Power
- ☐ House power turned on
- ☐ Plug connected/plugged in

Final Checks
- ☐ Shipping material removed
- ☐ Fresh food and freezer compartments set

3 IMPORTANT SAFETY INFORMATION

WARNING

Please read all instructions before using this appliance.

Safety Definitions

This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

DANGER

DANGER indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.

WARNING

WARNING indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

CAUTION

CAUTION indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.

IMPORTANT

IMPORTANT indicates installation, operation or maintenance information which is important but not hazard-related.

Safety Instructions

- DO NOT store or use gasoline, or other flammable vapors and liquids in the vicinity of this or any other appliance. Read product labels for warnings regarding flammable contents.
- DO NOT operate the refrigerator in the presence of explosive fumes.

Failure to follow safety rules may cause fire, explosion, or carbon monoxide poisoning. Glass containers and aerosol cans may explode if placed in freezer.

4 NAMES OF THE PARTS

MODEL NO. EFR786-BLACK/EFR786-RED

(1)Freezer Door Top Hinge
(2)Adjustable Refrigerator Door Shelves:
A.Large Door Shelf (Top)
B.Egg Keeper (Fits into Shelf A)
C.Medium Door Shelf (Mid)
D.Small Door Shelf (Light)
E.Large Door Shelf (Bottom)
F.Bottom Door Bin
(3)Temperature Adjustment Control
(4)Refrigerator Compartment Interior Light Switch
(5)Refrigerator Compartment Shelves
(6)Ice Scraper
(7)Crisper
(8)Leveling Leg
(9)Freezer Compartment Metal Shelf
(10) Ice Cube Tray

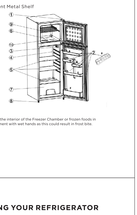

WARNING! Never touch the interior of the Freezer Chamber or frozen foods in the compartment with wet hands as this could result in frost bite.

5 IMPORTANT SAFETY INSTRUCTIONS

WARNING To reduce the risk of fire, electrical shock, or injury follow these basic precautions when using your refrigerator:

1) **WARNING** - Do not block any ventilation openings. Maintain a minimum of 5 inches (12.7cm) clearance on the top of the refrigerator. Do not use devices not designed for the Refrigerating only and is not designed to be recessed or built-in.
2) **WARNING** - Do not use mechanical devices, hot water, or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
3) **WARNING** - Do not damage or tamper with the refrigerant tubing as this will cause the risk of a leak, especially when handling, moving or using the refrigerator.
4) **WARNING** - Do not use electrical appliances inside the refrigerator or freezer compartments unless they are the type recommended by the manufacturer.
5) **WARNING-DANGER**: Never allow children to play with, operate or crawl inside the refrigerator. Do not let children climb on or hang on the refrigerator door.
6) Unplug this appliance prior to carrying out user maintenance.
7) This appliance can be used by children age 8 years and above, and persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, if they are supervised or have been provided with instruction concerning the use of the appliance. Cleaning and Maintenance should not be performed by children without adult supervision.
8) If any components/parts are damaged, they must be replaced by the manufacturer, its service agent or a qualified service technician in order to avoid hazards.
9) Please dispose of the refrigerator according to local regulations as the unit contains flammable refrigerant.
10) Refrigerant and insulation foam require the disposal of this appliance. All refrigeration products contain refrigerants, which under the guidelines of federal law must be removed prior to disposal. It is the consumer's responsibility to comply with federal and local regulations when disposing of this appliance.
11) This appliance is intended to be used in household and similar locations such as:
Staff kitchen/lunchroom areas in shops, offices and other work environments; Farmhouses; Hotels, Motels and other Residential type environments; Bed and breakfast and other residential lodging type environments;
Catering and similar non-retail applications.
12) Do not store or use gasoline or other flammable liquors or flammable liquids inside or in close proximity to the refrigerator.
13) Do not use an extension cord with this appliance due to increased risk of fire and electrical shock. Instead, a qualified electrical service technician must install an outlet near the appliance. The use of an extension cord can negatively affect the unit's performance.

WARNING CHOKING HAZARD

6 IMPORTANT SAFETY INSTRUCTIONS

WARNING! To reduce the risk of fire, electrical shock, or injury when using your refrigerator, follow these basic precautions:

- Read all instructions before using the refrigerator.
- Do not store explosives in the refrigerator.
- To avoid the possibility of food poisoning, observe the following precautions before throwing out the refrigerator:
  - Remove the door gasket.
  - Leave the shelves in place so that children may not easily climb inside.
- Never allow children to operate, play with, or crawl inside the refrigerator.
- Keep fingers out of the pinch points. Close supervision is necessary if children are in the vicinity of a refrigerator door in the process of disposal. It is the consumer's responsibility to comply with federal and local regulations when disposing of a refrigerator.
- Never clean refrigerator parts with flammable fluids. The fumes can create a fire hazard or explosion.
- Do not store or use gasoline or any other flammable vapors and liquids in the vicinity of this or any other refrigerator. The fumes can create a fire hazard or explosion.

Save these instructions.

INSTALLATION INSTRUCTIONS

Before Installation:
- Remove the exterior and interior packing.
- Do not connect the refrigerator to the power source, let it stand upright for approximately 4 hours. This will reduce the possibility of a malfunction in the cooling system from improper handling during transportation.
- Wipe the interior surfaces with lukewarm water using a soft cloth (Cleaning instruction on page 11)

Installation Your Refrigerator
- The appliance is designed to be free standing only, and should not be recessed or built-in.
- Place your refrigerator on a floor that is strong enough to support the refrigerator when it is fully loaded.
- Allow 5 inches of space between the back and sides of the refrigerator, which allows the proper air circulation. Failure to keep the refrigerator in a cool place will reduce the performance of the refrigerator. Do not place the refrigerator near heat sources (radiators, etc.). Direct sunlight may affect the acrylic coating and heat sources may increase electrical consumption. Place the refrigerator in a place where the ambient temperature is 55°F-90°F for optimum performance of this appliance. **This unit is not designed for use in a garage or any other outdoor installation.**
- Avoid installing the refrigerator in moist areas.
- Do not place the refrigerator into dedicated, properly installed/grounded wall outlet. Do not under any circumstances cut or remove the third (ground) prong from the power cord. Any questions concerning installation, or the grounding of the unit, should be referred to a qualified electrical service technician. **This unit is not designed to be installed in an RV or used with an inverter.**
- After plugging the appliance into a wall outlet, turn the unit on and allow the unit to cool down for 2-3 hours under before placing food in the refrigerator or freezer compartment.

7

Electrical Connection

WARNING! Improper use of the grounded plug can result in the risk of electrical shock. If the power cord is damaged, have it replaced by a qualified service technician.

This refrigerator should be properly grounded for your safety. The power cord of this refrigerator is equipped with a three-prong plug which mates with standard three prong wall receptacles to minimize possible electrical shock hazards.

Do not, under any circumstances, cut or remove the third ground prong from the power cord supplied.

Your refrigerator requires a standard 115/120 Volt A.C. ~60Hz electrical outlet with three-prong ground.

This refrigerator is not designed to be used with an inverter.

The cord should be secured behind the refrigerator and not left exposed or dangling where it can be damaged.

Never unplug the refrigerator by pulling the power cord. Always grip the plug firmly and pull straight out from the receptacle.

Do not use an extension cord with this appliance. If the power cord is too short, have a qualified electrician or service technician install an outlet near the appliance. Use of an extension cord can negatively affect the performance of the unit.

8 OPERATING YOUR REFRIGERATOR

Temperature Control

- Your refrigerator has one control for regulating the temperature. It is recommended that you set the control to the top center of the refrigerator compartment.
- The first time you turn the unit on, adjust the temperature control to the top center and allow it to run for at least 2 hours prior to putting food inside. This will ensure the cabinet is thoroughly chilled before you store food.
- The adjustment range of the temperature control is from 1 (warmest) to 5 (coldest).
- After the initial first time used temperature setting, remember to adjust the temperature control a few days after storing food in the refrigerator.
- The setting of "3" is appropriate for most household refrigerator settings.
- NB: Turning the temperature control knob to "0" stops the cooling cycle but does not shut off the power to the unit.

NOTE:
- If the unit is unplugged, lows power, you must wait 3 to 5 minutes before restarting the unit. If you attempt to restart immediately, the compressor will not run.
- Opening the door will lower the cooling efficiency of the appliance.
- Do not place the foods in the unit, and wait for the recommended storage time.
- If you choose to change the thermostat setting, adjust thermostat control by one level at a time. Allow several hours for temperature to stabilize.

Ice Trays

- Recommended temperature control setting for ice making is "5".
- Fill the ice cube tray (2/3 capacity) with cold water and place the tray on the freezer compartment.
- To twist the ice cubes from the tray, place over the ice bucket and twist gently.
- Be set the temperature control to setting "3".

The Freezer Compartment

- This compartment is designed for the long-term storage of frozen food.
- The storage life of frozen foods varies and the recommended storage time should not be exceeded.
- Do not place food into the freezer as quickly as possible after purchase. If there are instructions on the packet, carefully follow those instructions regarding storage times.

When To Defrost

This unit is not designed to defrost automatically. In order to prevent damage to the interior liner of the unit from excessive frost build-up, please manually defrost the unit when the frost build-up or when ice / frost is approximately 3/4 - thick inside the freezer compartment.

9

How To Defrost

Defrost the freezer compartment when the ice / frost are approximately ¼" thick or every month whichever is sooner. Do not allow the build-up of ice / frost to exceed ¼" contents from the freezer compartment. Leave the freezer door open to allow accumulated ice / frost to melt. Remove large pieces of ice as needed. Do not use hot water to speed up the defrosting process. Do not use sharp objects to remove the accumulated ice / water and wipe the freezer compartment dry with a soft cloth. Clean the interior of the freezer compartment with a mild solution of baking soda. Wipe all exposed surfaces behind the freezer wall to completely remove the accumulated ice / frost before restarting the unit. Restart the unit per starting instructions.

How To Change the Interior Light

NOTE: Save all parts you remove. For reinstallation (after replacing the failed interior light bulb). Before removing the light bulb, unplug the appliance from the power outlet. Wait for the bulb to cool before touching it to avoid shock or personal injury.

1) Remove the lamp cover by pressing it.
2) Unscrew the failed bulb from the lower hole in the thermostat control box.
3) Replace the failed bulb with a replacement of the same voltage, wattage, base size and thread type.
4) Replace the lamp cover.
5) Dispose of the failed bulb in an environmentally friendly manner.

10 CHANGING THE REVERSIBLE DOOR

CAUTION: To avoid personal injury to yourself and/or property, we recommend someone assist you during the door reversal process.

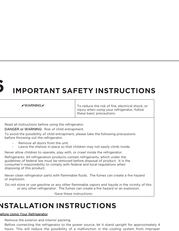

Your refrigerator is built with a reversible door. You have the choice of either opening it from the left or the right. If you need to reverse the opening direction of your door, please follow these simple instructions:

1) Disassemble all the reversible components in the sequence as shown below (also refer to left diagram above). Be sure to keep them well for later use in the reassembly.
(1)Sealing tap I
(2)Bottom hinge
(3)Sealing tap I
(4)Bottom hinge buffer block
(5)Sealing tape no hard bottom tape
(6)Door refrigerator section
(7)Door shaft
(8)Cd screw no hard mid hinge
(9) upper door right stopper
(10) door freezer section
(11) no hinge
(12) upper door hold top hinge
(13) Cover hinge cover
(14) Plug
(15) upper door left stopper

2) To access the bottom hinge assembly, you may lift back the refrigerator cabinet slightly off the floor.
3) Remove the upper door right stopper (9), install the upper door left stopper (15) on the opposite side, remove the door shaft (7) from the right side and insert it into the opposite side.
4) Reassemble the unit with the door hinges on the opposite side (see the right diagram above). Be sure to keep the door gaskets clean and free from any obstruction or disassembling.
5) With the mid hinge not being fastened too tight, align two doors properly on the cabinet and then fasten the mid hinge. If necessary, loosen the bottom hinge and the top hinge when aligning and then fasten them tight.

11 CARE AND MAINTENANCE

Cleaning Your Refrigerator
- Unplug the refrigerator or disconnect power before you commence it but it is cleaned thoroughly.
- Turn off the refrigerator first and then unplug the unit from the wall outlet.
- Remove all food products.
- Wash the inside with a damp cloth using a mild solution of baking soda solution. The solution should be about 2 tablespoons of baking soda to quart of water.
- Wipe the outside with a damp cloth and then a dry cloth to avoid streaks.
- The outside of the refrigerator should be cleaned with mild detergent and warm water.
- Dry the interior and exterior with a soft cloth.

Vacation Time
- Turn off the refrigerator first and then unplug the unit from the wall outlet.
- Remove all food products.
- Clean the refrigerator.
- Leave the door open slightly to avoid possible formation of condensation, mold or odor.
- Place a warning reminder where children will have access to the unit. The unit should not be accessible to child's play.
- Short vacations (Less than 3-4 weeks) - Leave the refrigerator operating normally.
- Long vacations (Over 3-4 weeks) - If the refrigerator will be unused for several months, remove all food and unplug the power cord. Clean and dry the interior thoroughly. To prevent odor and mold growth, leave the refrigerator and freezer compartments slightly open. Have someone check the refrigerator and freezer compartment periodically.

Moving Your Refrigerator
- Turn off the refrigerator first and then unplug the unit from the wall outlet.
- Remove all the food.
- Tape the door shut and close items inside your refrigerator.
- Tape the doors shut.
- Be sure the refrigerator stays in the upright position during transportation.

Energy Saving Tips
- The refrigerator should be located in the coolest area of the room, away from heat producing appliances or heating ducts, and out of the direct sunlight.
- Do not block the air flow around the refrigerator and the back of the refrigerator. Overloading the refrigerator forces the compressor to run longer. Frozen food items may lose quality or spoil.
- Allow room for wrap foods properly, and store containers dry before placing them in the refrigerator. This cuts down on frost build-up inside the refrigerator.
- Organize and label food to reduce door openings and extended searches. Remove as many items as needed at one time and close the door as soon as possible.

12 TROUBL ESHOOTING GUIDE

You can solve many common refrigerator problems easily, saving you the cost of a possible service call. Try the suggestions below to see if you can solve the problem before calling for service.

PROBLEM	POSSIBLE CAUSE
Refrigerator does not operate.	Not plugged in. Check power cord. Replace if damaged. Plug into a proper grounded outlet.
Compressor turns on and off frequently.	The room temperature is higher than normal. Place product in a cooler location. Food is too warm. Let warm food cool before placing in the refrigerator. The door is opened too often. Open door less frequently. The temperature control is not set correctly. The temperature control is set too cold. The refrigerator does not have the correct clearance. The refrigerator has recently been disconnected for a short period of time. It takes several hours for the refrigerator to cool down completely.
Temperature inside the refrigerator is too warm.	The temperature control setting is too warm. Turn the control to a colder setting and allow several hours for the temperature to stabilize. Door is open. Close door. Food is in the way and is blocking the door from closing. Place items in another location. The door is sealed. Clean the door gasket and the area it contacts. Food is too warm. Let warm food cool before placing in the refrigerator. The door is not closed completely. Make sure door is closed completely. The door has been opened too often or too long. Open door less frequently. The refrigerator is not level. Level the refrigerator. The door is sagging. Contact a service technician. Food has been stored too long or is spoiled. Discard spoiled food. The room temperature is too warm. Place the unit in a cooler location.
Temperature inside the refrigerator is too cold.	The temperature control setting is too cold. Turn the control to a warmer setting and allow several hours for the temperature to stabilize.
Temperature of external refrigerator surface is warm.	Normal condition. The area between the cabinet and the door may feel warm. Normal condition. Air circulation behind the refrigerator cabinet.
Popping or cracking sound when compressor comes on.	Normal condition. Metal expansion and contraction in the refrigerator cabinet. Normal condition. Wait at least 5 minutes and then try to restart the unit. If the circuit breaker or refrigerator continues to run.
Bubbling or gurgling sound, like water boiling.	Refrigerant used in your refrigerator is circulating throughout the system. This is normal.
Vibrations.	Unit is not level. Level the refrigerator. Floor is not strong enough. Reinforce floor as needed. Items on top of refrigerator. Remove items on the top. Floor where it is mount slightly. Be sure floor can adequately support refrigerator. Loose fan blades. Tighten screws on fan blades.

13

	refrigerator by pulling wood or metal shims under part of the refrigerator. Contact a carpenter or handyman. Unit touches other appliances or cabinets. Move the refrigerator and move it from the other appliance. See "Installation Instructions".
Moisture forms on inside refrigerator walls.	Weather is hot and humid, which causes more moisture inside the refrigerator. This is normal. Door is slightly open. Close door. Food is in the way. Place food in proper location. Door is not sealed properly. Clean door gasket. Door is not sealed properly.
Moisture forms on outside of refrigerator.	Door is slightly open. Leaving cold air from inside the refrigerator to meet warm moist air from the room. Close door.
The door will not close properly.	The refrigerator is not on a level surface. The gasket is dirty.

14 LIMITED WARRANTY

To make a warranty claim, do not return this product to the store. Please email support@curtisint.com or call 1-800-968-9853.

1.Year Warranty

This product is warranted to be free from defects in material and workmanship for a period of one year from the original date of retail purchase. During this period, proof of purchase remedy is repair or replacement of this product or component found to be defective, at our option, however, you must provide proof of purchase (such as a copy of your dated sales receipt). If the product or component is no longer available, we will replace with a similar one of equal or greater value. Prior to a replacement being sent, the product must be rendered inoperable or returned to us.

This warranty does not cover glass, filters, wear from normal use, use not in conformity with the printed instructions, or damage to the product resulting from accident, alterations, abuse, or misuse. This warranty extends only to the original purchaser of the product. It does not cover any product that is used as proof of purchase is required to make a warranty claim. This warranty is void if the product is used for other than single-family household use or subjected to any commercial use. Any exclusion other than as on the specified rating on the label (e.g., 120V -60Hz).

We exclude all claims for special, incidental, and consequential damages caused by breach of express or implied warranty. All liability is limited to the amount of the purchase price. Every implied warranty, including any statutory implied warranty of merchantability or fitness for a particular purpose, is limited to one year or the shortest period permitted by law, in which case such warranty or condition is limited to the duration of this written warranty. This warranty gives you specific legal rights, and you may also have other rights which vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental, or consequential damages, so the foregoing limitations may not apply to you.

For faster service, locate the model, type, and serial numbers on your appliance.

PRODUCT SPECIFICATIONS

MODEL NO.	EFR786-BLACK/EFR786-RED
CAPACITY OF FREEZER (CU.FT.)	2.6
CAPACITY OF FRESH FOOD (CU.FT.)	7.6
FUNCTIONS	TEMPERATURE
TEMPERATURE CONTROL TYPE	MECHANICAL
TEMPERATURE RANGE FREEZE (FAHRENHEIT AND CELSIUS)	36-50°F/2-10°C
TEMPERATURE RANGE FRESH FOOD (FAHRENHEIT AND CELSIUS)	36-50°F/2-10°C
DEFRO (INCLUDING HANDLE) (IN)	19.5
DEPTH (INCLUDING HANDLE) (IN)	20.8
DEPTH (WITHOUT DOOR) (IN)	18.9
DEPTH (INCLUDING OPEN DOOR) (IN)	40.0
HEIGHT TO TOP OF DOOR HINGE (IN)	35.83
HEIGHT TO TOP OF REFRIGERATOR (IN)	34.5
WEIGHT NET (LBS)	25.35
WEIGHT GROSS (KG)	28.65
PRODUCT HEIGHT (IN)	35.83

For service assistance and product information, please call: 1-800-968-9853.
Curtis International Ltd.
7045 BECKETT DRIVE, UNIT 15, MISSISSAUGA, ON, L5S 2A3 www.curtisint.com

DANGER: Risk of child entrapment. Before you throw away your old refrigerator or freezer:
* Take off the doors.
* Leave the shelves in place so that children may not easily climb inside.

CURTIS INTERNATIONAL LTD. Canada
CURTIS INTERNATIONAL LTD.
7045 BECKETT DRIVE, UNIT 15
MISSISSAUGA, ON
L5S 2A3

FRIGIDAIRE

EFR786-BLACK/EFR786-RED

RÉFRIGÉRATOR CONGÉLATEUR
utilisation & entretien

Introduction 2
Consignes De Sécurité Importantes 3
Nom Des Pièces 4
Directives De Sécurité Importantes 5-6
Installation De L'appareil 6-7
Utilisation De Votre Réfrigérateur 8-9
Changement De La Porte Réversible 10
Entretien 11
Guide De Dépannage 12-13
Garantie Limitée 14
Spécifications Du Produit 15

USA/Canada 1-800-968-9853 www.curtisint.com/frigidaire

2 INTRODUCTION

Bienvenue chez *nous*

Merci d'avoir amené Frigidaire dans la maison! Votre achat représente pour nous le début d'une longue relation ensemble.

Ce manuel est votre ressource pour l'utilisation et l'entretien de votre produit. Lisez-le avant de vous servir de votre appareil. Gardez-le à portée de main pour référence rapide. Si quelque chose ne semble pas correct, le dépannage section aidera à résoudre les problèmes courants.

FAQ, conseils et vidéos utiles, nettoyage produits et accessoires de cuisine et de maison sont disponibles sur www.frigidaire.com.

Nous sommes là pour vous! Visitez notre site internet, discutez avec un agent ou nous envoyer un e-mail à support@curtisint.com pourrons peut-être vous aider à éviter une visite de service. Si vous avez besoin de service, nous peut commencer cela pour vous.

Table de contrôle d'installation

Porte
- ☐ Les poignées sont scellées

Leveling
- ☐ La réfrigérateur est de niveau d'un côté à l'autre et légèrement élevé devant pour aider avec fermeture de porte et l'nor l'hacade devrait être plus haut que l'arrière
- ☐ Canaux coin du placard est solide.

Électricité
- ☐ Allumage électrique
- ☐ La réfrigérateur est alimenté.

Vérifications finales
- ☐ Matériel d'expédition retiré
- ☐ Réglage des températures des aliments frais et du congélateur

3 CONSIGNES DE SÉCURITÉ IMPORTANTES

AVERTISSEMENT

Please read all instructions before using this appliance.

Définition de sécurité

Ceci est le symbole d'alerte sécurité. Il est utilisé pour informer des dangers corporelles Respecter toutes les marques de sécurité qui suivent ce symbole pour éviter blessures ou des décès éventuel.

DANGER

Il n'est d'un danger imminent que, si il n'est pas évité, entraînera la mort ou des blessures graves.

AVERTISSEMENT

L'avertissement indique qu'une situation potentiellement dangereuse, si elle n'est pas évitée, peut entraîner la mort ou des blessures graves.

SOIS PRUDENT

Avertissez aux risques potentiels, évitez de causer des blessures légères ou modérées.

IMPORTANT

Des instructions importantes concernant l'installation, l'exploitation ou l'entretien de l'appareil, mais ne concernant pas les risques.

Sécurité des enfants

Une fois le réfrigérateur soustrait, les enfants doivent être informés des dangers d'entrapment. Les enfants doivent être surveillés pour s'assurer qu'ils ne deviennent pas pouvant vous ca ca certains dangers. Les enfants ne doivent pas jouer. Ceuxci en plastique ou d'emballages plastiques peuvent se transformer en sacs étouffants. Ne pas entraîner rapidement l'asphyxie.

Sécurité instructions

- Ne pas ranger ou utiliser de l'essence ou d'utiliser de l'essence ou d'autres liquides inflammables à proximité de cet appareil ou de tout autre matériel.Lire les avertissements sur l'inflammabilité et d'autres dangers sur l'étiquette du produit.
- Ne manipulez pas le réfrigérateur en cas de fumée explosive.
- Retirer tous les agrafes L'ou boîte de conserve, les bouteilles de verre d'autres appareils ou meubles, électriques, cela peut entraîner de graves coupures et endommager le revêtement.

4 NOM DES PIÈCES

NUMÉRO DU MODÈLE : EFR786-BLACK/EFR786-RED

(1) Charnière supérieure de la porte du congélateur
(2) Étagères de porte réglables :
A. Caddy de porte (en haut)
B. Gestionnaire d' œufs (Pour l'étagère a)
C. Caddy de porte moyenne (Mid)
D. Petit Caddy de porte (Light)
E. Grand Caddy de porte (Bas)
(3) Background Storage box
(4) Régulateur de température
(5) Interrupteur de l'éclairage du réfrigérateur
(6) étagère à réapparenté du réfrigérateur
(7) Machine à racler le glace Frigidaire
(8) Bac à légumes
(9) Support métallique de chambre congélateur
(10)Plateau de glace

MISE EN GARDE! Ne touchez jamais l'intérieur du Congélateur ni les aliments congelés situés à l'intérieur si vous avez les mains humides car cela pourrait entraîner une gelure.

5 DIRECTIVES DE SÉCURITÉ IMPORTANTES

AVERTISSEMENT Afin de minimiser les risques de blessures, de feu ou de choc électrique, lorsque vous utilisez votre réfrigérateur, suivez ces précautions élémentaires :

1) **AVERTISSEMENT** - Ne bloquez aucun orifice de ventilation.Maintenir au moins 5 pouces (8 cm) de jeu sur le dessus du réfrigérateur.Ne pas utiliser des appareils non recommandés par le fabricant.
2) **AVERTISSEMENT** - Pour hâter le processus de dégivrage, n'utilisez pas de dispositifs mécaniques, ni d'eau chaude ou d'autres moyens, autres que ceux recommandés par le fabricant.
3) **AVERTISSEMENT** - Ne pas endommager le circuit de réfrigérant, ni de tamper avec, en particulier lors du transport, du déplacement ou de l'utilisation du réfrigérateur.
4) **AVERTISSEMENT** - Ne pas utiliser des appareils électriques à l'intérieur des compartiments du réfrigérateur, sauf dans les cas recommandés par le fabricant.
5) **AVERTISSEMENT-DANGER** - Il est interdit aux enfants de jouer, de manœuvrer ou de grimper dans le réfrigérateur.Les enfants risquent d'être piégés et enfermés.
6) Avant d' effectuer l' entretien de l' utilisateur, Débrancher la fiche du dispositif.
7) Cet appareil peut être utilisé par des enfants âgés de 8 ans et plus et par des personnes ayant des capacités physiques, sensorielles ou mentales réduites ou qui manquent d'expérience et de connaissances, pouvant utiliser cet matériel à condition qu'elles aient été formées à l'utilisation de l'appareil de manière sûre et qu'elles utilisation.Les enfants ne peuvent pas être autorisés et entretenus sans un contrôle suffisant.
8) Si des composants sont pièce est endommagé, il doit être remplacé par le fabricant, son agent de service ou un technicien de maintenance qualifié pour éviter les risques.
9) Veuillez jeter le réfrigérateur conformé des réfrigérants informatiques, veuillez le mettre conformément à la loi fédérale.
10) Le réfrigérant et le matériau d'isolation nécessitent la mise hors de service. Tous les produits réfrigérants contiennent des réfrigérants qui doivent être éliminés conformément aux directives de la loi fédérale. Il incombe au consommateur soit tenu de se conformer à la législation fédérale et locale en ce qui concerne ce matériel.
11) Cet appareil est destiné à être utilisé dans des locaux domestiques et assimilés, tels que:
Dans les magasins, les bureaux et autres lieux de travail; les employés de maison; Les hôtels;
Les chambres dans les fermes et les hôtels, les motels, les résidences et les environnements résidentiels de type bed and breakfast;
Services de restauration et autres applications similaires.
12) Ne pas ranger ou utiliser de l'essence ou d'autres liquides et vapeurs inflammables dans le réfrigérateur ou à proximité de celui-ci.
13) La ligne de prolongation ne doit pas être utilisée avec ce matériel, car elle accroît le risque d'incendie ou de surtensiffs.Il le faire d' alimentation sur le trop-plein. Il est nécessaire de faire installer par un électricien qualifié un nouveau circuit à proximité de l'appareil. L'utilisation de la rallonge peut avoir un effet négatif sur les performances du dispositif.

WARNING CHOKING HAZARD

6 DIRECTIVES DE SÉCURITÉ IMPORTANTES

MISE EN GARDE! Afin de réduire le risque d'incendie, de choc électrique ou de blessure lorsque vous utilisez votre réfrigérateur, suivez les précautions élémentaires suivantes :

- Lisez la totalité des instructions avant de utiliser le réfrigérateur.
- **DANGER ou MISE EN GARDE:** Risque d'enfermement d'enfants
  - Retirez les portes du réfrigérateur. Laissez les étagères en place afin que les enfants ne puissent pas facilement grimper à l'intérieur.
- N'autorisez jamais quiconque à utiliser, jouer avec ou ramper à l'intérieur du réfrigérateur.
- Fluides Frigorifiques: Tous les produits de réfrigération contiennent des réfrigérants qui doivent être éliminés conformément aux directives de la loi fédérale avant l'élimination du produit. Il incombe au consommateur de se conformer aux règlements fédéraux et locaux lors de l'élimination de ce produit.
- Ne nettoyez jamais les pièces du réfrigérateur avec des fluides inflammables. Les vapeurs risquent de créer un risque d'incendie ou d'explosion.
- Ne conservez pas ou n'utilisez pas d'essence ni aucune autre émanations ni aucun liquide inflammable à proximité de ce réfrigérateur ou d'autre réfrigérateur. Les émanations pourraient créer risque d'incendie ou d'explosion.

-Conservez ces instructions-

INSTRUCTIONS POUR L'INSTALLATION

Avant d'utiliser votre réfrigérateur:
- Retirez l'emballage extérieur et intérieur.
- Avant de brancher le réfrigérateur sur la prise de courant, laissez le débout pendant environ 4 heures. Cela permettra de réduire les risques de panne du circuit de refroidissement dans le cas où le réfrigérateur aurait été incliné pendant le transport.
- Nettoyez la surface interne à l'eau tiède à l'aide d'un chiffon doux. (Voyez le nettoyage sur le nettoyage page 9)

Installation Votre Réfrigérateur
- Cet appareil est conçu pour fonctionner seul. Il ne devrait pas être encastré.
- Placez votre réfrigérateur sur un sol suffisamment résistant pour supporter son poids lorsqu'il est plein.
- Laissez un espace de 5 pouces entre l'arrière et les côtés du réfrigérateur afin de permettre une circulation d'air appropriée. Le non-respect de l'espace nécessaire à la ventilation ajoutée les poids pour maintenir le réfrigérateur à froid.
- Positionnez le réfrigérateur de sorte que celui-ci ne soit pas exposé à la lumière directe du soleil et à proximité de sources de chaleur (gazoniers, chauffeurs, radiateur, etc.). L'exposition à la lumière directe du soleil peut détériorer le revêtement acrylique et les sources de chaleur peuvent augmenter la consommation électrique du réfrigérateur. Une température ambiante inférieure à

7

55°F -90°F) lui assurera le (89°F -(29.4°C) aura une influence négative sur le performance de l'appareil. **Cet appareil n'est pas conçu pour une utilisation dans un garage ou tout autre extérieur installation.**
- Evitez de placer le réfrigérateur dans des lieux humides.
- Branchez le réfrigérateur sur une prise de courant raccordée à la terre dédiée et correctement installée. Ne coupez pas et ne retirez pas la troisième (terre) broche du cordon de la fiche du cordon d'alimentation. Toute question concernant l'alimentation en électricité et/ou le raccordement à la terre devrait être posée à un électricien certifié ou à un technicien de service qualifié. **Cet appareil n'est pas conçu pour être installé dans un véhicule de camping ou pour être utilisé avec un onduleur.**
- Après avoir branché l'appareil sur une prise de courant, allumez l'appareil et laissez-le refroidir pendant 2-3 heures avant de placer des aliments dans le congélateur ou dans le réfrigérateur.

Branchement électrique

MISE EN GARDE! Une utilisation incorrecte de la prise à trois broches peut entraîner un risque d'électrocution. Si le cordon d'alimentation est endommagé, faites-le remplacer par un technicien qualifié en réparation agréé.

Pour votre sécurité, ce réfrigérateur devrait être correctement raccordé à la terre. Le cordon d'alimentation de ce réfrigérateur est équipé d'une prise à trois broches qui est compatible avec les prises secteur à trois engins standard afin de réduire la possibilité de chocs électriques.

Ne coupez ou ne retirez jeux aucun prétexte la troisième ergot de la fiche du cordon d'alimentation fournis.

Ce réfrigérateur nécessite une prise de courant standard de 115/120 Volt A.C. ~60Hz compatible avec une fiche trinos engins recyclable très terre.

Ce réfrigérateur n'est pas conçu pour être utilisé avec un onduleur.

Le cordon d'alimentation devrait être en sécurité derrière le réfrigérateur et ne devrait pas être exposé ou suspendu pour éviter toute blessure accidentelle.

Ne débranchez jamais le réfrigérateur en tirant sur le cordon d'alimentation. Toujours saisir la prise fermement et la retirer droit de la prise de courant.

Ne coupez ou ne retirez aucun prétexte la troisième ergot de la fiche du cordon d'alimentation fournis.

Ne utilisez pas de rallonge avec cet appareil. Si le cordon d'alimentation est trop court, demandez à un électricien qualifié ou à un technicien d'entretien d'installer une prise de courant à proximité de l'appareil. L'utilisation de rallonge peut avoir un effet négatif sur le fonctionnement de l'appareil.

8 UTILISATION DE VOTRE RÉFRIGÉRATEUR

Commande de température

- Votre réfrigérateur a un dispositif de régulation de température. Il est recommandé de le régler au centre supérieur du Centre supérieur de la Chambre de réfrigération.
- Lorsque vous allumez pour la première fois, mettez le bouton de régulation de température au centre supérieur et laissez-le fonctionner pendant au moins 2 heures avant de placer des aliments à l'intérieur. Cela permettra à la machine de fonctionner correctement et de refroidir le réfrigérateur. Le réglage de la température de la chambre froide peut varier de la température ambiante à 1°F (pour permettre à la machine de fonctionner). Le réglage de la température de la chambre froide peut varier de la température ambiante à 1°F (pour permettre à la machine de fonctionner). Le réglage de la température de la chambre froide peut varier de la température ambiante à 1°F (pour permettre à la machine de fonctionner).
- Après les réglages de température initiaux (utilisés pour la première fois), assurez-vous de vérifier le réglage de la température de votre réfrigérateur pour vous convenient le mieux.
- "3" pour les réfrigérateurs résidentiels ou de bureau.
- Lorsque vous allumez pour la première fois, mettez le bouton de température à "3" permet d' activer le cycle de refroidissement sans coupure de l' alimentation du réfrigérateur.

REMARQUE :
- Si l'appareil est débranché ou en cas de coupure de courant, il faut attendre 3 à 5 minutes avant de le redémarrer. Si vous essayez de le redémarrer immédiatement, il ne sera pas en mesure de fonctionner.
- Ouvrir la porte réduit la capacité de refroidissement de l'appareil.
- Ne placez pas les aliments sur la zone d'air et disposez les aliments de manière à ne pas bloquer la circulation d'air.
- Si vous souhaitez modifier le réglage du thermostat, ajustez le bouton de contrôle du thermostat en le changeant d'un cran à la fois. Lorsque la température se stabilise pendant quelques heures suivant le changement de réglage.

Moule à glaçons
- Le réglage de température recommandée pour la fabrication de glace est "5".
- Le plateau de glace (2 cm capacité de 2 / 3) est rempli d' eau froide et placez le plate