
SECTION 9: PARTS

G0583Z Main Breakdown

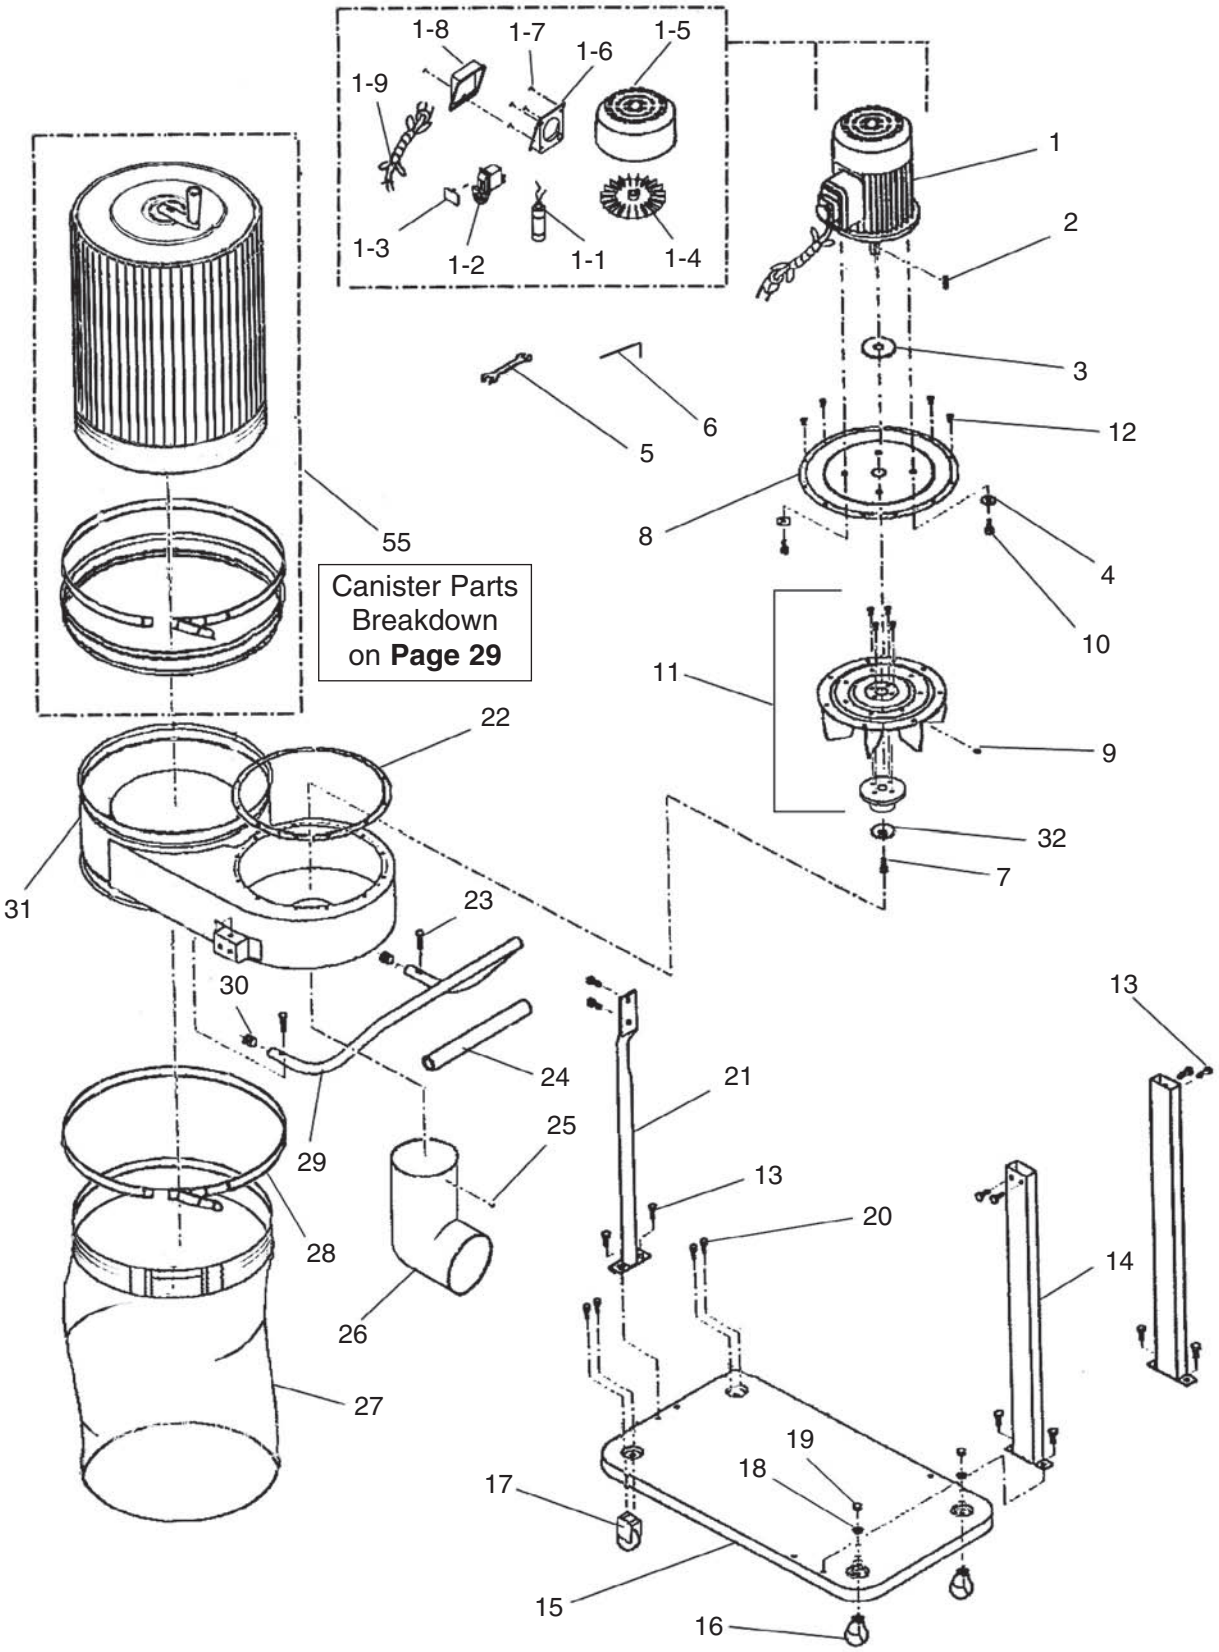


G0583Z Main Parts List

REF	PART #	DESCRIPTION
1	P0583Z001	MOTOR 1HP 110V/220V1-PH
1-1	PC030A	S. CAPACITOR 40M 250V 1-3/8 X 2-3/8
1-2	PSW06	SWITCH
1-3	PSW06-1	SWITCH KEY
1-4	P0583Z001-4	FAN
1-5	P0583Z001-5	FAN COVER
1-6	P0583Z001-6	SWITCH HOUSING
1-7	PFS03	FLANGE SCR 10-24 X 3/8"
1-8	P0583Z001-8	SWITCH COVER
1-9	P0583Z001-9	POWER CORD
2	PK01M	KEY 5 X 5 X 22
3	P0583Z003	SHAFT SEAL
4	PW06	FLAT WASHER 1/4"
5	PWR1012	WRENCH 10-12MM
6	PAW05M	HEX WRENCH 5MM
7	PSB02M	CAP SCREW M6-1 X 20
8	P0583Z008	INLET COVER
9	PSS17	SET SCREW 5/16"-18 X 5/16"
10	PB19	HEX BOLT 1/4"-20 X 1/2"
11	P0583Z011	IMPELLER ASSEMBLY10"
12	PS09M	PHLP HD SCR M5-8 X 10

REF	PART #	DESCRIPTION
13	PB09	HEX BOLT 5/16"-18 X 1/2"
14	P0583Z014	RECTANGLE SUPPORT LEG
15	P0583Z015	BASE
16	P0583Z016	SWIVEL CASTER
17	P0583Z017	FIXED CASTER
18	PW07	FLAT WASHER 5/16"
19	PN40	ACORN NUT 5/16"-18
20	PB04M	HEX BOLT M6-1.0 X 10
21	P0583Z021	ROUND SUPPORT LEG
22	P0583Z022	FOAM GASKET
23	PFH25	FLAT HD SCR 5/16"-18 X 1"
24	P0583Z024	FOAM HAND GRIP
25	PFS03	FLANGE SCR 10-24 X 3/8"
26	P0583Z026	ELBOW 4"
27	P0583Z027	DUST STORAGE BAG
28	P0583Z028	STORAGE BAG CLAMP
29	P0583Z029	HAND RAIL
30	P0583Z030	PLASTIC CAP 5/8"
31	P0583Z031	IMPELLER HOUSING
32	P0583Z032	CONCAVE WASHER 6MM
55	P0583Z055	CANISTER FILTER


Canister Filter Breakdown & List

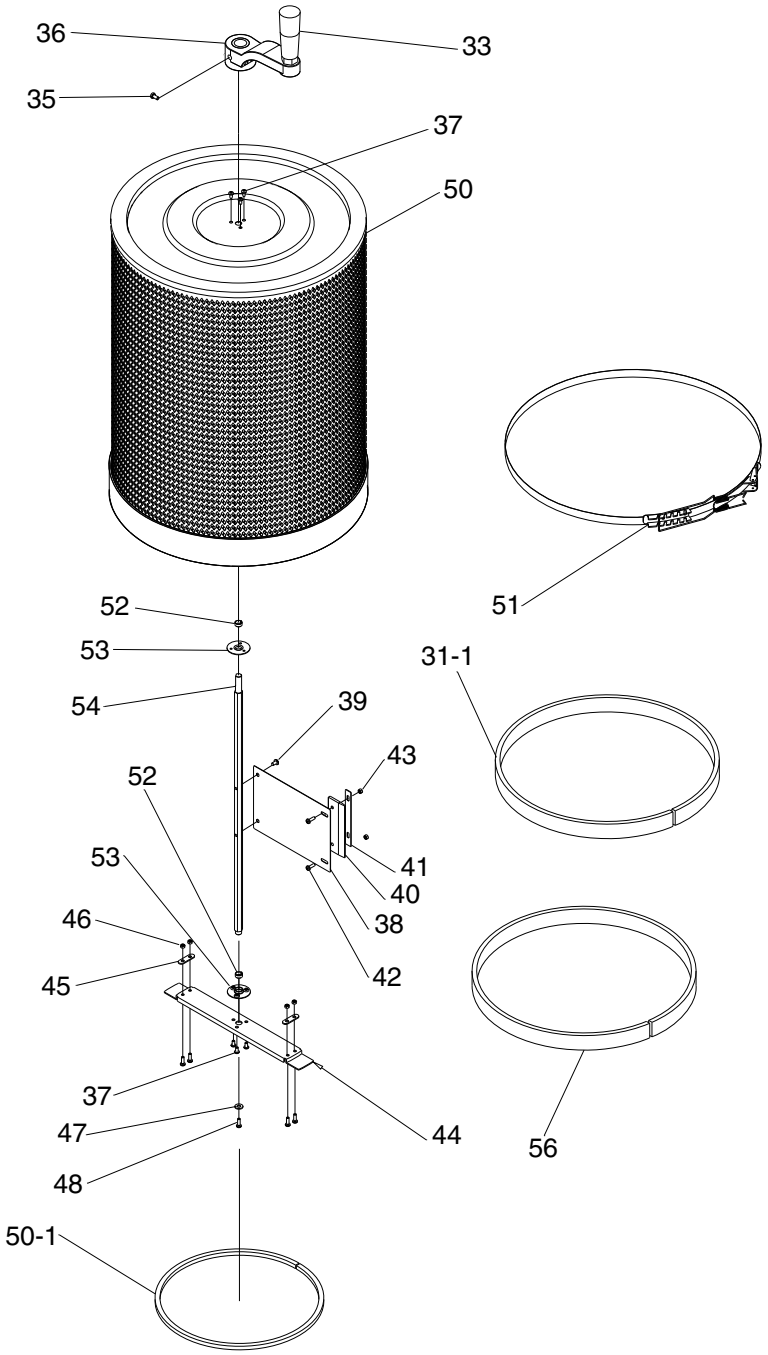

REF	PART #	DESCRIPTION
31-1	P0583Z031-1	FOAM STRIP 5 X 42MM
33	P0583Z033	HANDLE
35	PSS01M	SET SCREW M6-1 X 10
36	P0583Z036	HANDLE
37	PS09M	PHLP HD SCR M5-.8 X 10
38	P0583Z038	FLAP BOARD
39	PB04M	HEX BOLT M6-1 X 10
40	PH5783010	RUBBER FLAP
41	P0583Z041	FLAP PLATE
42	PS20M	PHLP HD SCR M5-.8 X 15
43	PLN02M	LOCK NUT M5-.8
44	P0583Z044	BOTTOM PLATE

REF	PART #	DESCRIPTION
45	P0583Z045	SUPPORT TAB
46	PN06M	HEX NUT M5-.8
47	PW06	FLAT WASHER 1/4
48	PS68M	PHLP HD SCR M6-1 X 10
50	P0583Z050	FILTER
50-1	P0583Z050-1	FOAM GASKET 10 X 15 MM
51	P0583Z051	METAL BELT CLAMP
52	PH5783005	THRUST BEARING
53	PH5783006	BEARING PLATE
54	P0583Z054	HEX SPINDLE
55	P0583Z055	CANISTER FILTER
56	P0583Z056	FOAM STRIP 4 X 20

G0583Z Labels Breakdown & List

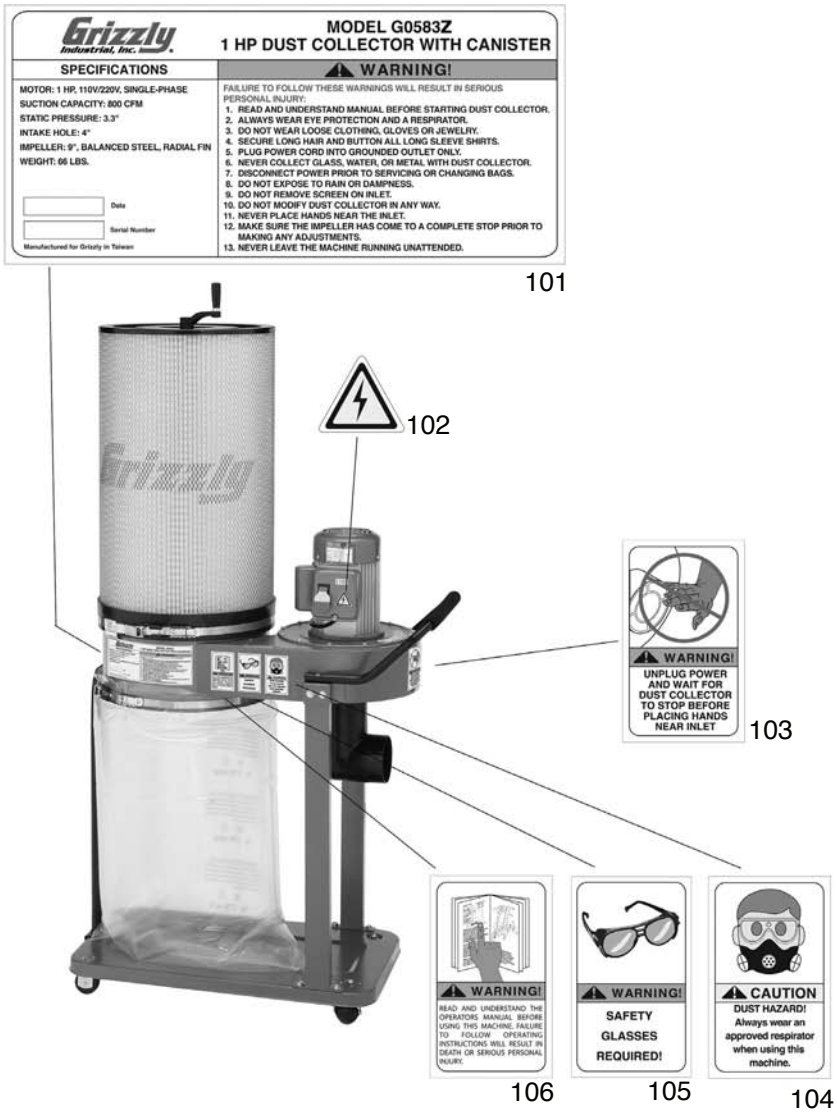

REF	PART #	DESCRIPTION
101	P0583Z101	MACHINE ID LABEL
102	PLABEL-14	ELECTRICITY LABEL
103	PLABEL-59	HANDS NEAR INLET LABEL

REF	PART #	DESCRIPTION
104	PLABEL-61	RESPIRATOR LABEL
105	PLABEL-11A	SAFETY GLASSES LABEL
106	PLABEL-12A	READ MANUAL LABEL

⚠WARNING

Safety labels warn about machine hazards and ways to prevent injury. The owner of this machine MUST maintain the original location and readability of the labels on the machine. If any label is removed or becomes unreadable, REPLACE that label before using the machine again. Contact Grizzly at (800) 523-4777 or www.grizzly.com to order new labels.