
Item # 1009941372
Model # 113A007CML

USE AND CARE GUIDE

GOODWIN SOFA

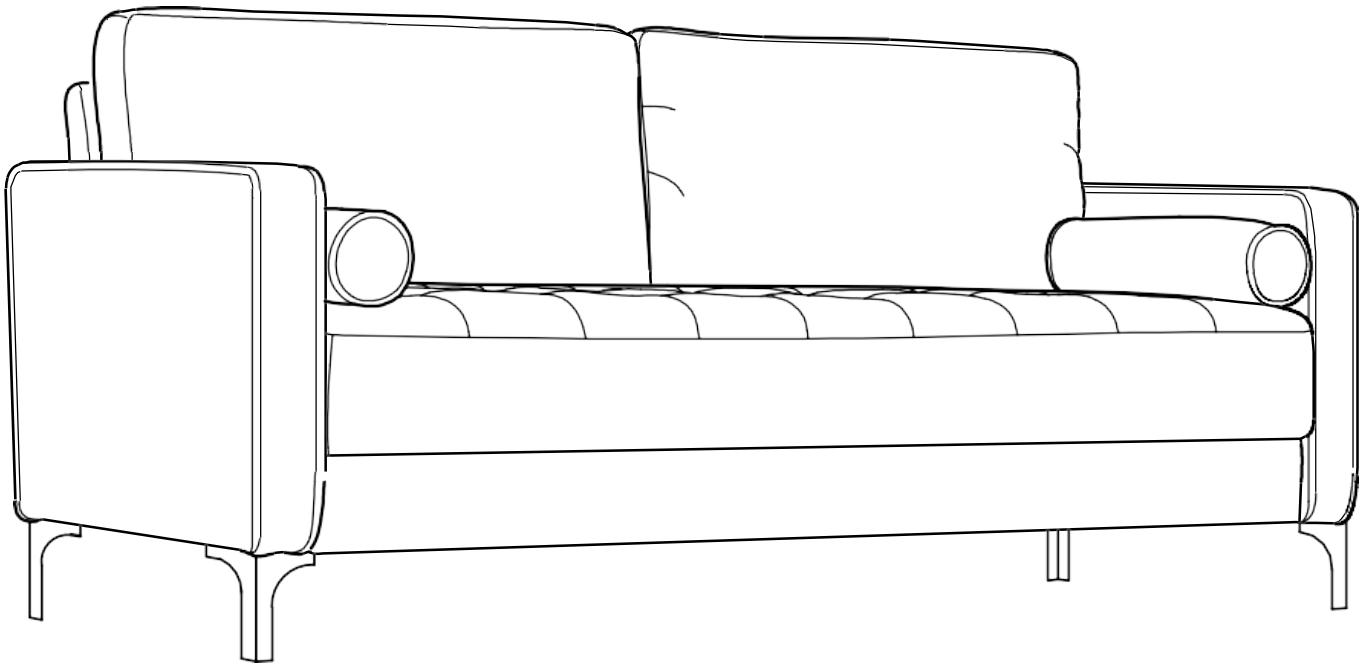

VIDEO INSTRUCTIONS.

THANK YOU

We appreciate the trust and confidence you have placed in our product through the purchase of this GOODWIN SOFA. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing GOODWIN SOFA!

Table of Contents

Table of Contents **2**
Safety Information **2**
Warranty **3**
1 Year Warranty 3
What is Covered 3
What is Not Covered 3
Pre-assembly **4**
Planning Assembly 4
Tools Required 4
Hardware Included 4
Pre-assembly (continued) **5**
Package Contents 5
Assembly – 1 ..... **6**
Assembly – 2 ..... **7**
Maintenance **8**
Care and Cleaning **8**
Troubleshooting **8**
Table 8

Safety Information

DANGER

- □ Keep small parts away from children during assembly.
- □ Read and follow instructions carefully.

WARNING

- □ Read these instructions carefully and keep in a safe place.
- □ TO GUARANTEE THE SAFE USE OF THIS PRODUCT, FOLLOW THE WARNINGS, GUIDELINES AND RECOMMENDATIONS IN THIS MANUAL.
- □ Adult assembly required. We recommend a team of 2 for handling and assembly.
- □ Small parts may present choking hazard prior to assembly.
- □ Do not stand, step or climb on unit.

CAUTION

- □ Do not use power tools to assemble your furniture. Power tools may strip or damage parts/product.
- □ Do not overtighten connectors (screws, bolts, etc.). Overtightening can lead to product damage.
- □ Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment. If parts are missing, contact THE HOME DEPOT to obtain any missing parts.
- □ DO NOT USE SUBSTITUTE PARTS.
- □ This product should only be used on a flat, level surface.
- □ Product is designed to hold on three average adults. Exceeding this limit may damage the product or cause injury to the user.
- □ This product is designed for home use and not intended for commercial use.

Warranty

1 YEAR WARRANTY

WHAT IS COVERED

We guarantee this product to be free of manufacturing defects to the original purchaser for one year from original date of purchase.

Our products carry a one-year limited warranty pursuant to the terms set forth herein. This warranty is valid only to the original purchaser with proof of purchase, and constitutes the original purchaser's sole and exclusive remedy. Pursuant to this warranty. We warrant that all products sold pursuant to this Agreement shall be free of any defects in parts and workmanship if used under normal operating conditions.

THIS IS THE ONLY WARRANTY MADE BY US. IT IS MADE EXPRESSLY IN LIEU OF ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE.

Should any parts or workmanship prove defective, we will, at our discretion, either repair or replace the product at no charge (parts only) to the original purchaser for the duration of the product's full warranty.

At all times, we reserve the right to substitute materials with that of a similar quality if the original material is not available. We will not be responsible for any freight charges incurred in repairing or replacing products.

WHAT IS NOT COVERED

This warranty does not cover commercial use, acts of nature, and abusive use.

WE DO NOT WARRANT DAMAGE DUE TO MISUSE OR NEGLECT. This remedy is the original purchaser's SOLE AND EXCLUSIVE REMEDY under the Contract of Sale, and in no event shall consequential damages be recovered by the original purchaser. This warranty gives you specific legal rights, and you may also have rights which vary from state to state.

Pre-assembly

PLANNING ASSEMBLY

Ensure you have all parts and hardware required before you start the assembly.

Placing all parts on a clean cloth is recommended to prevent damaging the parts.

Put all hardware or small part in one place to avoid you missing or losing them during assembly.

NOTE: You can prepare other tools or equipment that is deemed necessary besides those listed below.


TOOLS REQUIRED



Safety goggles




Gloves




Level

HARDWARE INCLUDED


NOTE: Hardware not shown to actual size.




AA



BB



CC





DD


Part	Description	Quantity
AA	Allen Wrench M4 x 30 x 70mm	1
BB	Bolt Ø 5/16" x 40mm	14
CC	Spring Washer Ø 5/16"	14
DD	Washer Ø 5/16" x 19mm	14


Pre-assembly (continued)


PACKAGE CONTENTS

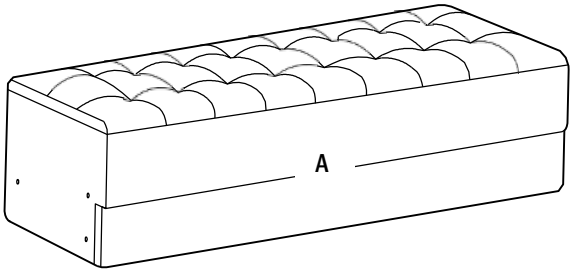


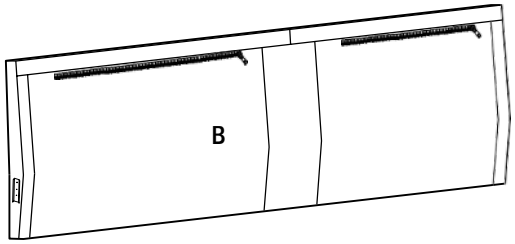


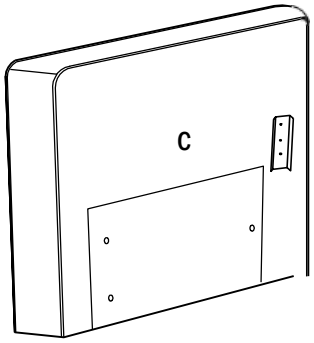

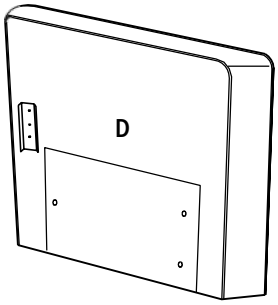

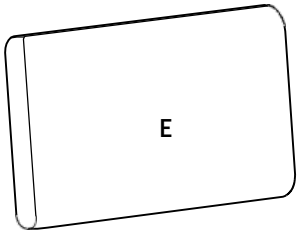

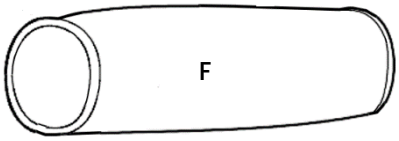

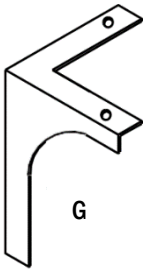


Part	Description	Quantity
A	Sofa Body	1
B	Backrest	1
C	Left Facing Arm	1
D	Right Facing Arm	1
E	Back Cushions	2
F	Decorative Pillow	2
G	Leg	4

Assembly

1 Attaching the backrest to the arm

- □ Prepare part B, C, and D.
- □ Aligned the bracket (part B), then pushed it into the arm bracket (parts C&D).


NOTE: Two people must do it simultaneously to ensure both sides of the bracket are perfectly attached.

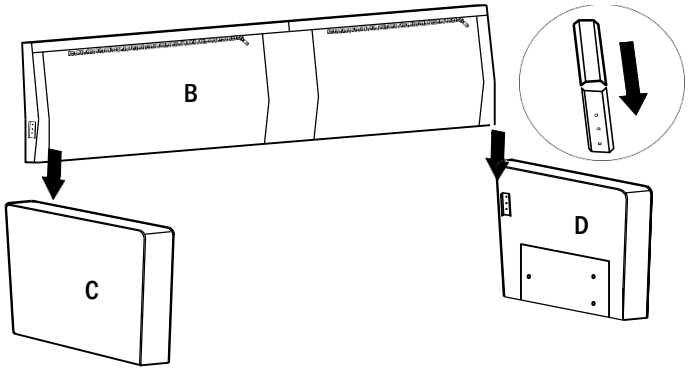

2 Fixing the sofa body

- □ Lay down the product as shown in the diagram on a clean surface cloth, ensuring no debris or anything that can damage the product.
- □ Carefully slide in the sofa body (part A) from beneath, then fix the hardware as shown.
- □ Close the compartment underneath the sofa body with the dust cover.


NOTE: This step is tricky, but ensure to align the hole before fixing the bolt to avoid breaking the hardware.

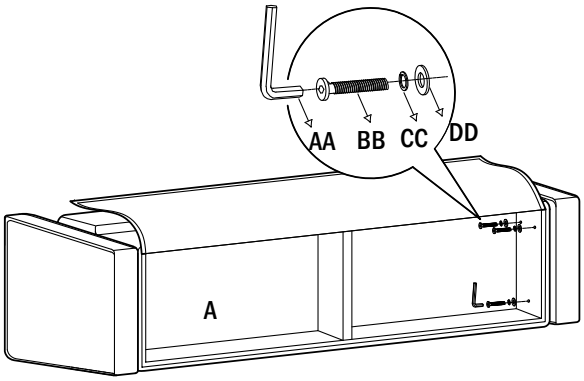

3 Fixing the metal legs

- □ Is recommended to wear gloves before attaching the legs.
- □ Fix all legs (part G) as shown.

NOTE: Carefully attaching the bolt can avoid scratching the surfaces leg finish.

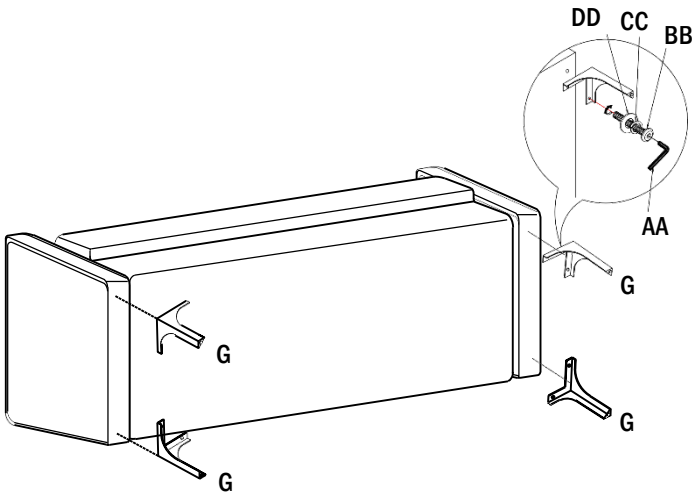


Assembly (continued)

4 Attaching the back cushions


- □ Prepare two pieces of the back cushion (part E)
- □ Secured the back cushions use the zipper provided as shown in the diagram.

NOTE: Ensure the zipper head is fully lock in before you zipped it up to avoid breaking the zipper.

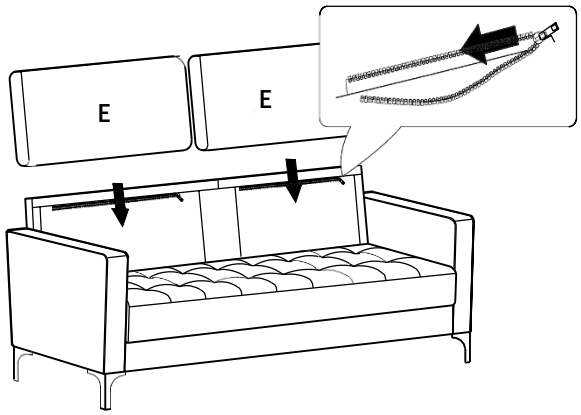

5 Decorative pillows

- □ Put the decorative pillows on the seat, left and right sides, as shown.

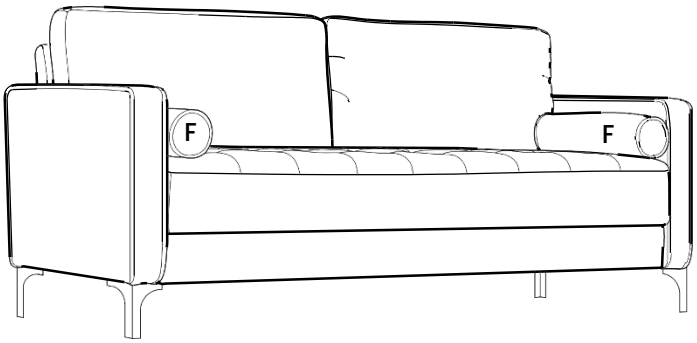

Maintenance

- To keep your GOODWIN SOFA looking its best, dust frequently and gently with a soft, non-abrasive cloth. Do not use harsh chemicals or abrasive cleaners as they can damage and ruin your sofa. Regularly vacuuming will reduce the amount of dust and debris in the fibers and keep your GOODWIN SOFA neat and clean. Therefore, prolong the life of your sofa by regularly vacuuming low suction. If pilling occurs, we recommend a simple battery-operated pilling tool to remove them.

Care and Cleaning

- Spot cleaning. Treat spills and stains as soon as possible. Gently scrape off any dirt or mop any liquid from the surface.
- Always apply cleaning agents to a clean cloth first, not directly to the surface of the fabric. This method will help prevent stains from funneling into the textures or patterns of the fabric.
- Use a water-based upholstery cleaner, then wipe with a slightly damp cloth and pat dry. For best results, consider cleaning entire fabric panels this way.
- Avoid heat. Do not place your GOODWIN SOFA near heating vents or heating items to avoid moisture buildup and possible burn marks and burns.
- Avoid direct sunlight. UV rays will fade any colored fabrics, so keep them out of direct sunlight whenever possible.

Troubleshooting

TABLE

Step	Problem	Possible reason	Solution
1	The back frame keeps falling.	The bracket is not fully lock-in.	Detach the back frame then fix it back. Push the arm inward a little bit so it can lock in perfectly.
2	Very hard to fix the bolt.	The hole between the seat and the arm is not aligned. There is debris that blocked the pre-hole.	Ensure the bolt thread is not broken; see if debris blocked the hole, then clean it up.
3	The sofa is jiggling.	The metal legs are not level.	Loosen the bolt underneath the seat. Place the level tool, then tighten the bolt back.