Instruction Manual

Sku#722576

Model:MELO616310THY

IMPORTANT: Please read this instruction carefully before assembly and save these instruction for future use.


WARNING - Risk of Fire and Electric Shock:

1. Read all instructions and warning tags included with this tree.
2. For Indoor Use Only.
3. Do not place near gas or electric heaters, radiators, fireplaces, candles, or other similar source of heat.
4. Place on a level, hard, flat surface; do not place where tree is likely to wobble due to uneven floors or thick carpeting.
5. Do not use candles on tree.
6. After assembling the tree and adding decorations, make sure the tree is stable. If tree is not stable, shift the weight of the decorations, and use support wires to walls and/or window frames (make sure they are secure also).
7. Do not overload extension cords or power strips, see ratings on those devices and check the rating label of the tree for compatibility.
8. Do not install near fountains, bathtubs, sinks, or other wet areas.
9. Insert lighting string plugs fully into extension and extension cord plug fully into its receptacle.

Assembly Instructions

1. Before you start to assemble your tree, choose a location near a wall outlet. Assemble the tree stand and place on a level surface.


2. Pull apart the legs of the stand so that they are “X” shaped. Lock the stand in position with the single eye bolt on the outside metal tab.

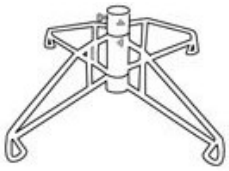

3. Screw three eye bolts through the hole on the inside metal tab.

4. Carefully insert the bottom section (C) of the tree into the assembled stand. Make sure the pole is firmly inserted into stand and turn screws so they touch tree trunk. Stand tree up and straighten by adjusting screws in or out then tighten screws.


5. Insert section (B) into the bottom section (C), insert section (A) into section (B).

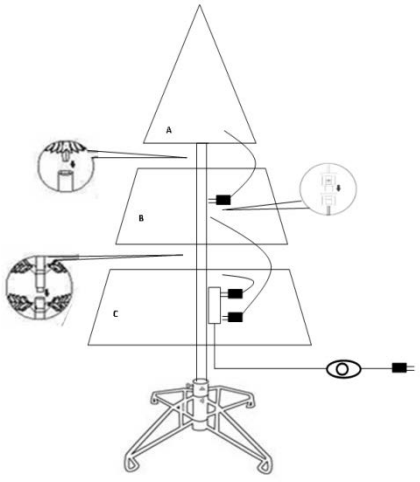

6. Allow branches to fall into place or gently pull up and out. When adjusting branches be sure that all wires are free of branch hinges.

7. Connect the plug(s) securely to the extension cord as shown above. Plug the extension cord into the wall outlet. Turn on the lights by tapping on the foot pedal ON/OFF switch. Your entire tree should now be lit. If some bulbs do not light, search for any loose plugs, broken, loose or missing bulbs. (See trouble shooting section on next page). Keep tree plugged in while shaping your tree. Should a light flicker while doing this, check for the bulb(s) that may have caused the trouble.

8. Begin to shape the branches working from the bottom to the top. Start with tips farthest from the pole, one to the right, one to the left and one at the center of the main stem.

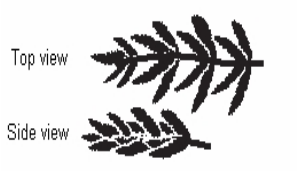

9. After shaping the whole tree, step back and take an overall look. Shift branches to fill any gaps. Slightly upsweep all branch tips for a uniform look. Your tree is now ready to decorate and enjoy.

SAVE THESE INSTRUCTIONS

Storage:

1. Unplug extension cord from the wall outlet and remove all ornaments and decorations.
2. Unplug each section from extension cord, keep each stack of lights connected together.
3. Gently lift off the top and middle sections, and remove the bottom section from the tree stand. Carefully place the tree in its box and tape it shut. DO NOT STORE TREE IN A DAMP AREA OR IN AN AREA WHERE THE TEMPERATURE EXCEEDS 100°F.


Trouble Shooting Instructions

If lights do not work:


1. Check whether the extension cord is properly plugged into the outlet.
2. Be sure there is power to the outlet.
3. Check whether all plugs within the tree are securely connected.
4. Check whether all bulbs are tightly fixed inside the lamp holder.
5. If bulb is blown, replace the faulty bulb following the below diagram. There are spare bulbs included for easy replacement.



6. If none of the lights are working, check the fuse in light string. If the fuse is blown, replace the blown fuse following the below diagram. There is a spare fuse included for easy replacement.

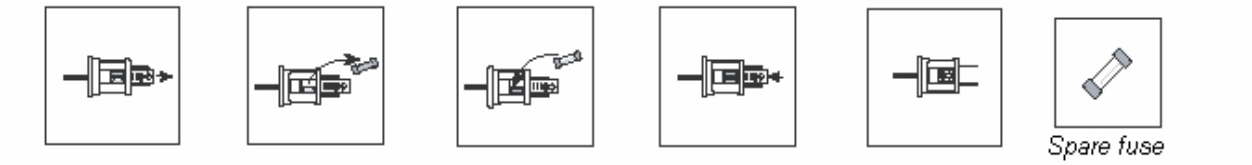

7. If none of the lights are working, check the fuse in extension cord. If the fuse is blown, replace the blown fuse following the below diagram. There is a spare fuse included for easy replacement.

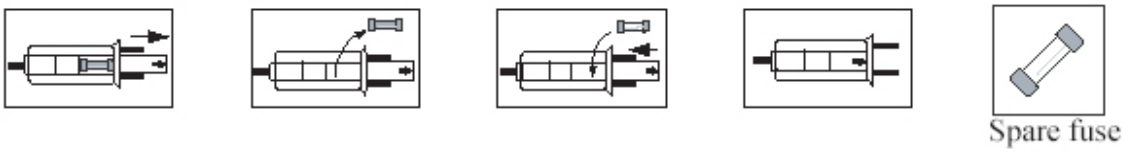

Note: For festive use only, not intended for consecutive use over 90 days each season.