



ASSEMBLY INSTRUCTIONS (CONTINUED)

STEP 4

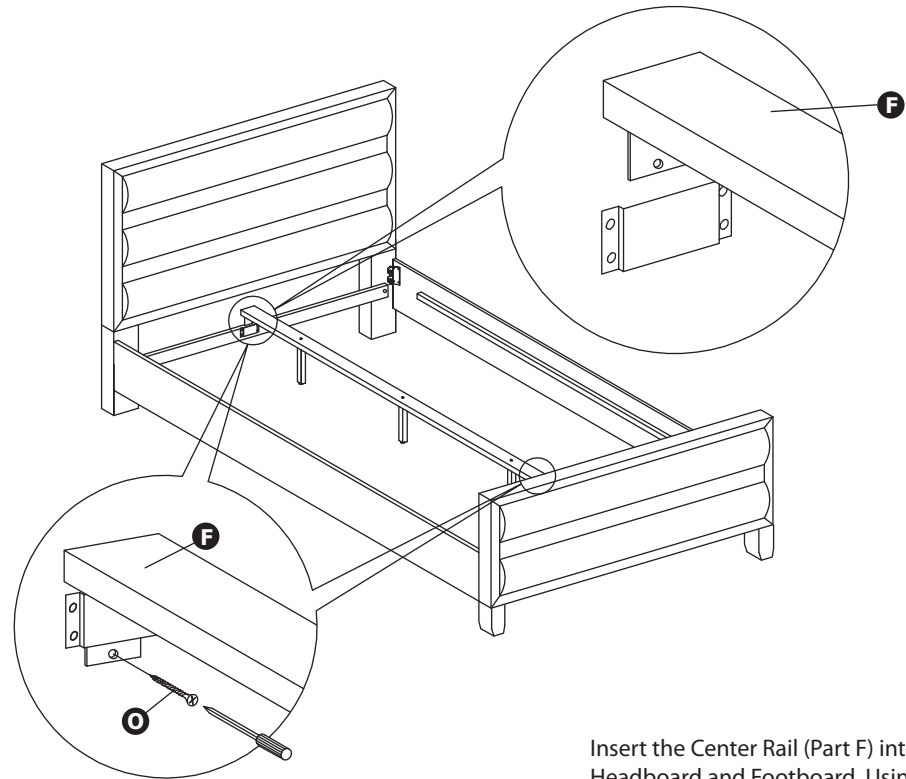


Insert the Center Rail (Part F) into the brackets on the Headboard and Footboard. Using a screwdriver, secure the center rail using two 16mm Screws (Part O).

STEP 5

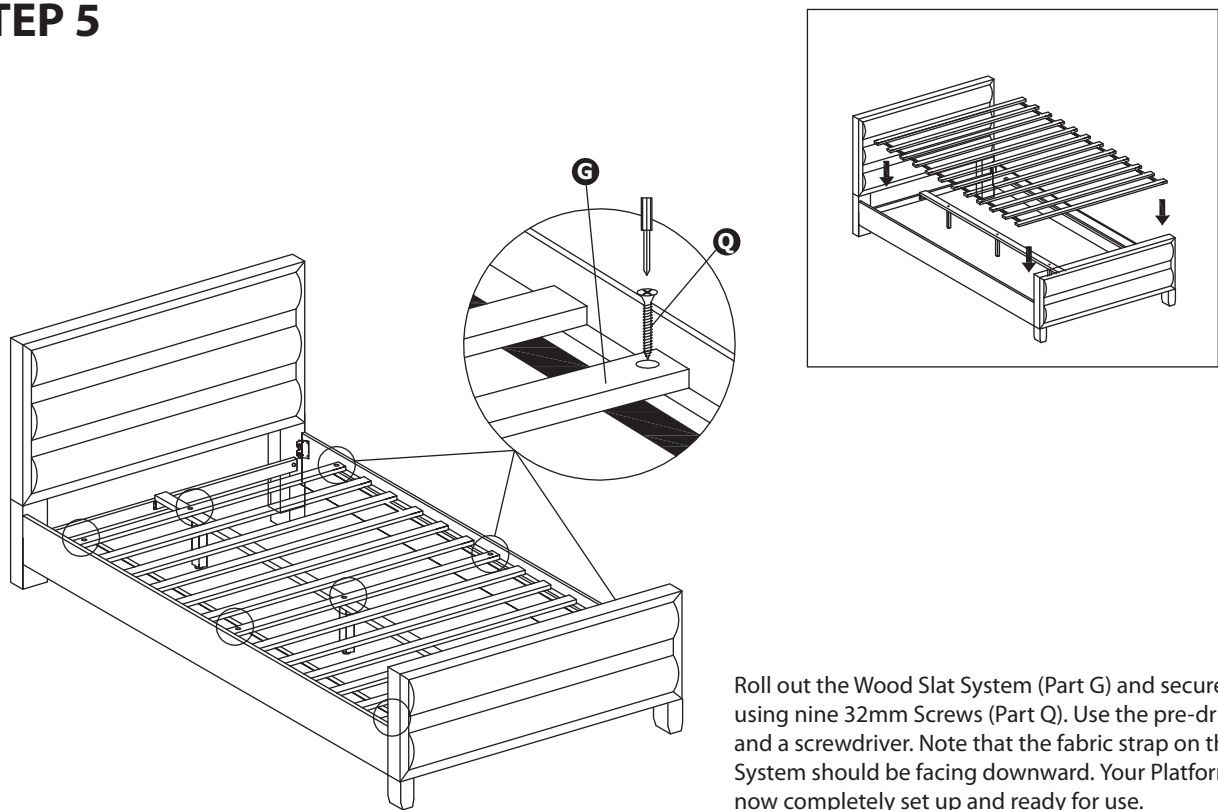

Roll out the Wood Slat System (Part G) and secure it in place using nine 32mm Screws (Part Q). Use the pre-drilled holes and a screwdriver. Note that the fabric strap on the Slat System should be facing downward. Your Platform Bed is now completely set up and ready for use.

Platform Bed
Assembly Instructions
Contains One Bed and Hardware

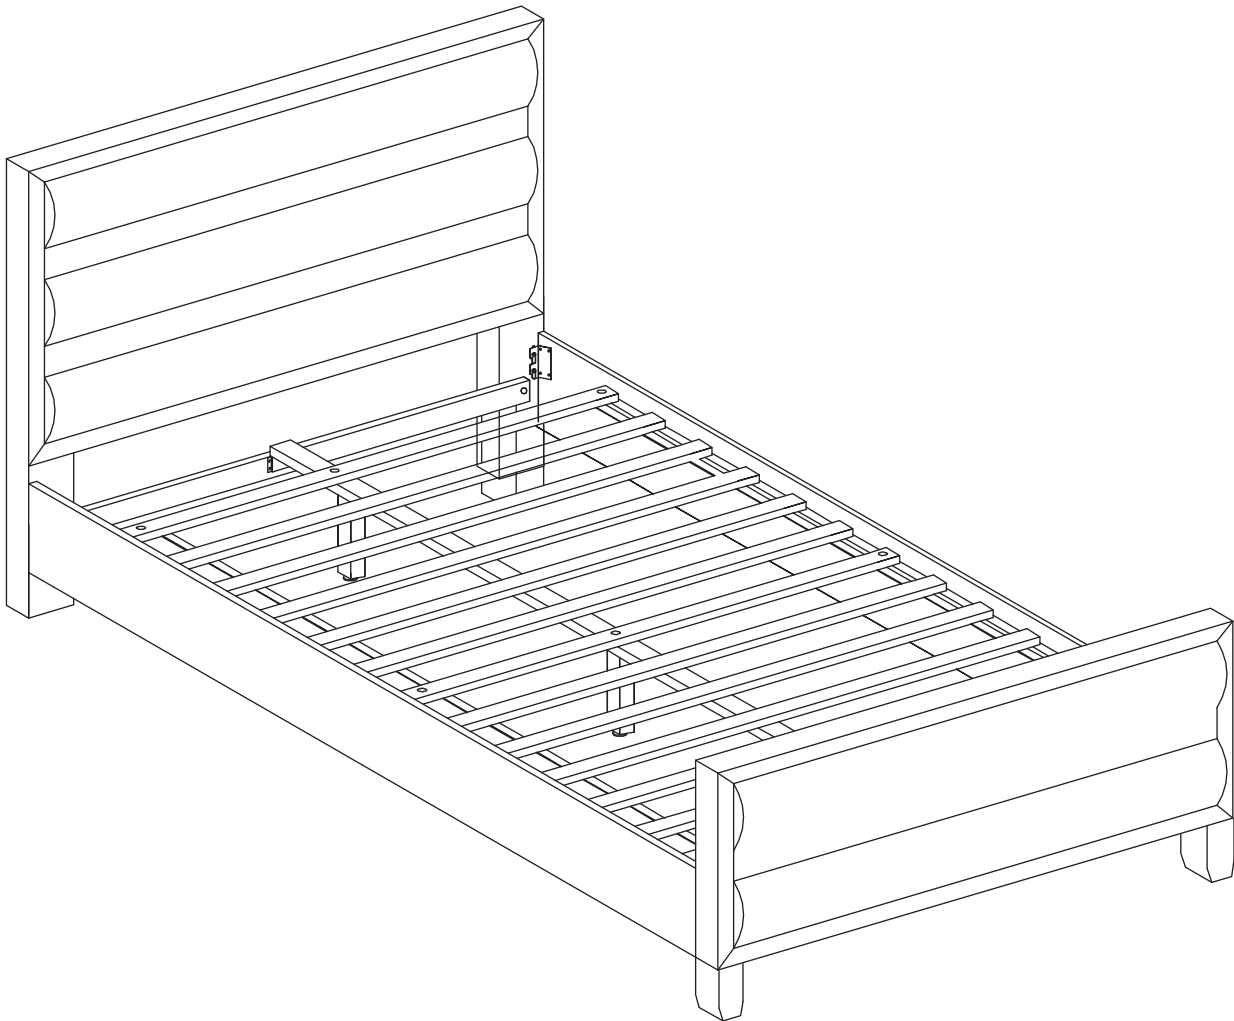


IMPORTANT NOTE:
Carefully remove all the parts from the box. Arrange on a flat surface and verify you have all of the following parts and hardware.


TOOLS REQUIRED:
Phillips Screwdriver

PARTS LIST


A. Headboard (1 pc)

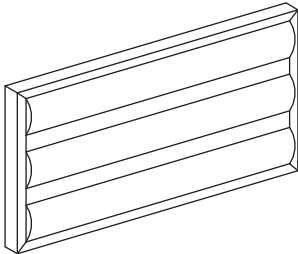


B. Footboard (1 pc)

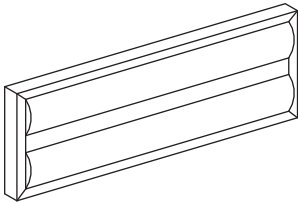


C. Side Rail (2 pcs)

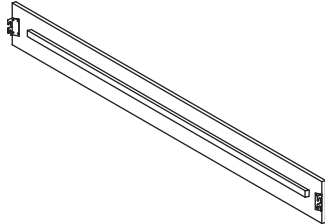


D. Headboard Leg (2 pcs)

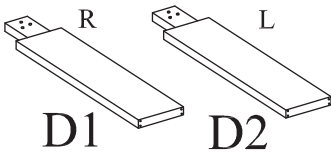


E. Footboard Leg (2 pcs)



F. Center Rail (1 pc)

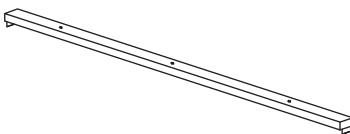


G. Wood Slat System (1 pc)

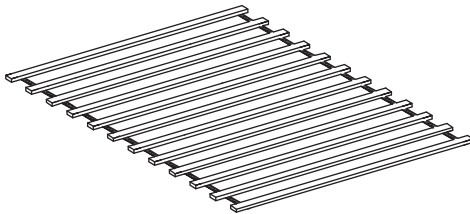

H. Center Leg (3 pcs)




I. Support Bar (1 pc)

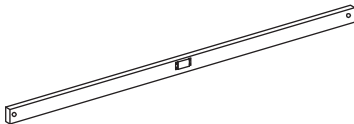

HARDWARE LIST


J. 40mm Bolt
(15 pcs)



K. Spring Washer
(10 pcs)



L. Flat Washer
(10 pcs)



M. Small Hex Key
(1 pc)



N. Large Hex Key
(1 pc)




O. 16mm Screw
(2 pcs)




P. 25mm Screw
(12 pcs)



Q. 32mm Screw
(9 pcs)




R. L-Bracket
(2 pcs)




ASSEMBLY INSTRUCTIONS

STEP 1

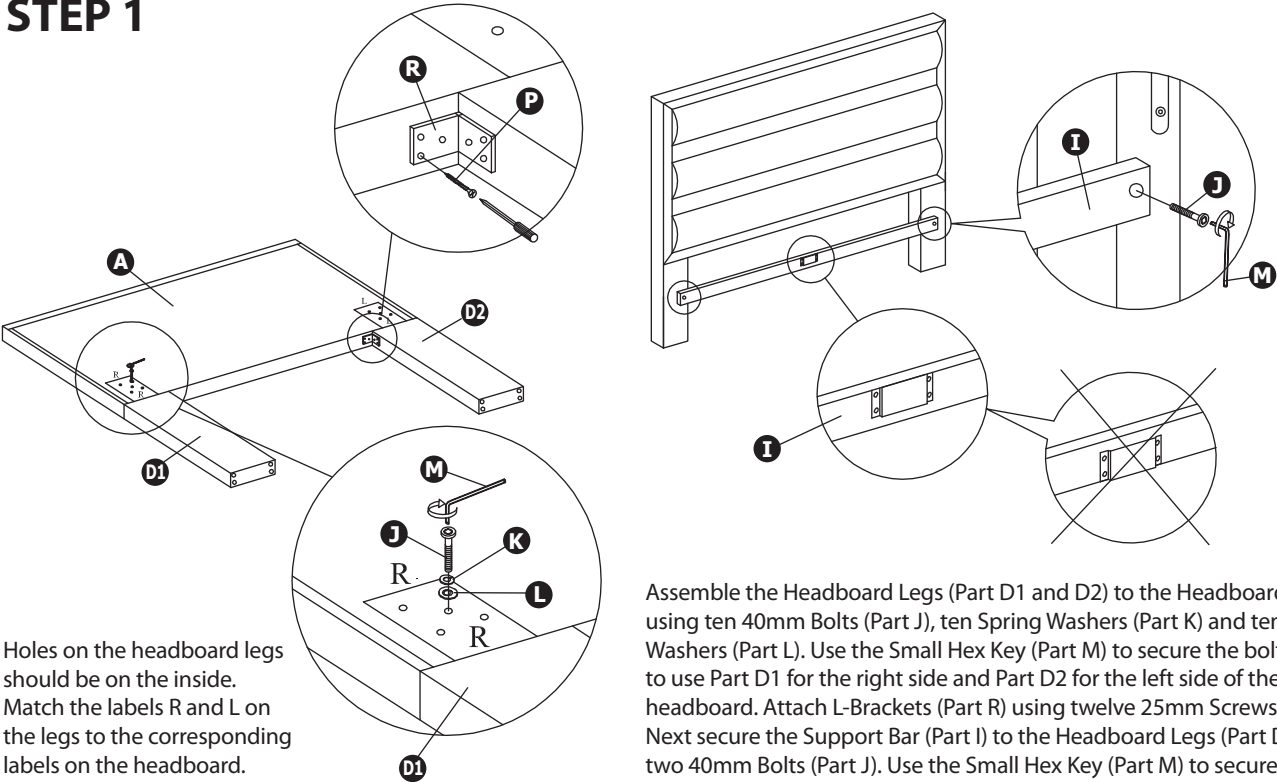


Assemble the Headboard Legs (Part D1 and D2) to the Headboard (Part A) using ten 40mm Bolts (Part J), ten Spring Washers (Part K) and ten Flat Washers (Part L). Use the Small Hex Key (Part M) to secure the bolts. Be sure to use Part D1 for the right side and Part D2 for the left side of the headboard. Attach L-Brackets (Part R) using twelve 25mm Screws (Part P). Next secure the Support Bar (Part I) to the Headboard Legs (Part D) using two 40mm Bolts (Part J). Use the Small Hex Key (Part M) to secure the bolts.

STEP 2

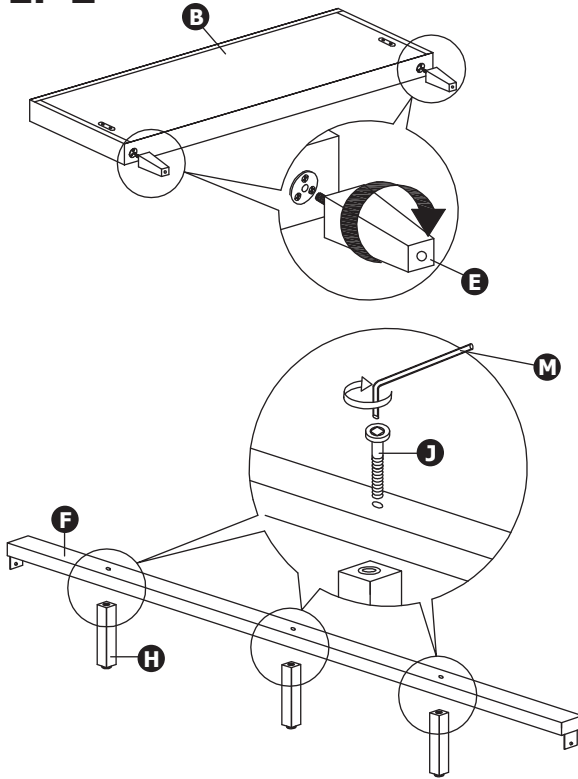

Secure the Footboard Legs (Part E) into the Footboard (Part B) by turning the Legs clockwise until tight. Attach the Center Legs (Part H) to the Center Rail (Part F) using three 40mm Bolts (Part J). Secure the bolts using the Small Hex Key (Part M).

STEP 3

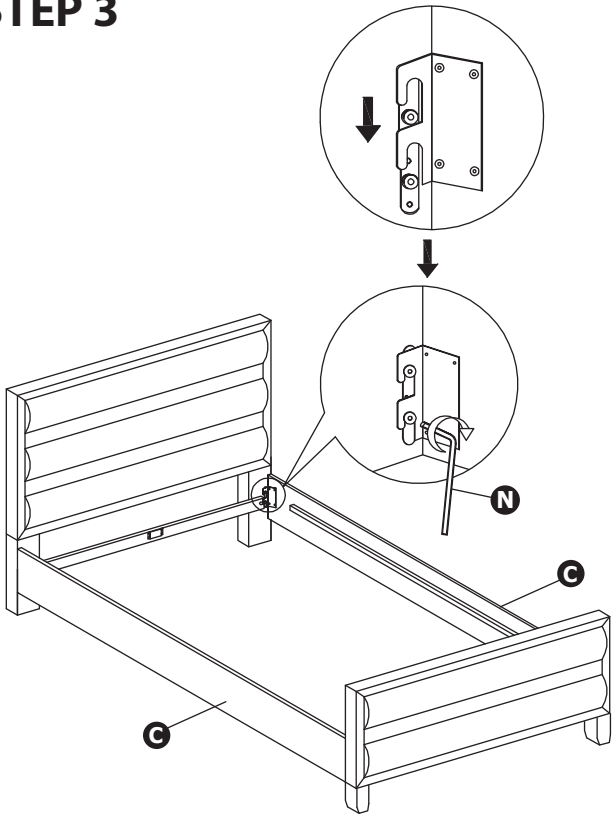

Attach the siderails (Part C) to the Headboard (Part A) and the Footboard (Part B) by hanging the siderails onto the pre-attached bolts on the Headboard and Footboard. Tighten the bolts using the Large Hex Key (Part N).