



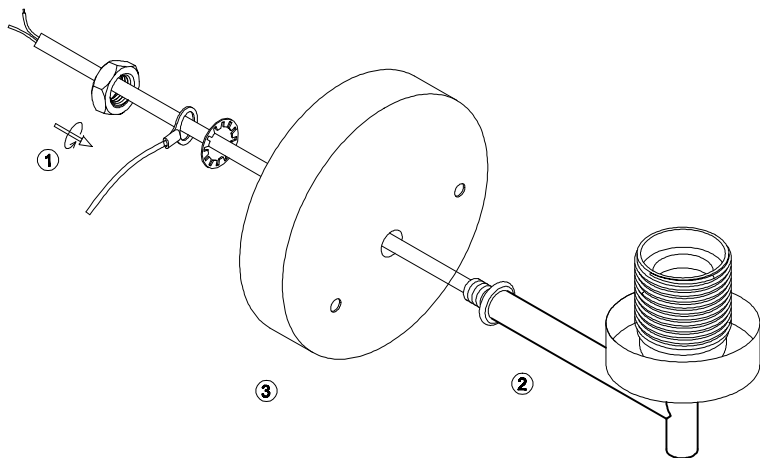

1. Install the arm 2 on the canopy with lock nut and teeth lock washer 1.
(ground line is between the teeth lock washer and lock nut)

Please read carefully before installation!!!

**Note : Please make sure that the electricity is powered off during installation !
Only a professional electrician should install this kind of product !**

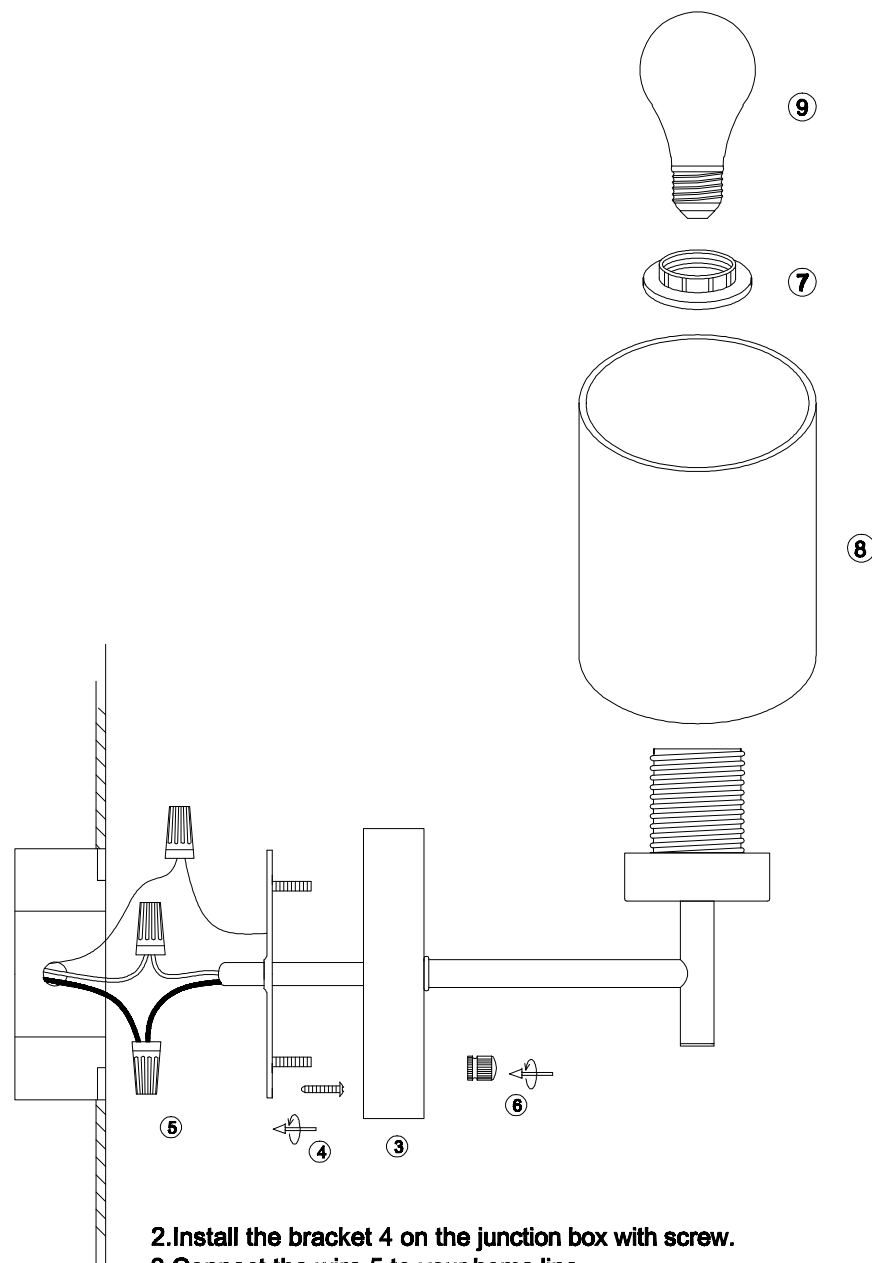

2. Install the bracket 4 on the junction box with screw.

3. Connect the wire 5 to your home line.

4. Install the fixture on the bracket with cap nut 6.

5. Install the glass lampshade on the bulbholder with ring 7,
and install the bulb 9.