



INSTALLATION INSTRUCTIONS FOR DUMMY LEVER AMDT

1. MARK DOOR

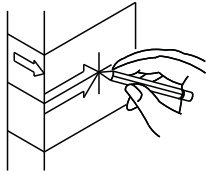

Fold template on door edge and select 2-3/8" or 2-3/4" backset. Measure 38" from floor or any suitable height.

2. INSTALL LEVER

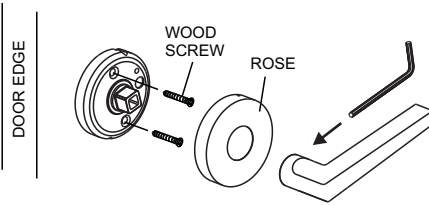

Tighten 2 wood screws securely through holes on rose.

Fit here on door edge

TEMPLATE FOR DUMMY LEVER

Backset 70mm (2-3/4")

Backset 60mm (2-3/8")