
INSTRUCTION Adjustable 4 Rail Panel System

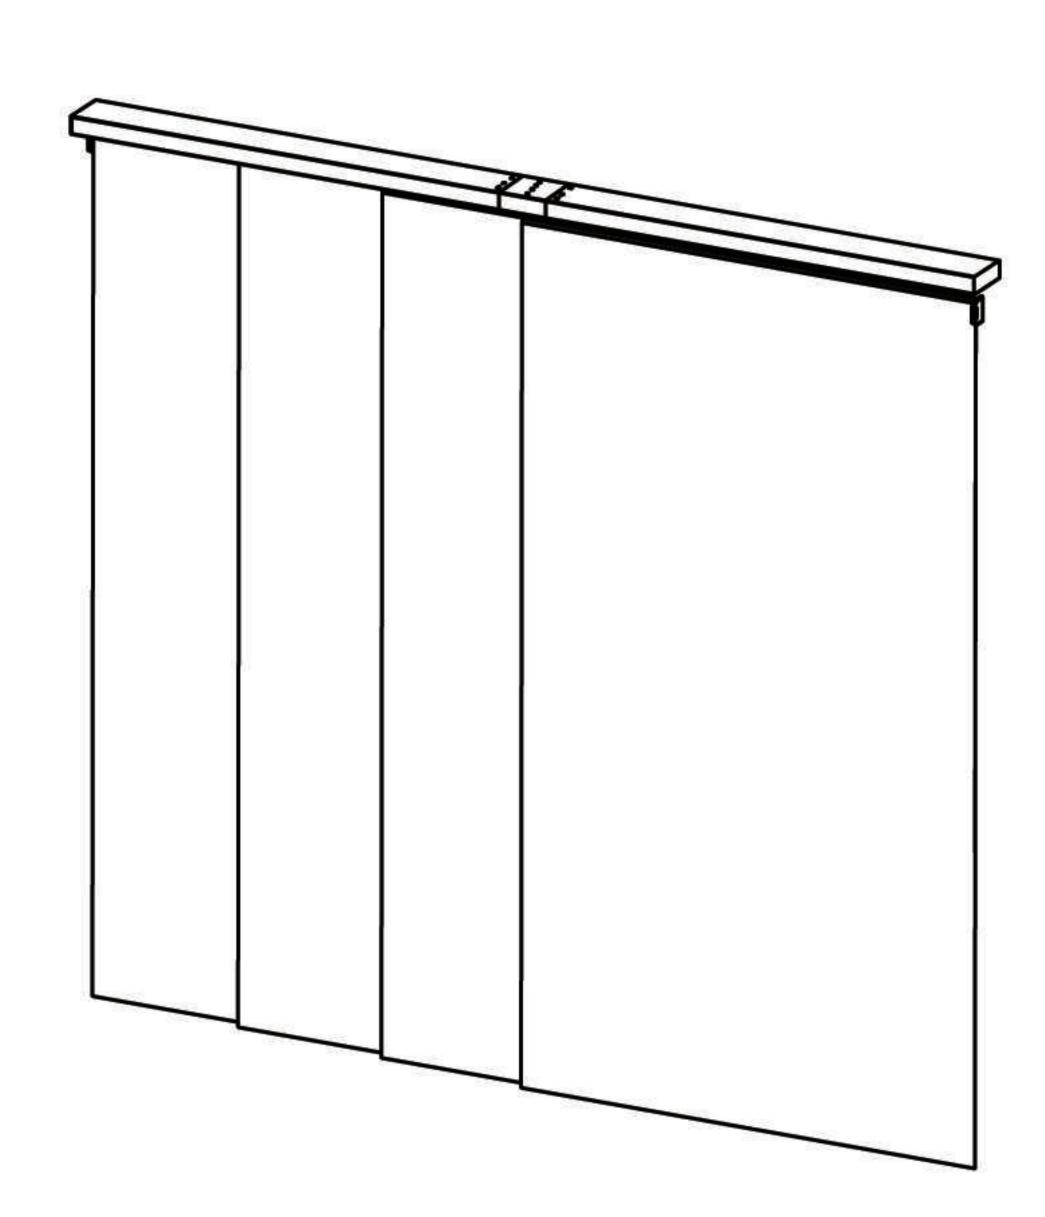






Please check all pieces before the installation.


If there are missing or defective parts, kindly contact GoDear Design directly for further help.

Parts

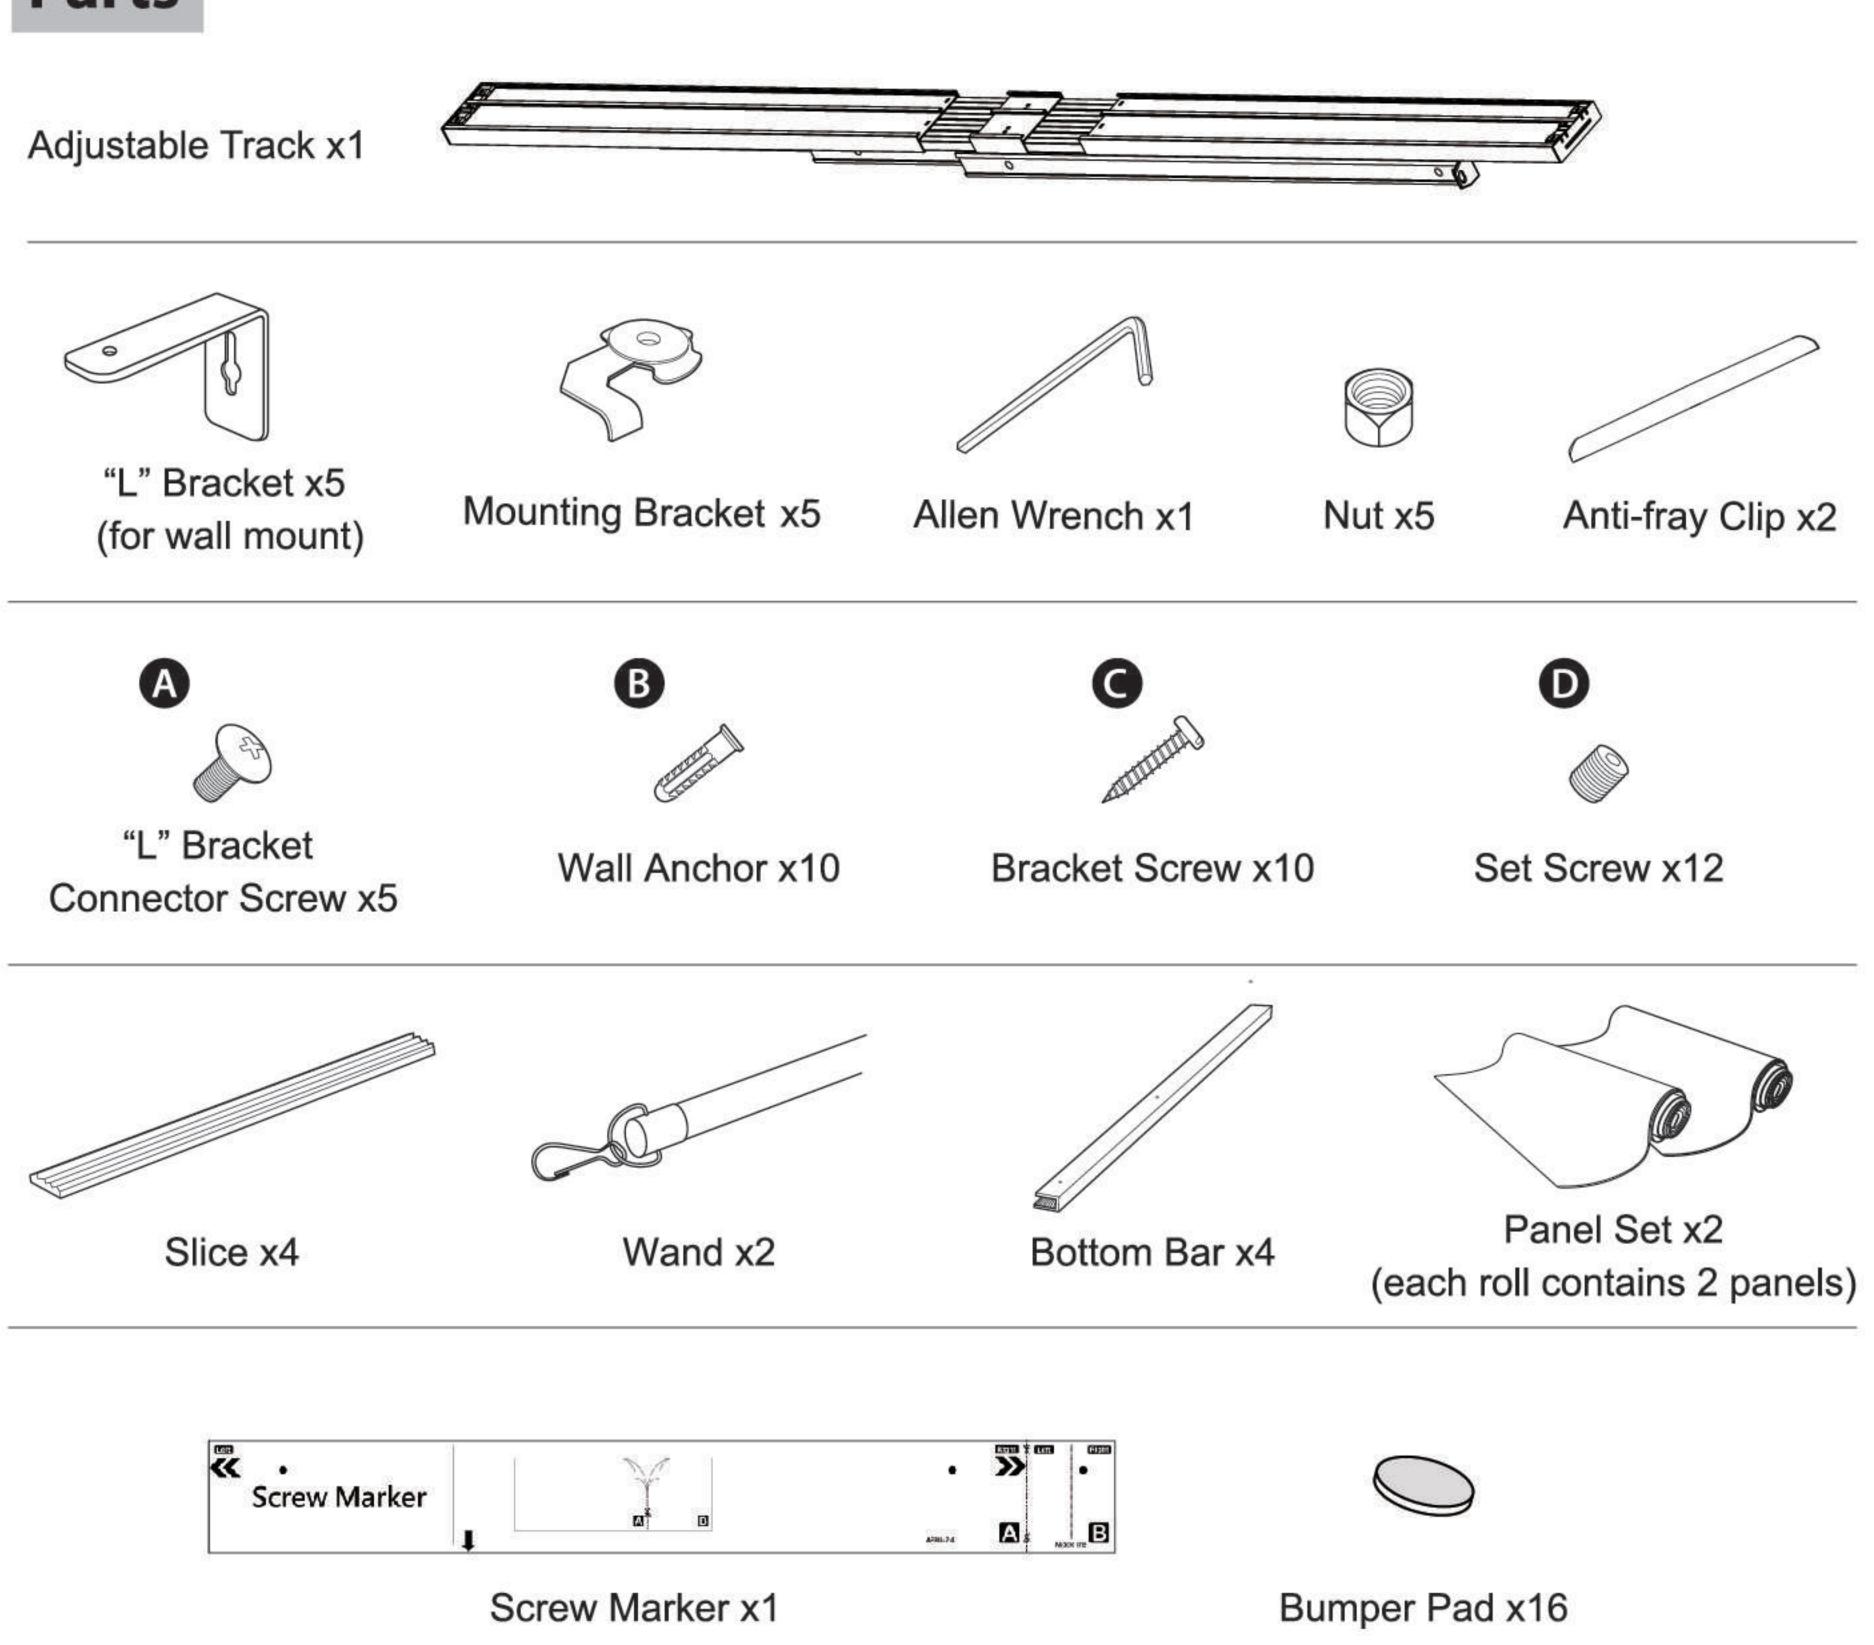


Prepare Tools

Screw Suggestion

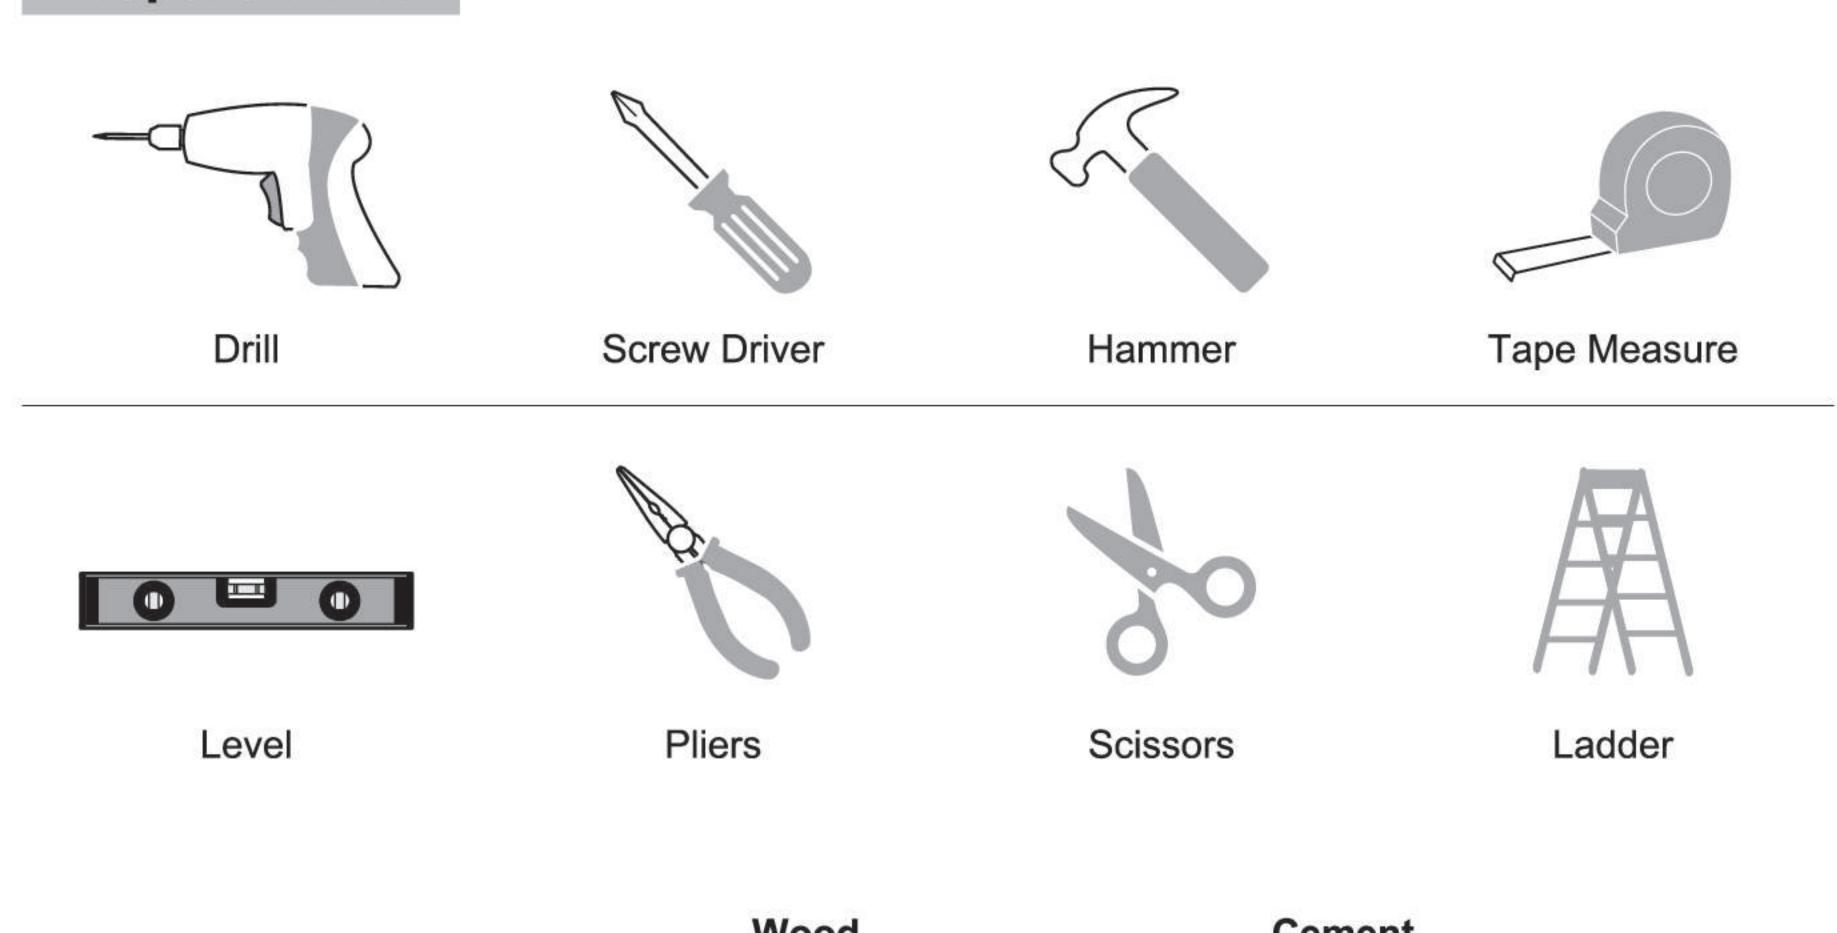



Wall Mount (Please turn to the next page for ceiling mount)


Step 1-a Extend the track to the width you need (maximum 86"). DO NOT over extend the track as it may cause to separate completely.

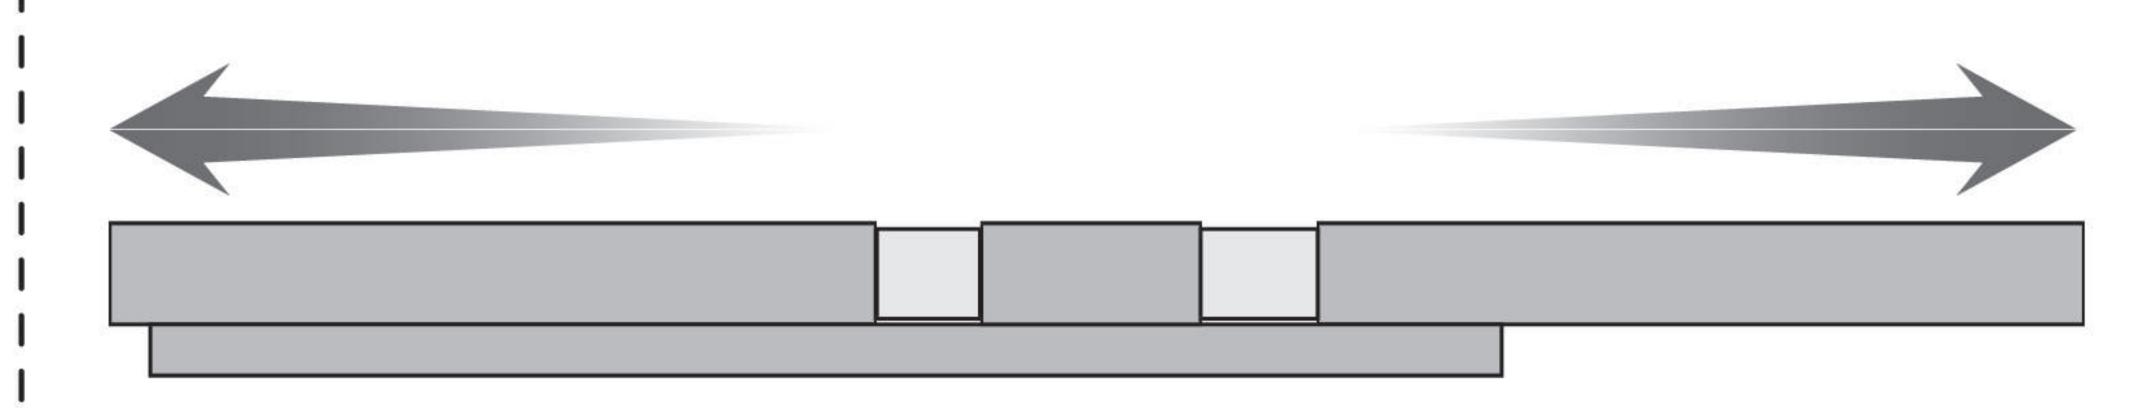


Step 2-a Cut down the cardboard B and use it to mark the central screw point. Align cardboard A against the left side and mark 2 screw points, vice versa.

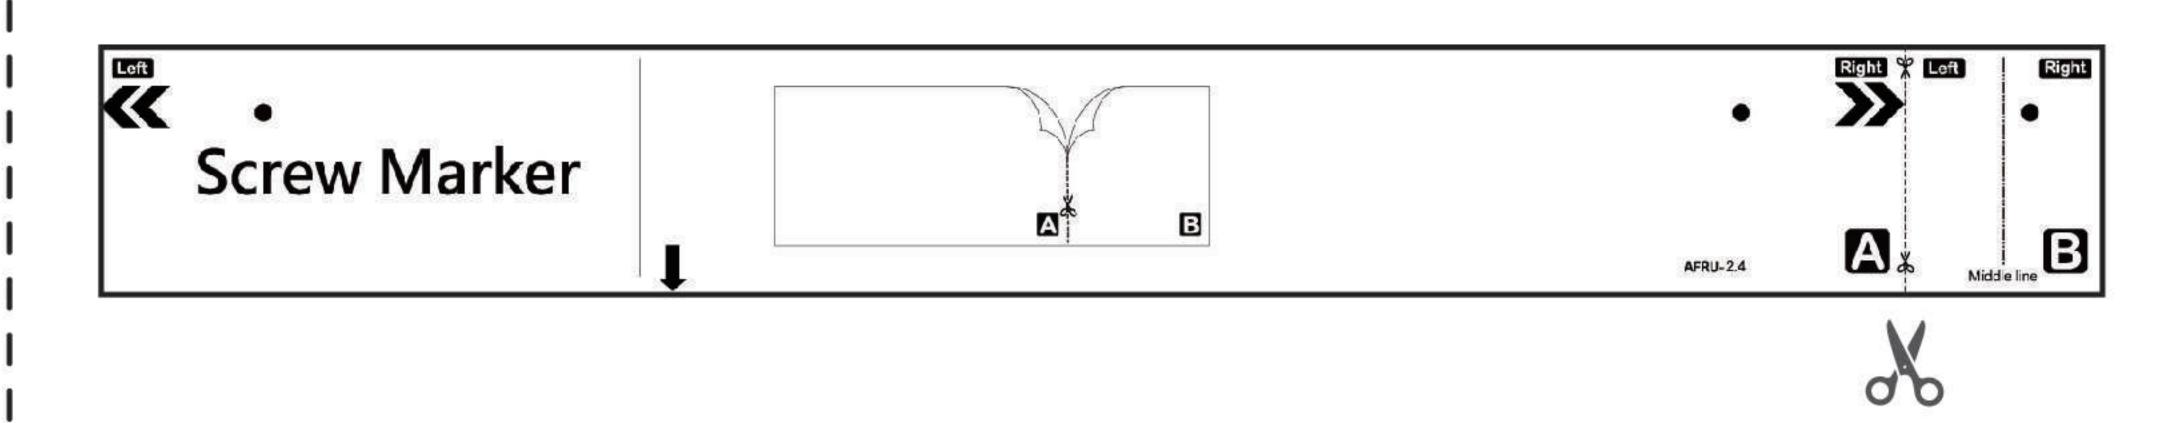

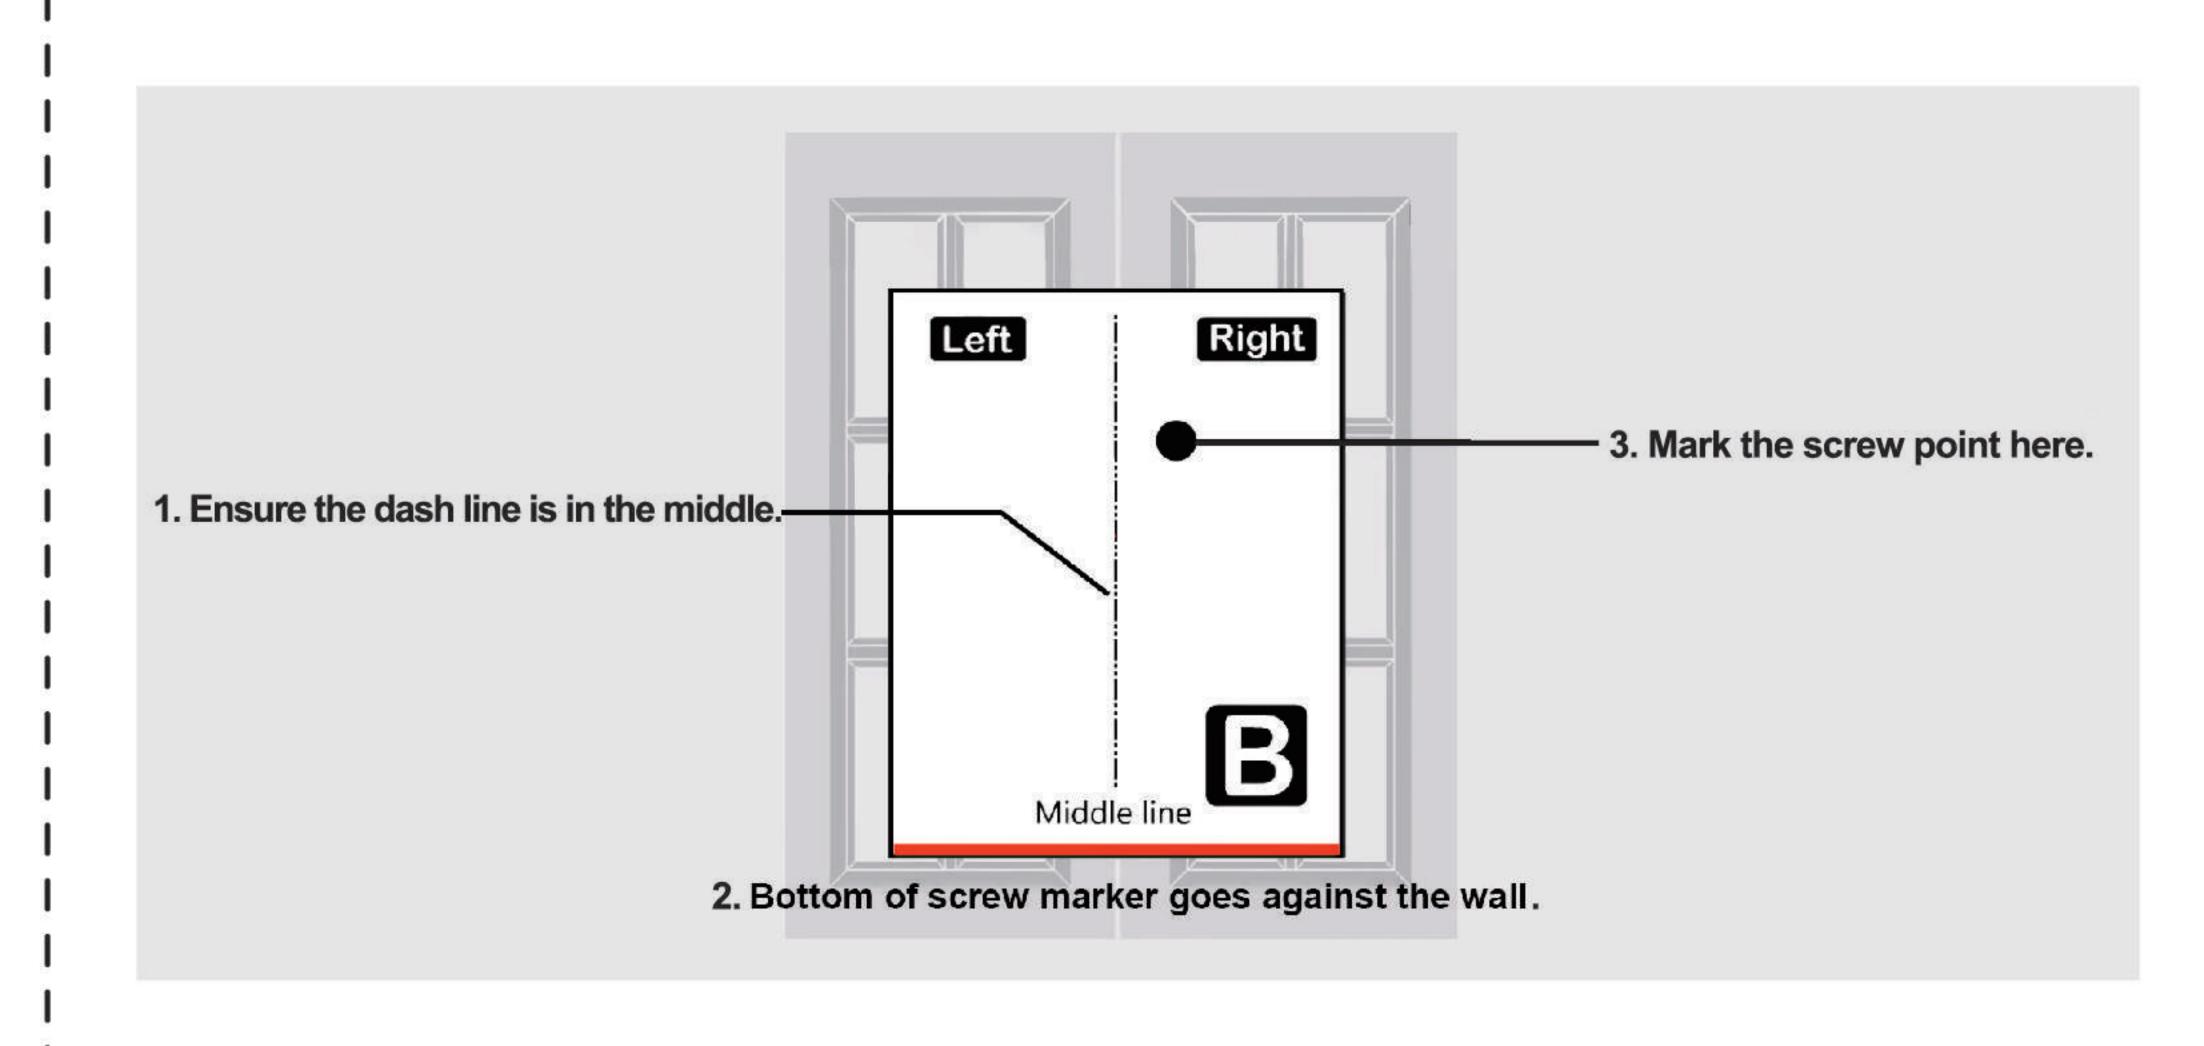

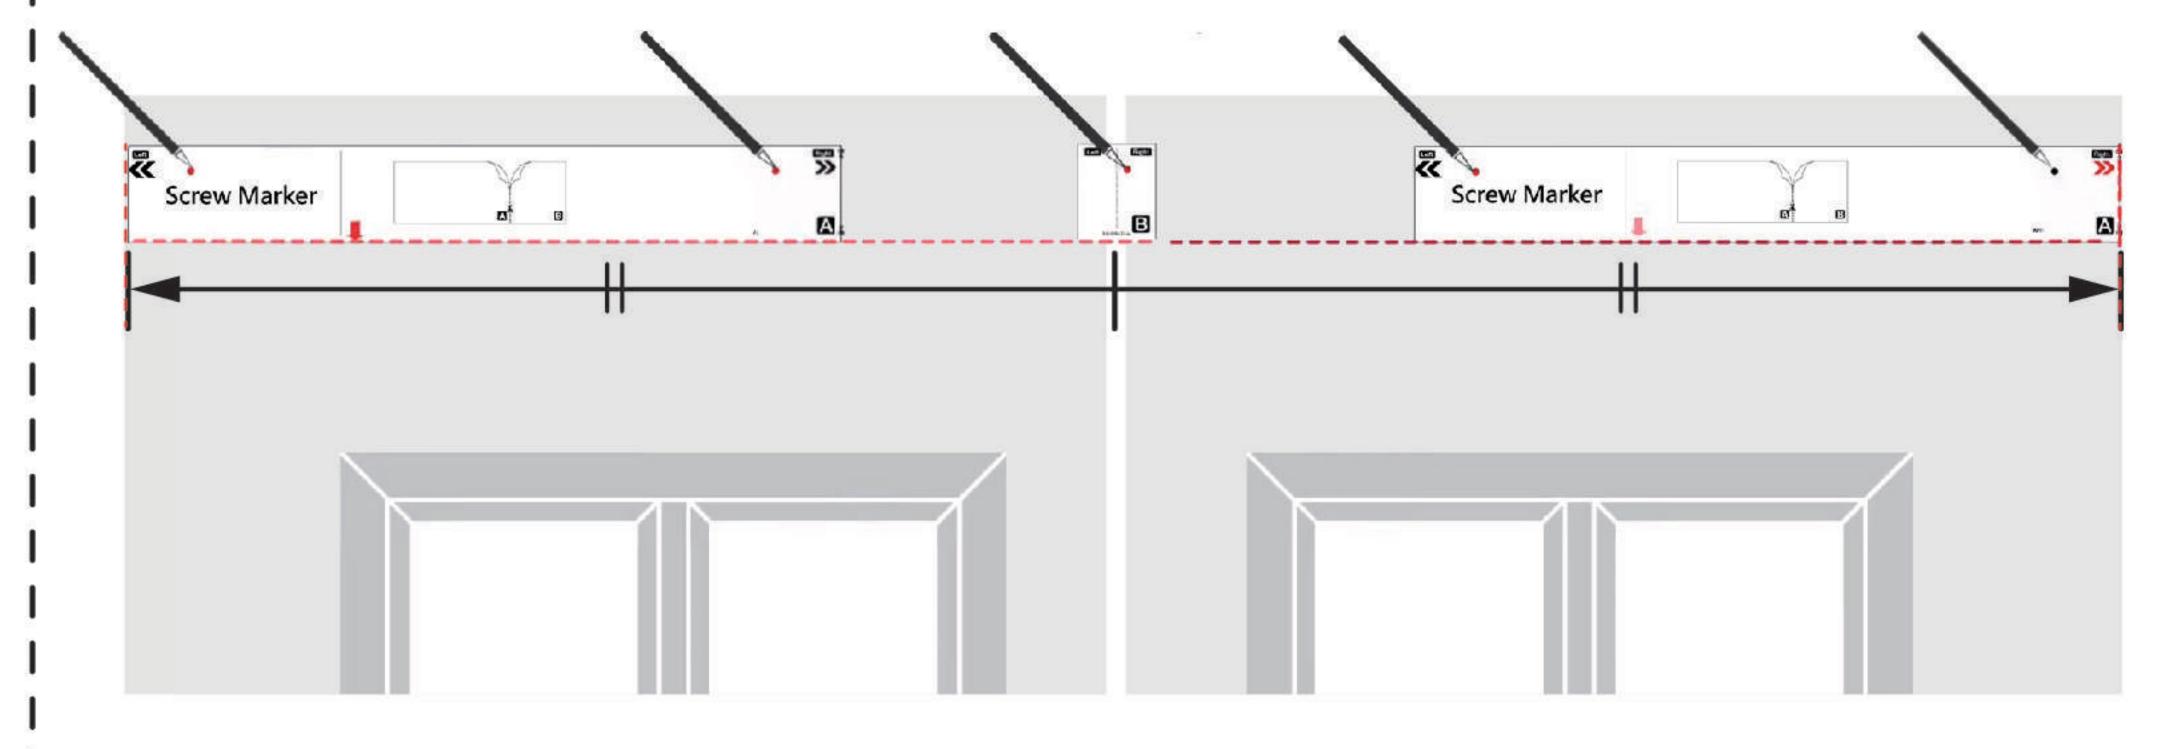

Optional: If you don't want to use the screw marker, you can also use a tape measure to draw screw points, 5 screw points must be on the same level.

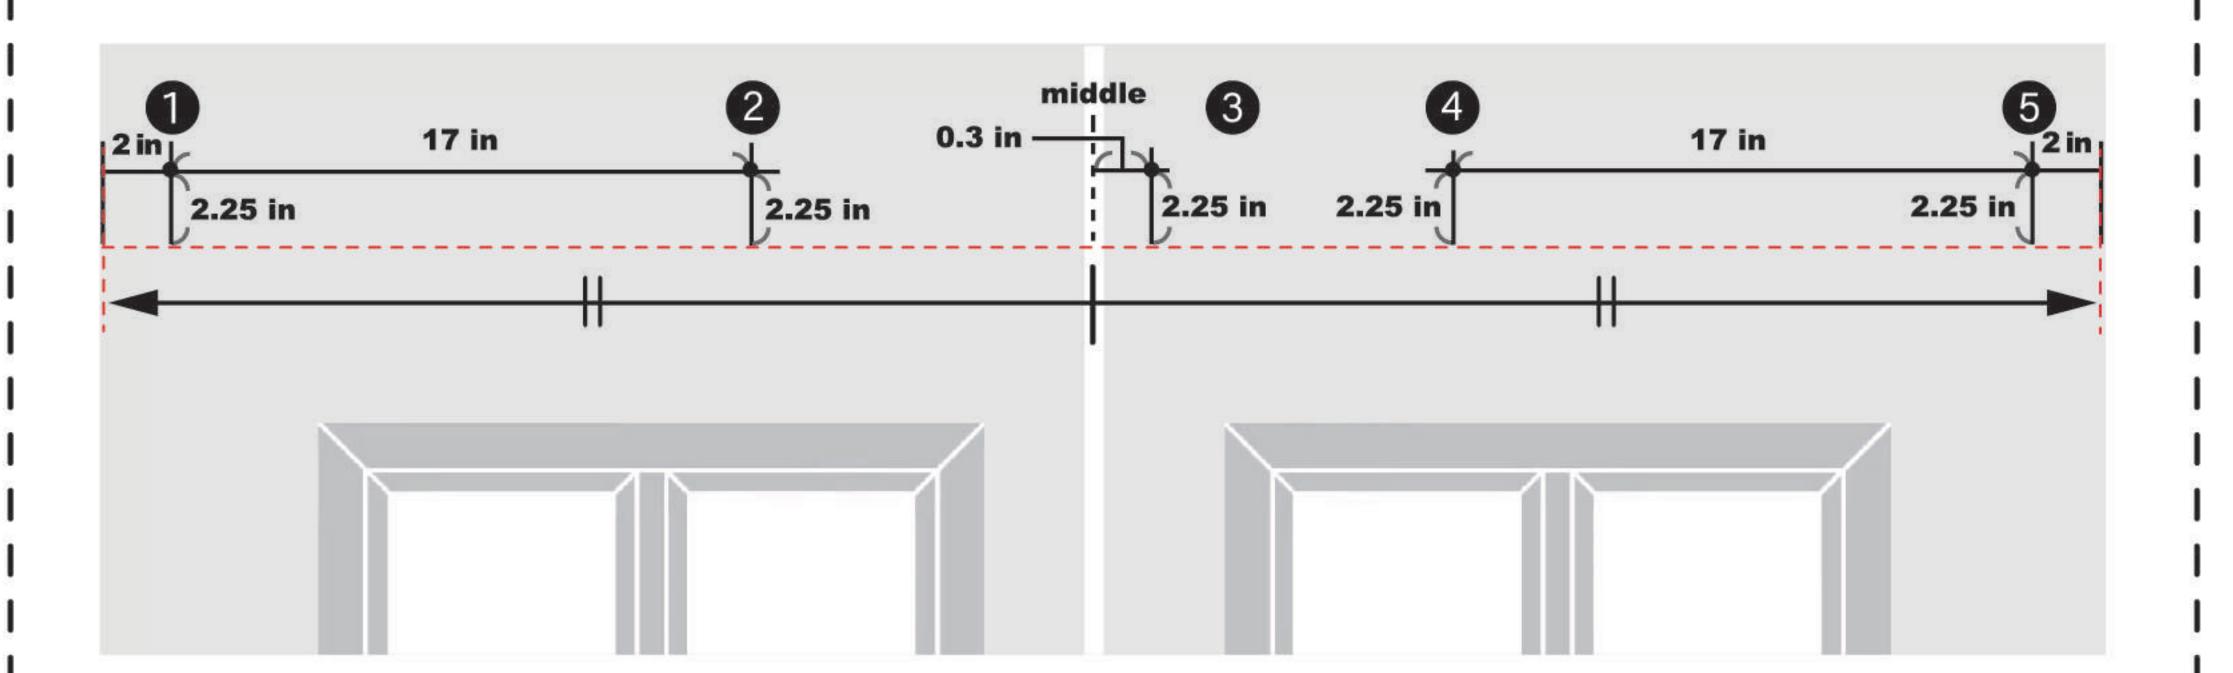


Step 3-a Tighten the mounting bracket and L bracket to the wall. Make sure the mounting surface is flat with a minimum 2.5" of bracket height.







1.22 in 2.25 in A 🕹

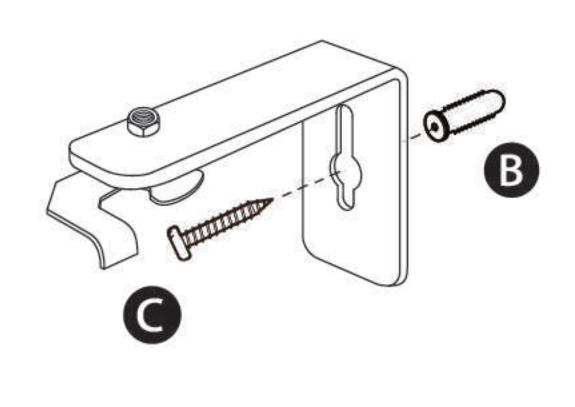

1 Tighten mounting bracket

② Insert L bracket

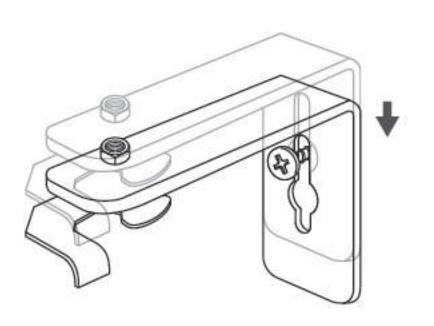


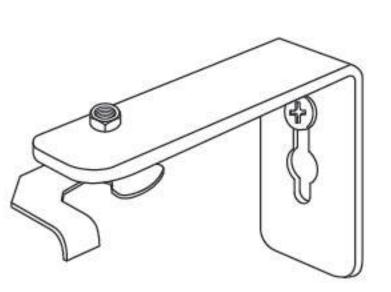


③ Press down

4 Lock in

Step 4-a Lock the middle bracket inside the groove first and then lock the other 4 brackets. We recommend additional hands to finish this step.

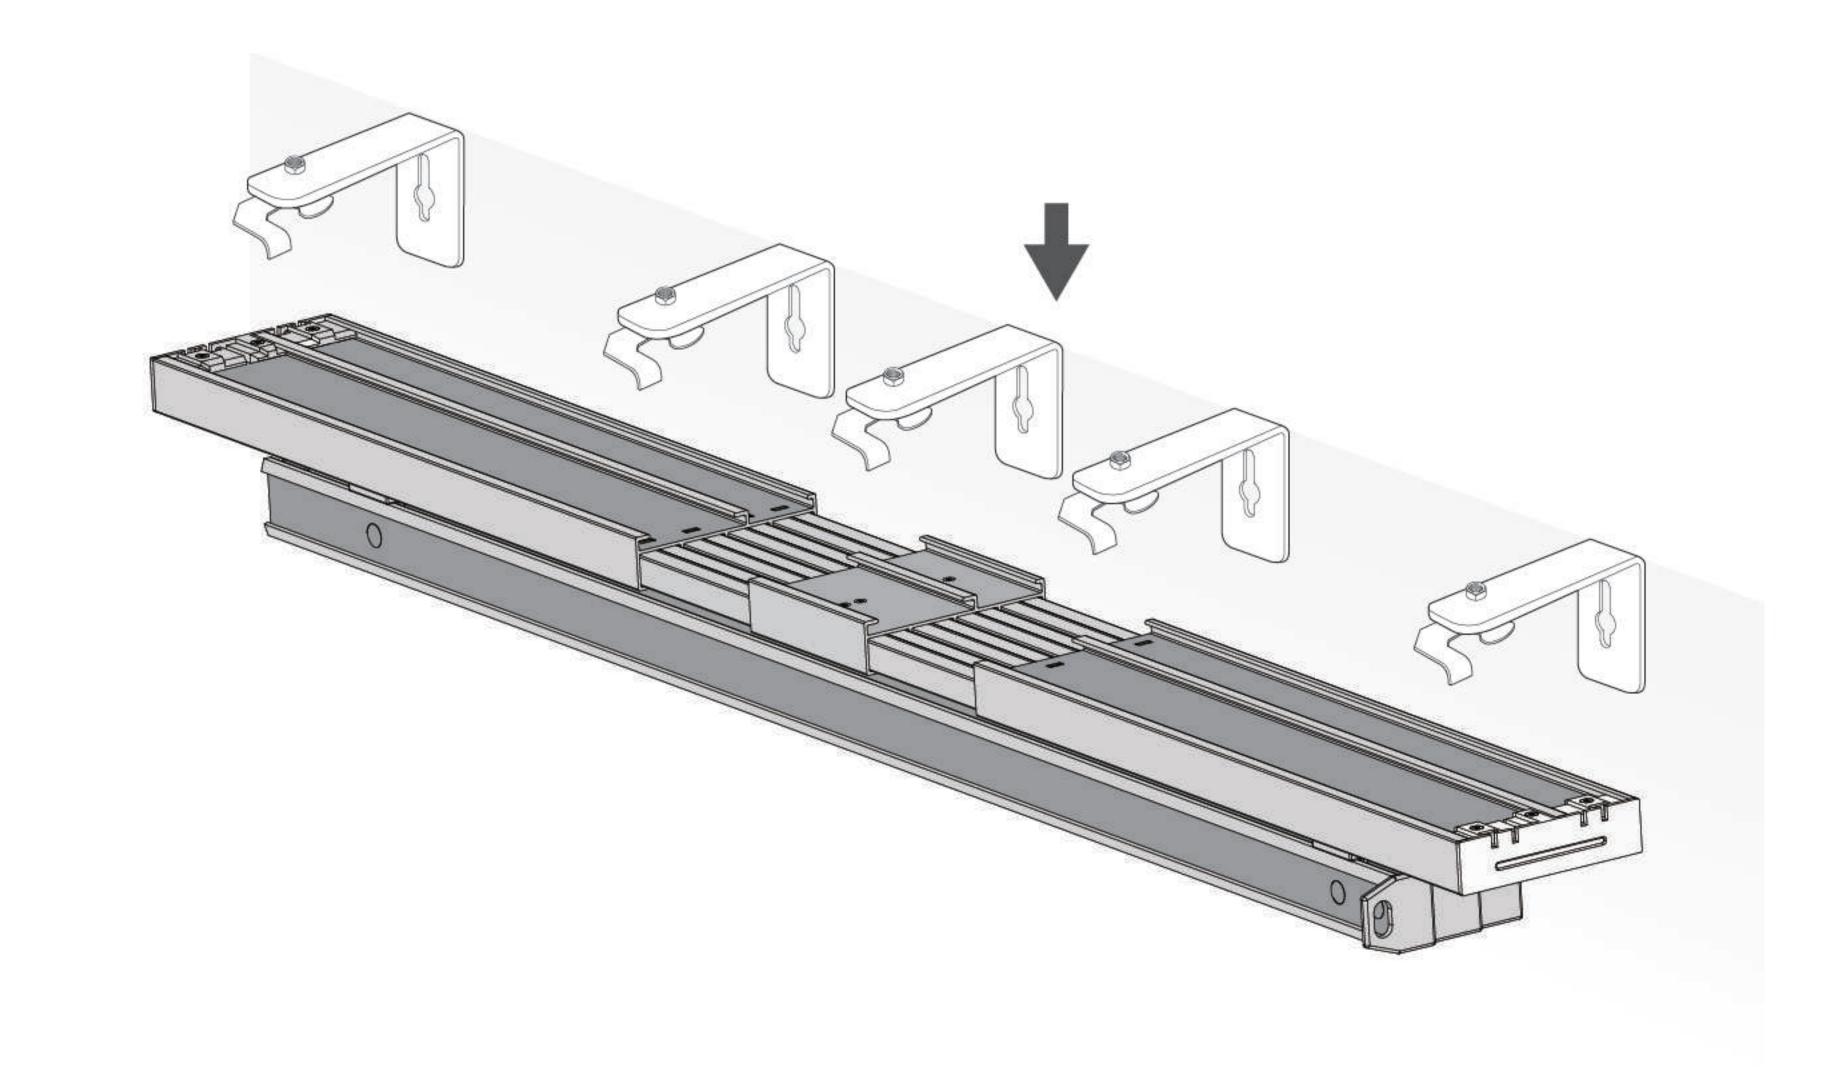

Step 5-a Make sure the mounting brackets are tightened inside the groove. CAUTION! All the brackets must be correctly and firmly installed.

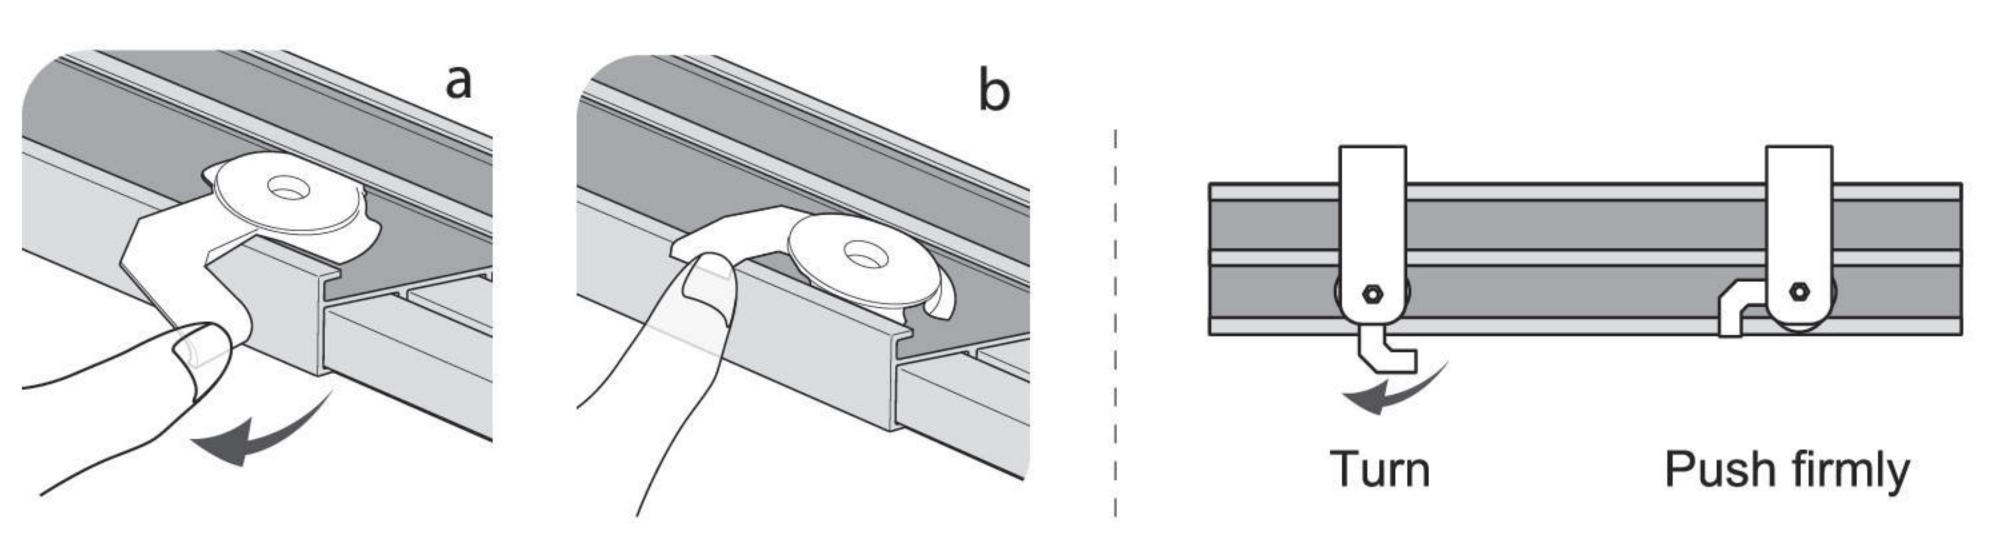

Please follow Step 6 to complete the installation.



Ceiling Mount (Please see the front page if wall mounting)


Not required for ceiling mount










Step 1-b Extend the track to the width you need (maximum 86"). DO NOT over extend the track as it may cause to separate completely.

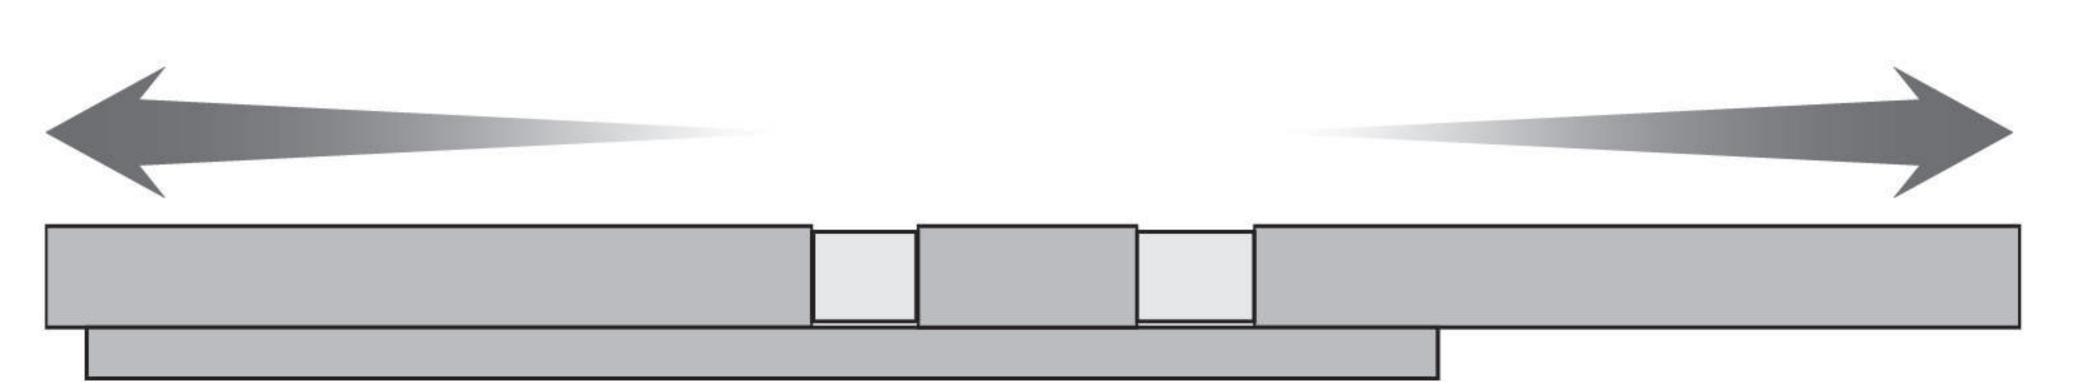


Step 2-b Cut down the cardboard B and use it to mark the central screw point. Align cardboard A against the left side and mark 2 screw points, vice versa.

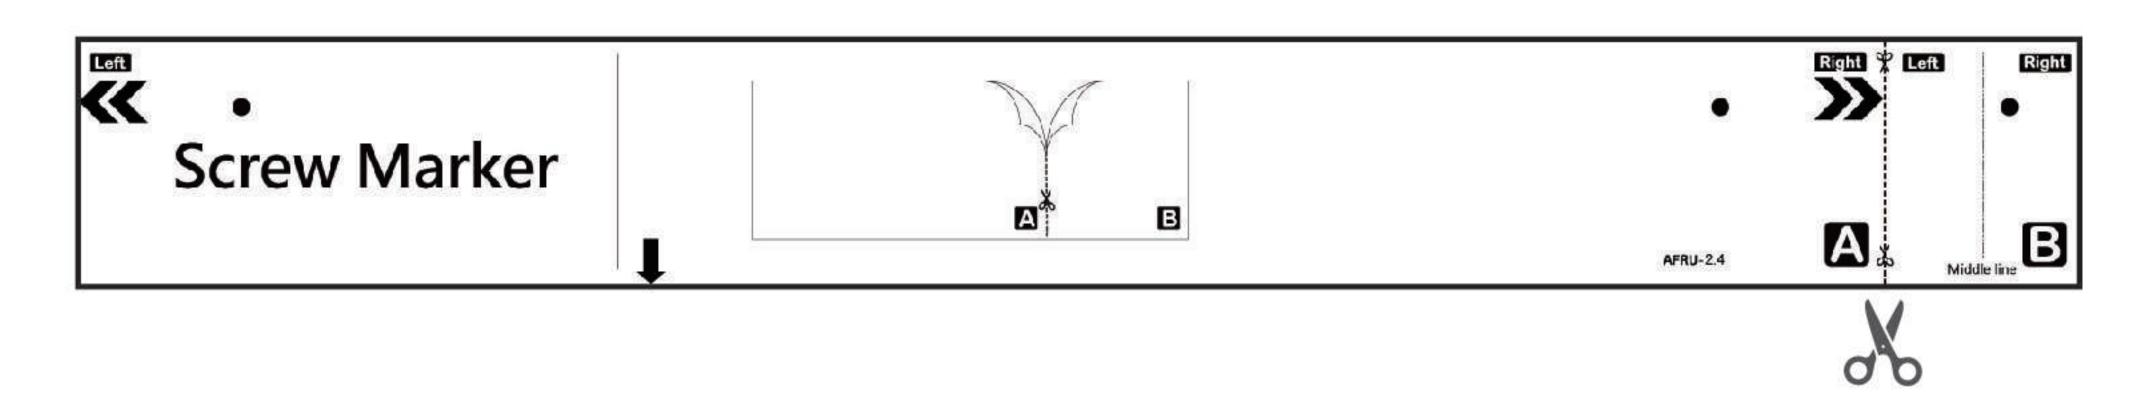

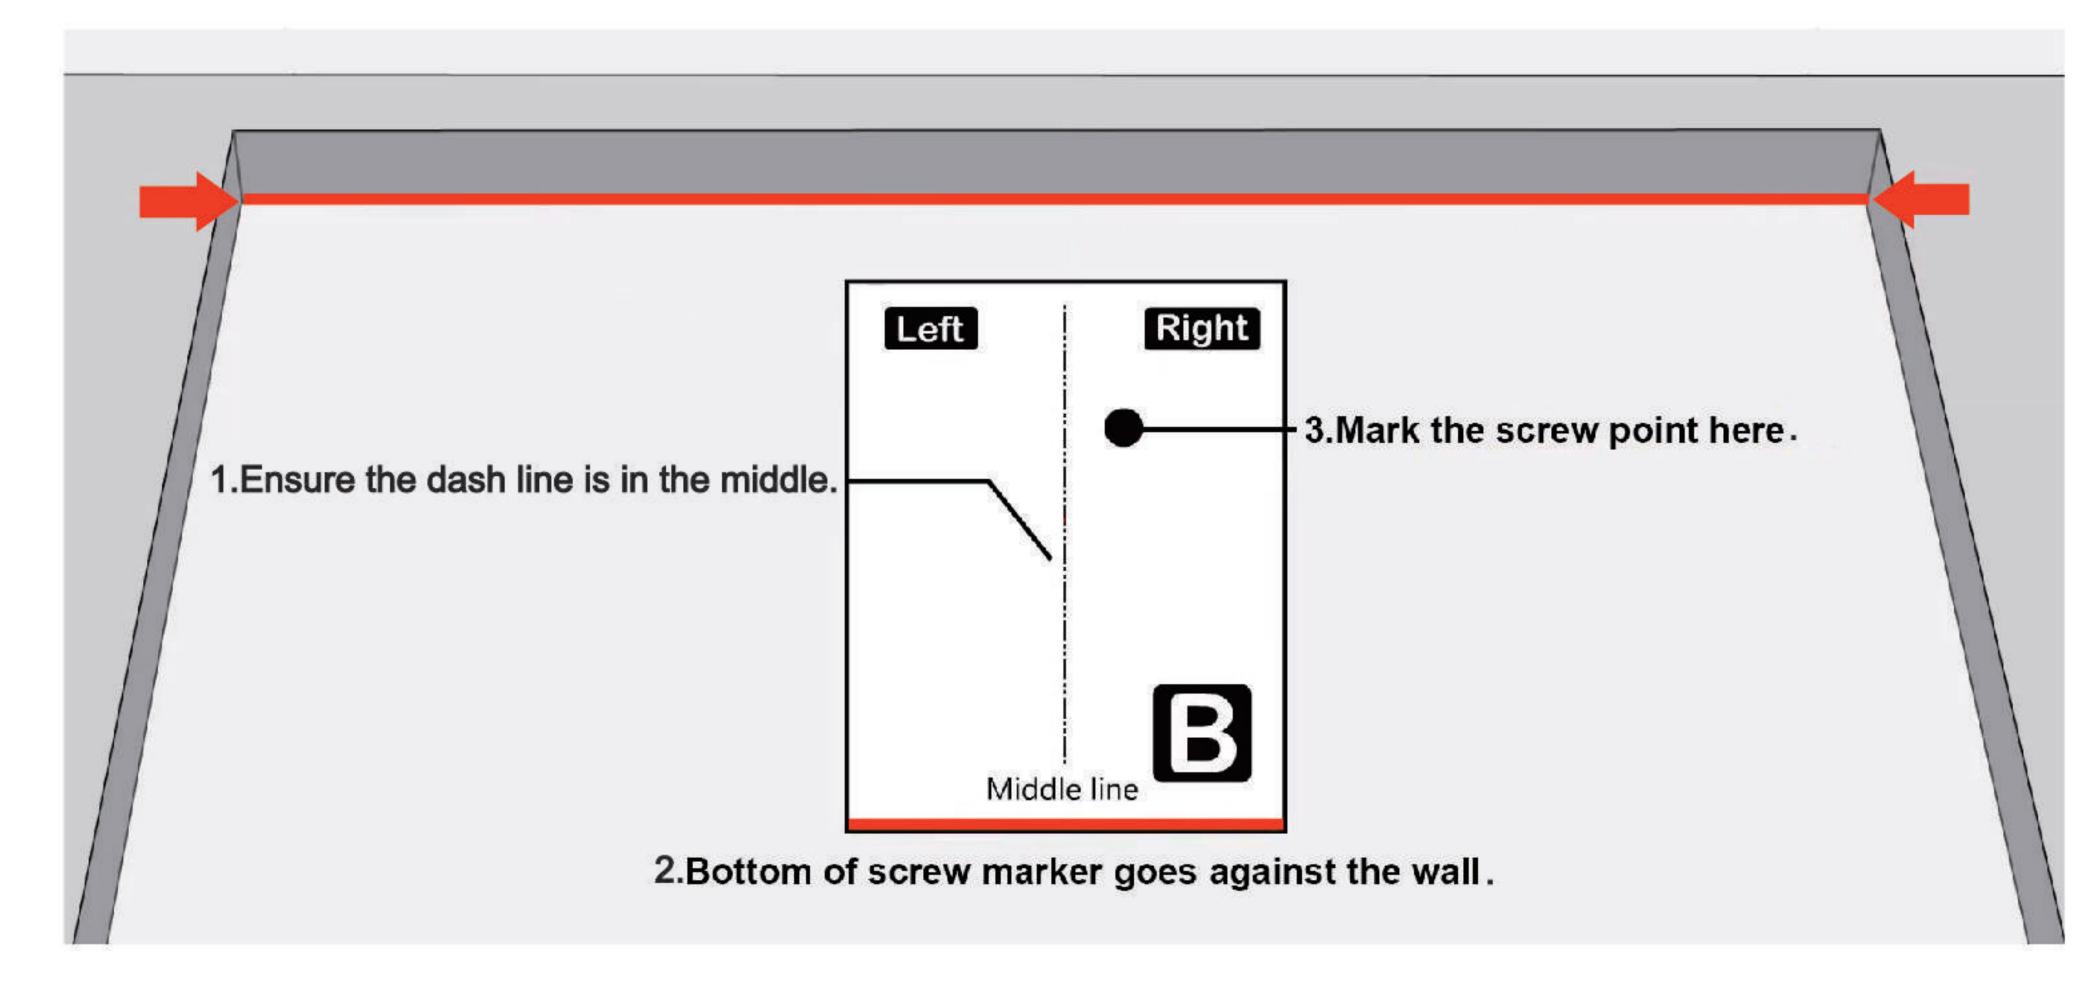


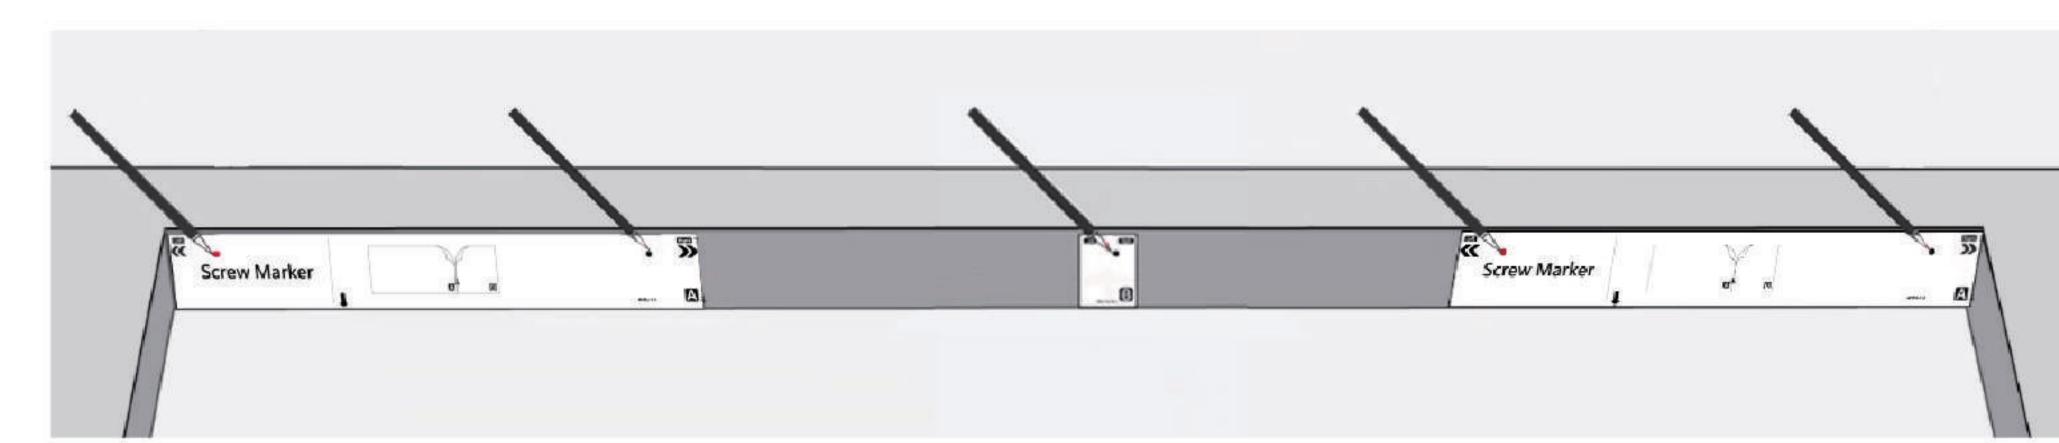


Optional: If you don't want to use the screw marker, you can also use a tape measure to draw screw points, 5 screw points must be on the same level.

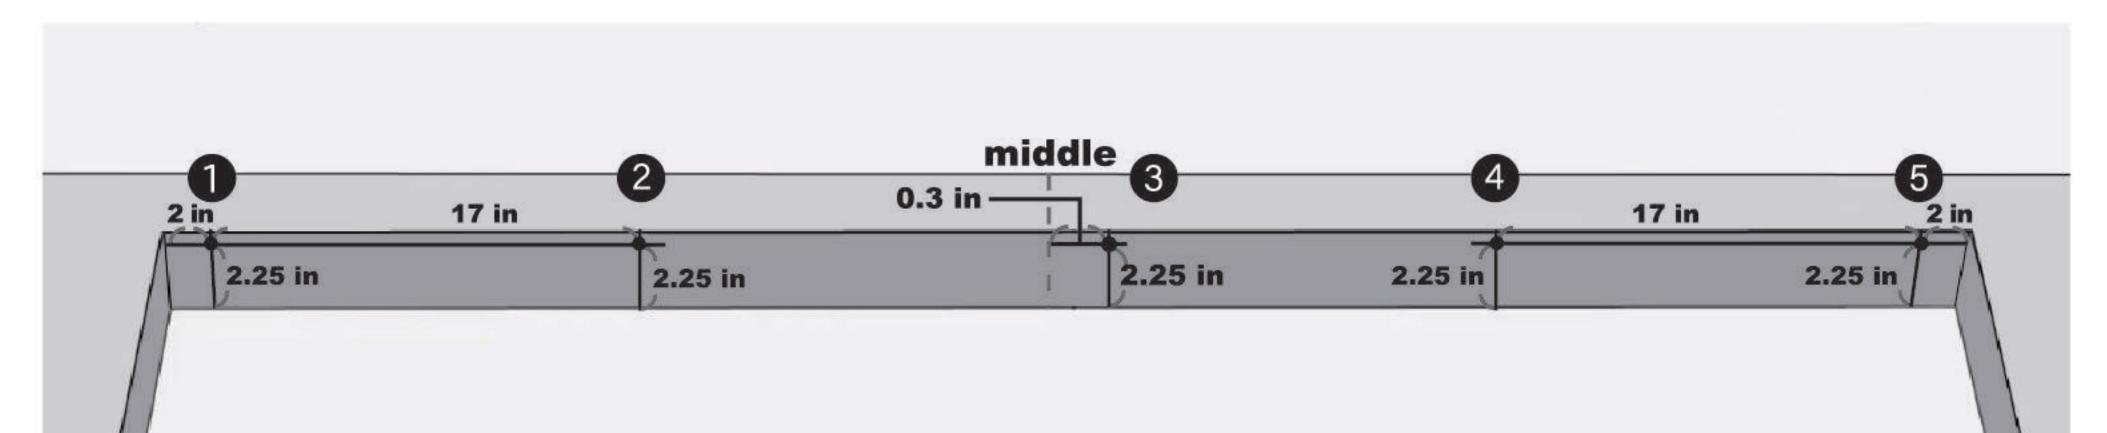


Step 3-b Tighten the mounting bracket to the ceiling. Make sure the mounting surface is flat with a minimum 2.5" of track depth.

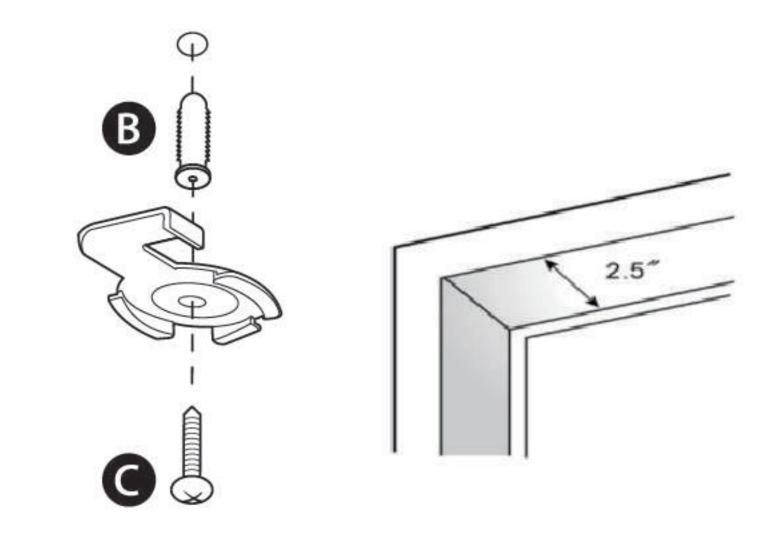

Step 4-b Lock the middle bracket inside the groove first and then lock the other 4 brackets. We recommend additional hands to finish this step.

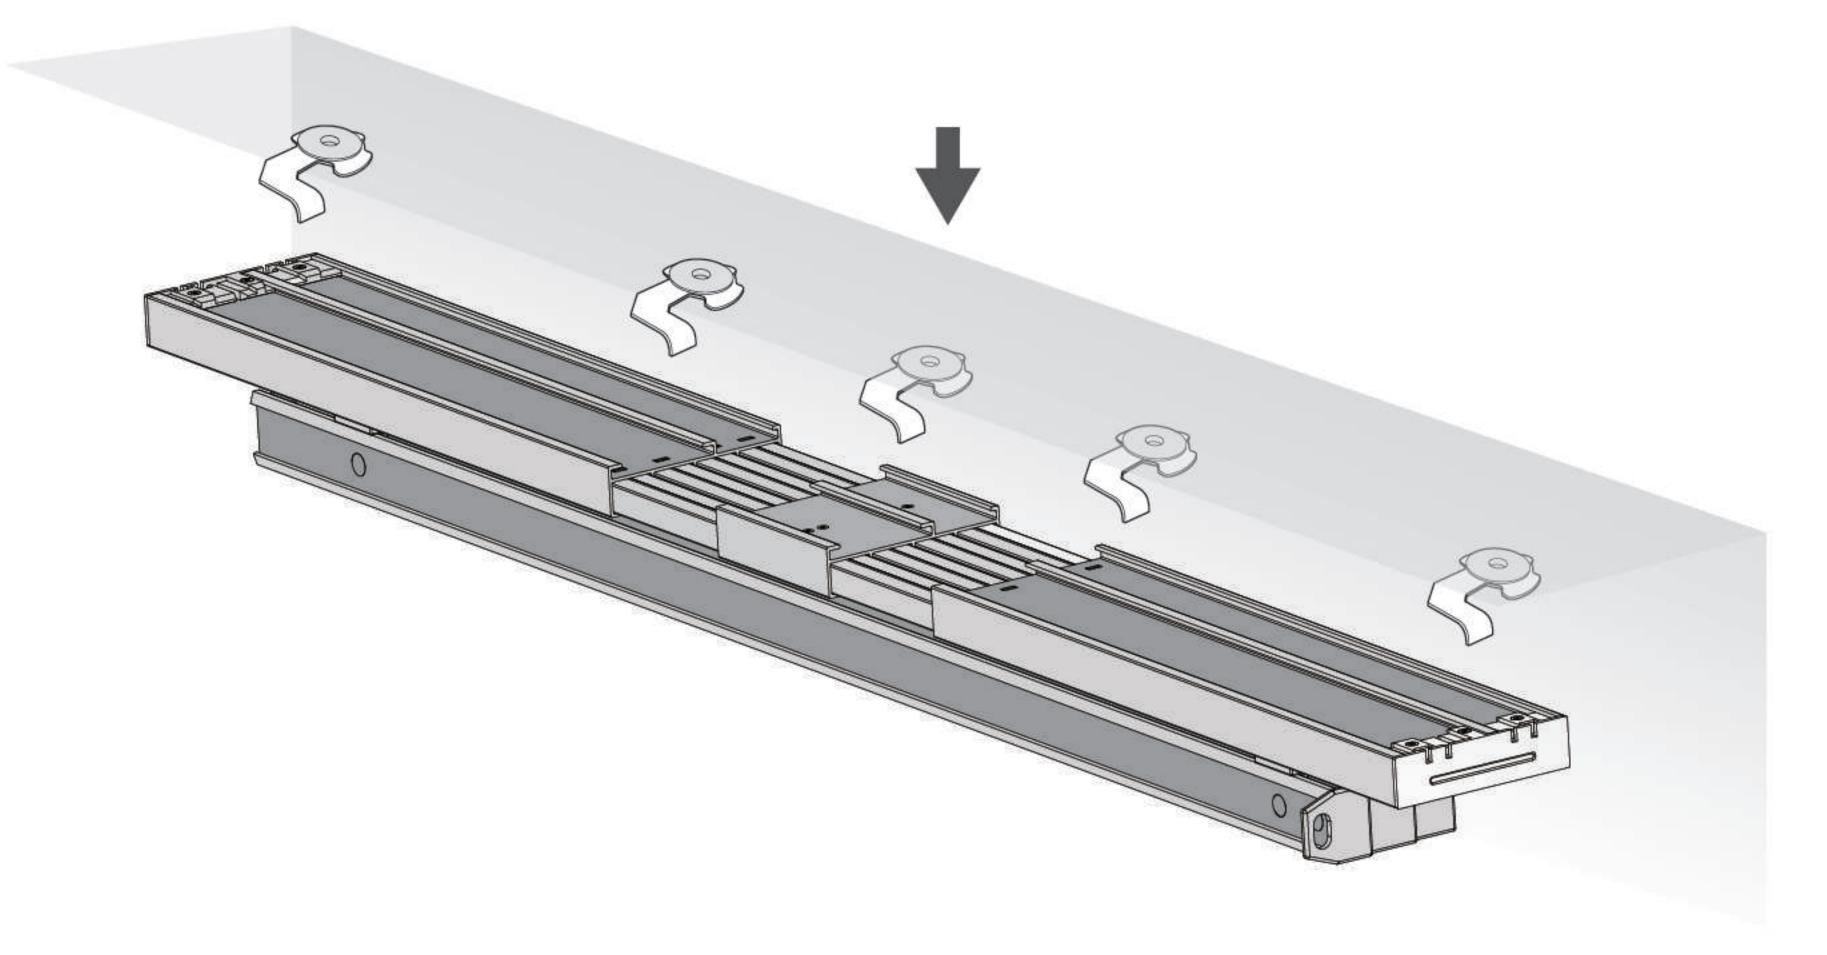

Step 5-b Make sure the mounting brackets are tightened inside the groove. CAUTION! All the brackets must be correctly and firmly installed.

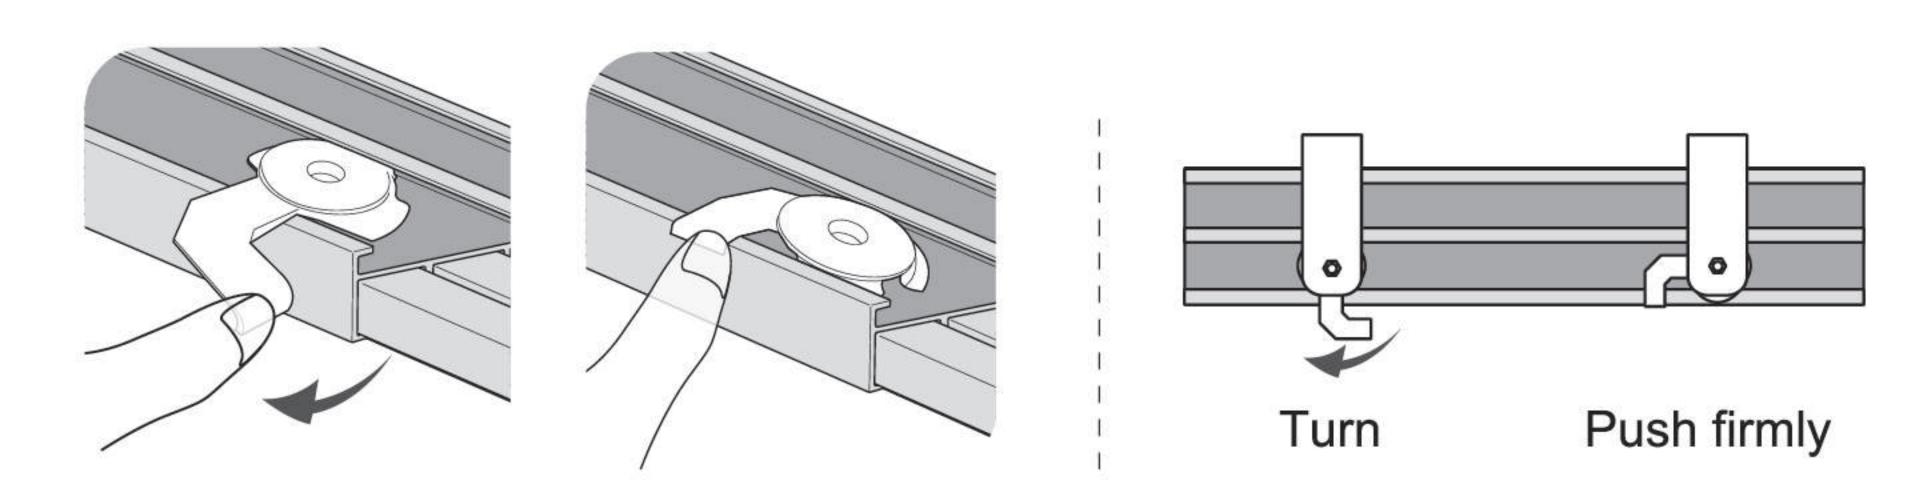


Step 6 Complete the installation.

a Measure the height you want.







b Cut out the unwanted length of panel. DO NOT cut from the velcro side.

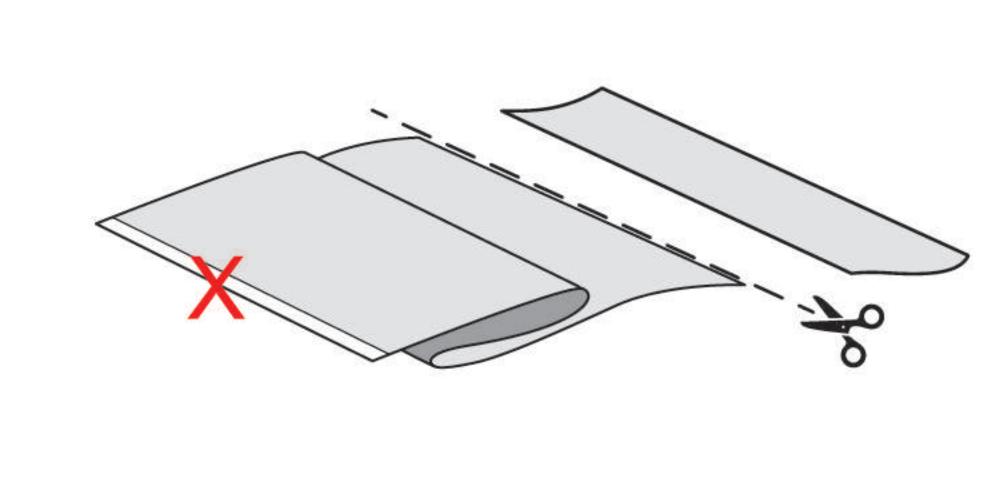


C Insert the panels into bottom bars.

d Insert the slices into bottom bars.

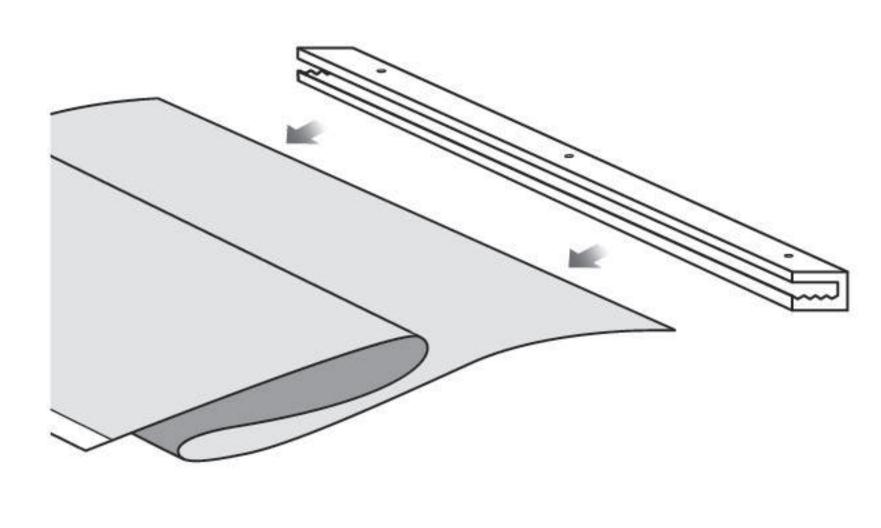


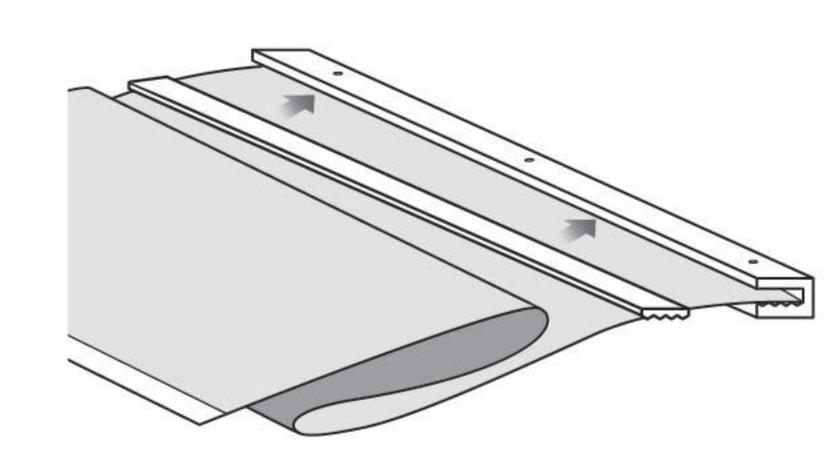


e Use allen wrench to screw set screws into the bottom bars on flat surface.

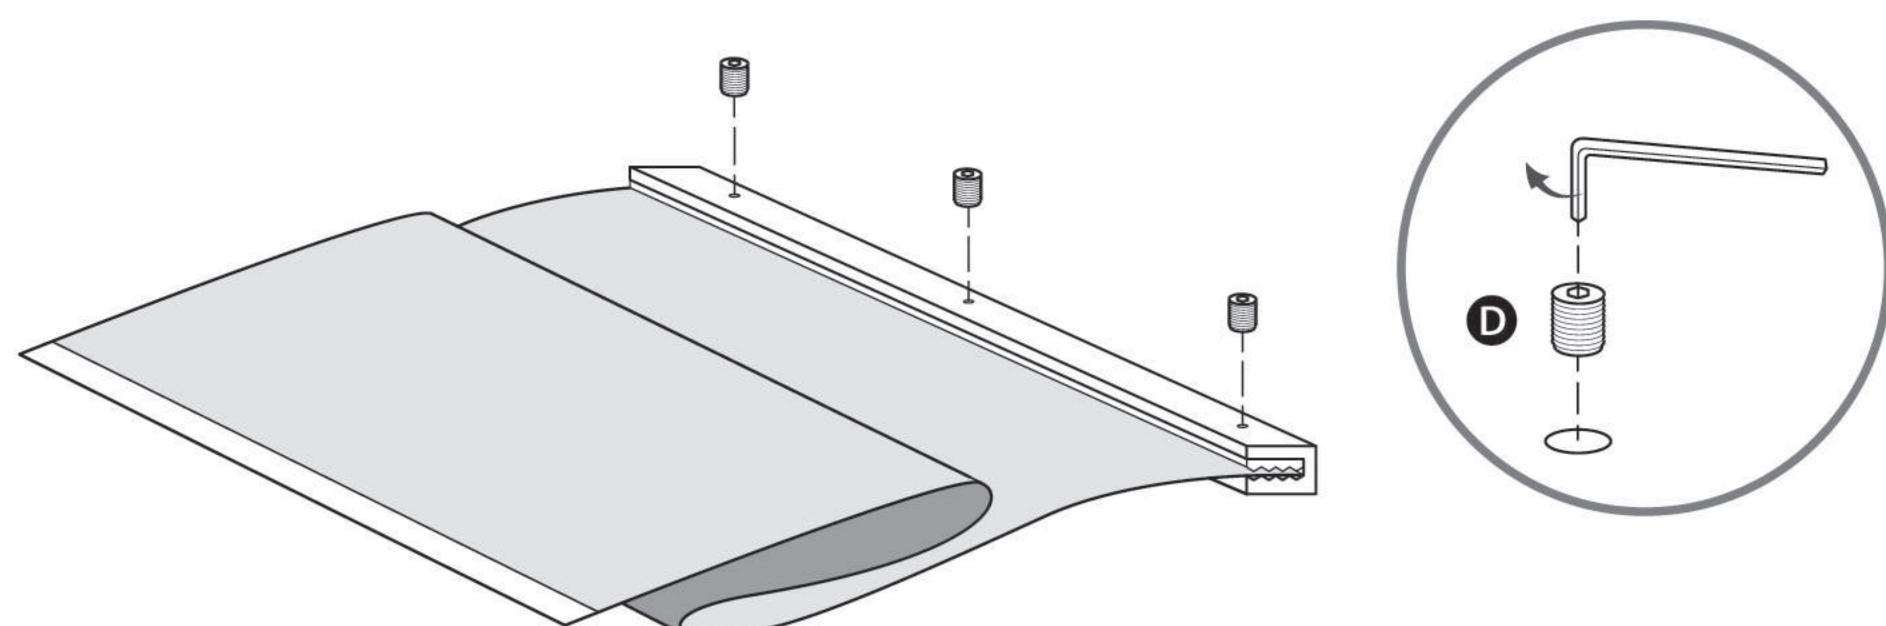


f Attach 4 bumper pads on the front and back side of bottom bars.

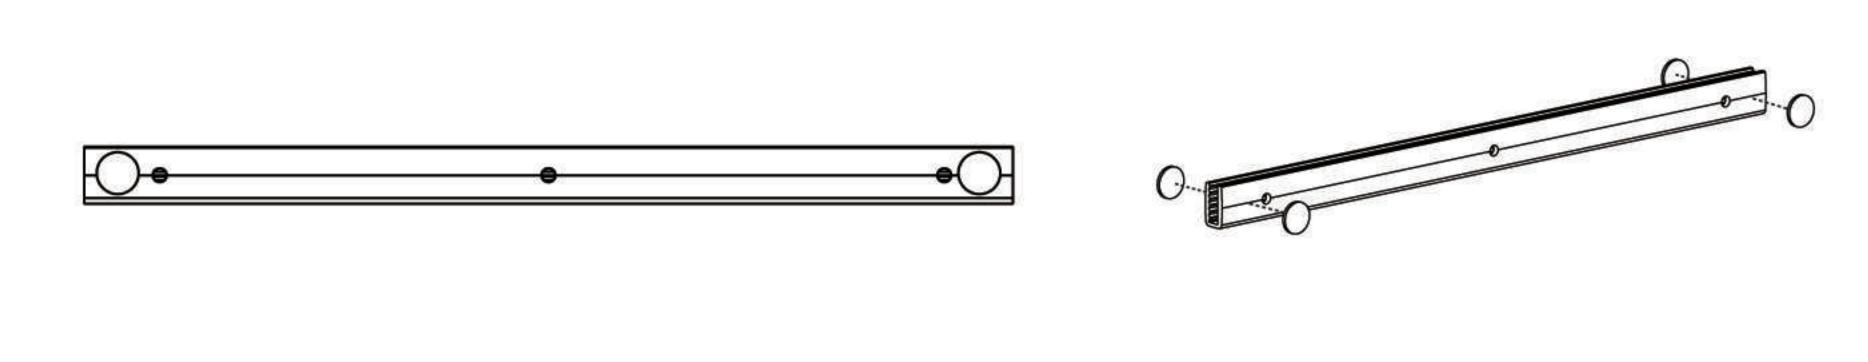

Step 7 Apply anti-fray clips to the two sides of panels and attach the panels on the sliding rails.

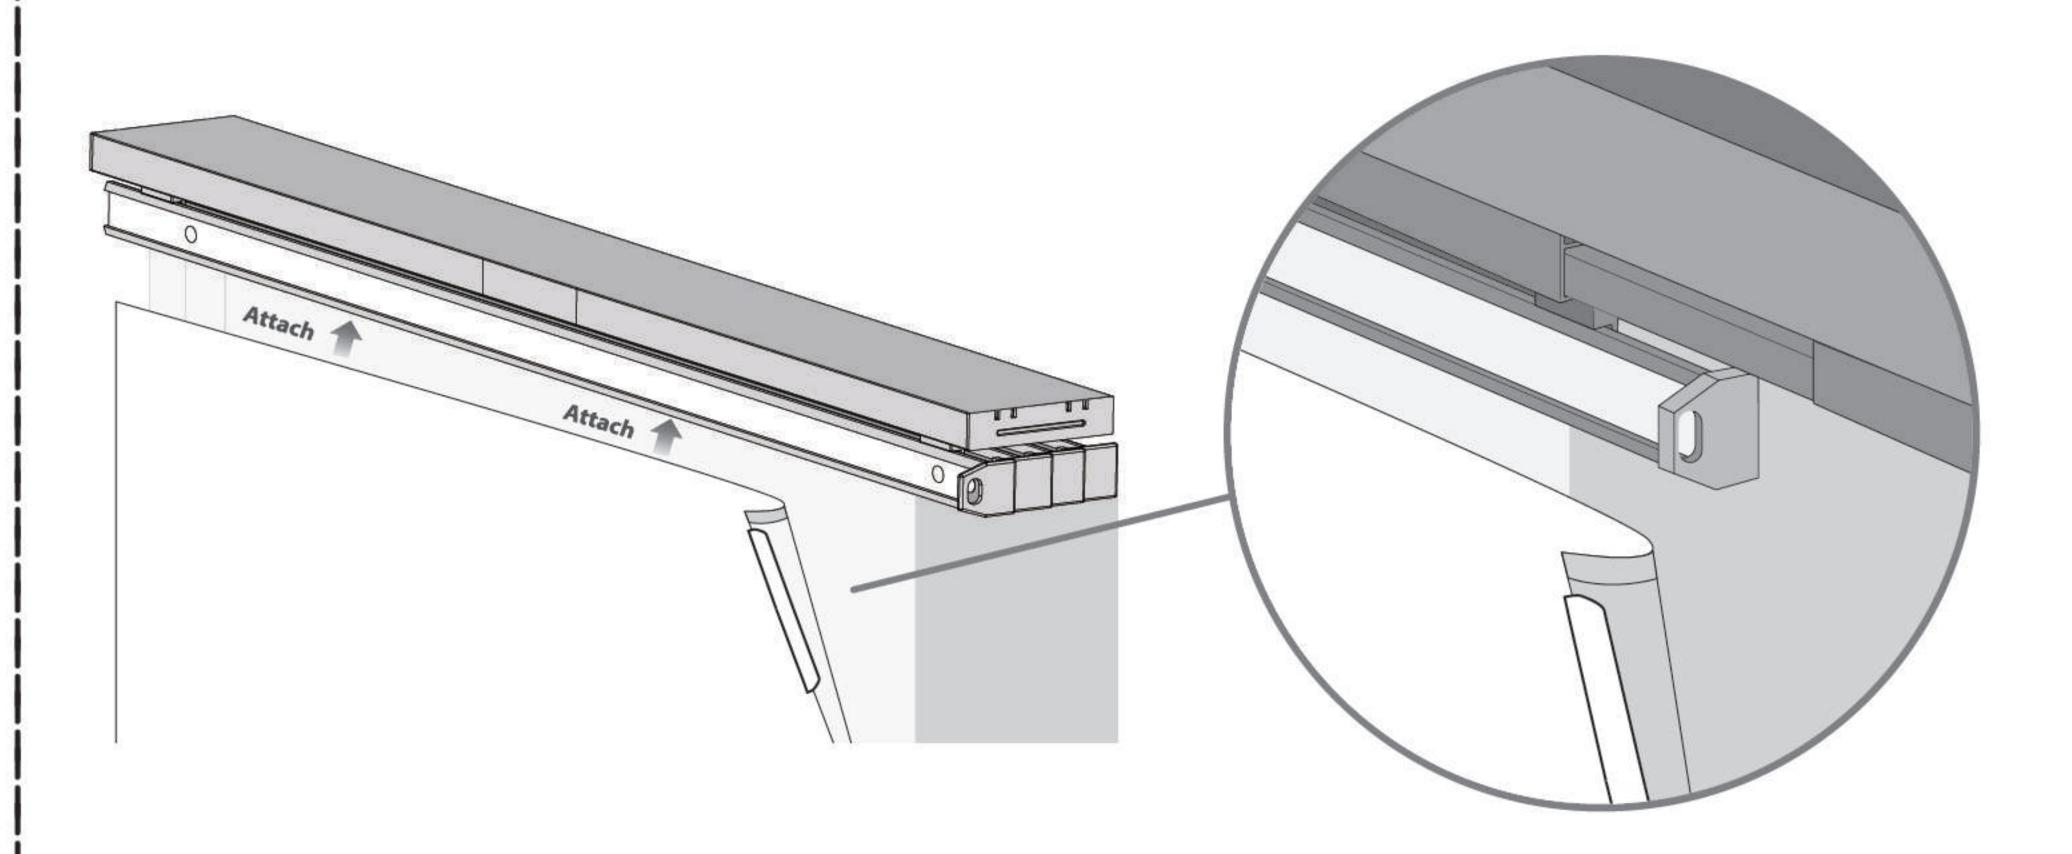

Step 8 Hook the 2 wands to the leading and ending sliding rails.

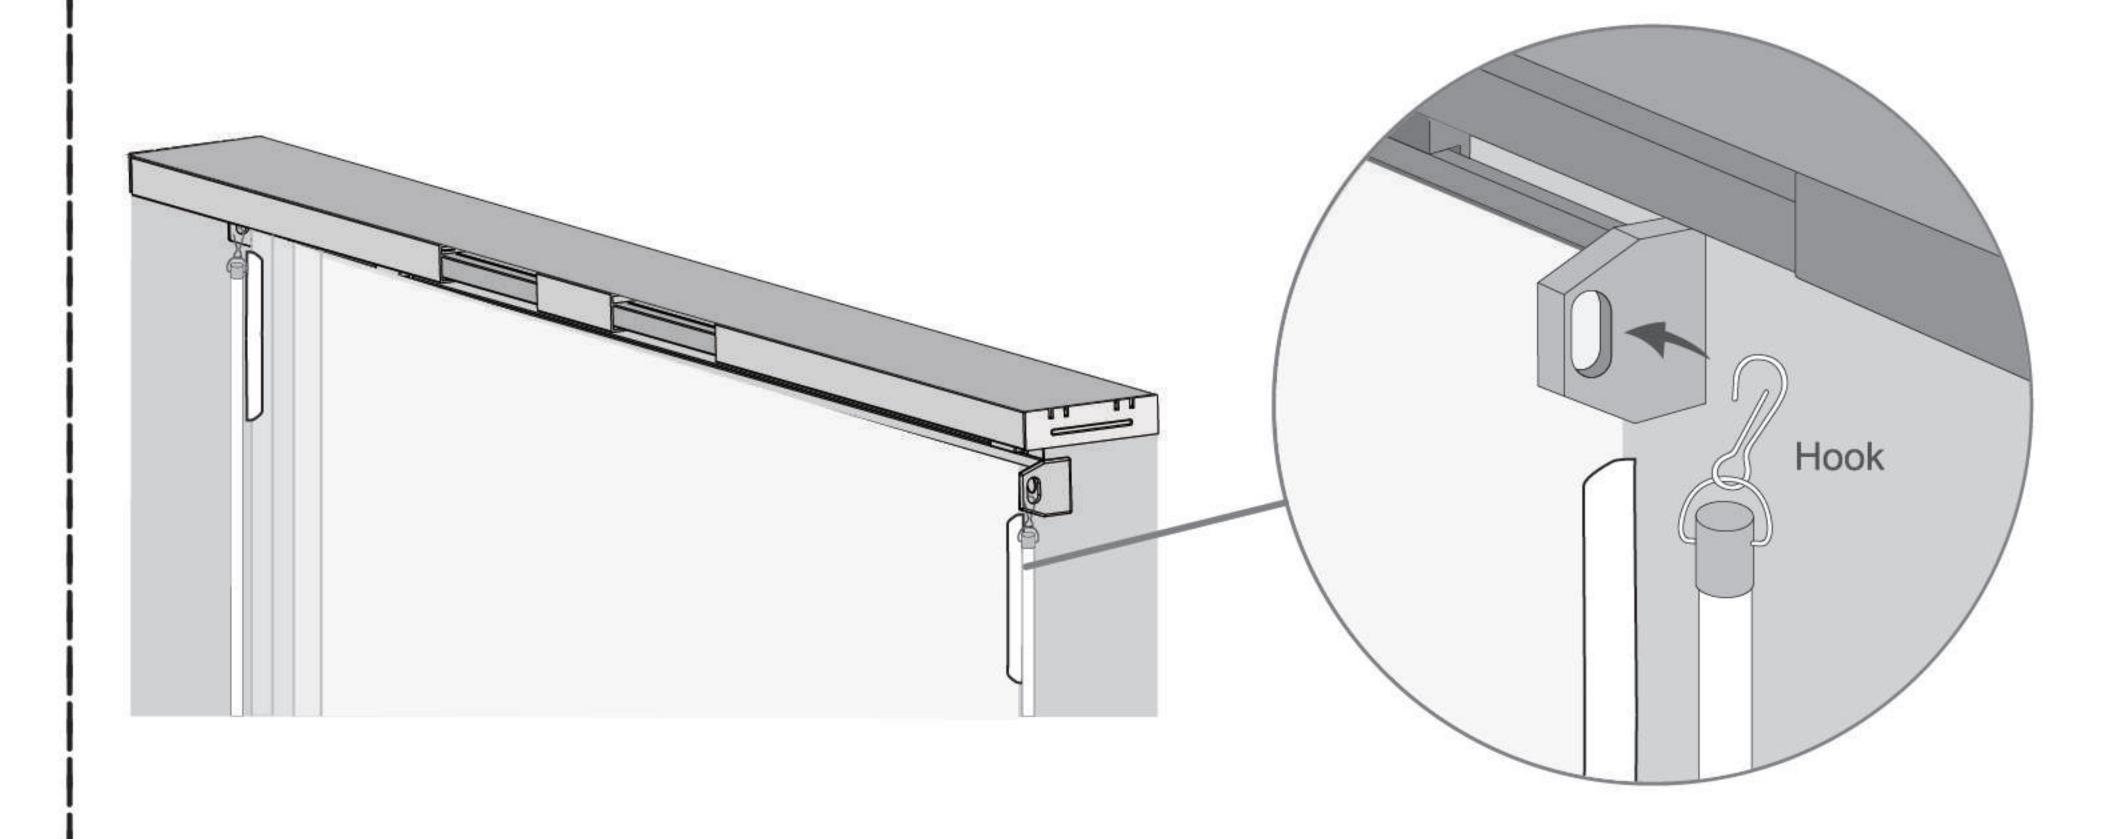

Tips Use wands to open and close the sliding panels by 45 degrees.

