




Assembly Instruction

Accent Cabinet

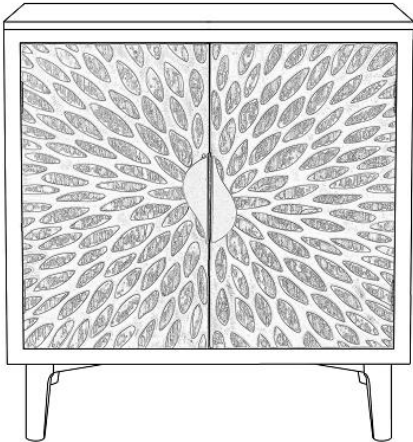












Assembly Instruction

WARNING:


- Read all instructions carefully and completely before assembly and use.
- Retain for future reference.
- DO NOT use power tools.
- DO NOT over-tighten hardware.
- Periodically check all hardware and re-tighten as necessary.
- DO NOT use product if any component becomes damaged.
- For residential (non-commercial) use only.
- DO NOT sit or stand on product. Use only for intended purpose.
- DO NOT exceed 80lbs for the tabletop and 30lbs for the shelf, evenly distributed.

Parts List


Check all parts before assembly

<p>A. <u>Tabletop</u></p>  <p>*1</p>	<p>B. <u>Boby</u></p>  <p>*1</p>	<p>C. <u>Shelf</u></p>  <p>*1</p>	
<p>D. <u>Back panel</u></p>  <p>*1</p>	<p>E. <u>Leg</u></p>  <p>*1</p>	<p>F. <u>Leg</u></p>  <p>*1</p>	<p>H1. <u>Hex bolt</u></p>  <p>*8</p>
<p>H2. <u>Washer</u></p>  <p>*8(+1 extra)</p>	<p>H3. <u>Foot pad</u></p>  <p>*4</p>	<p>H4. <u>Alley key</u></p>  <p>*1</p>	<p>H5. <u>Shelf pin</u></p>  <p>*4</p>


Step 1: Unfold the left panel and right panel from Body (B) as below.

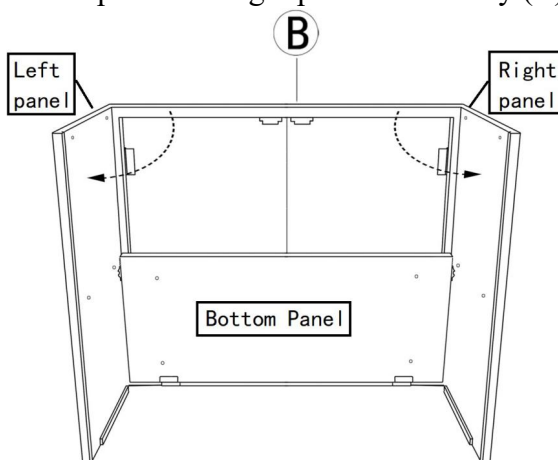


Step 2: Unfold the bottom shelf from Body (B) as below.

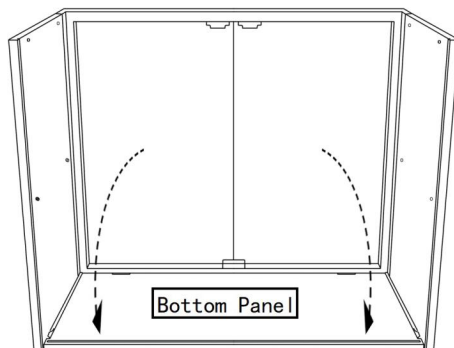


Step 3: Insert Attach Back panel (D) as shown in picture below. Ensure the Back panel (D) with the groove on Left&Right panel (B).

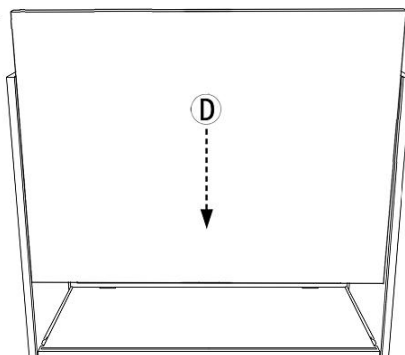


Step 4: Before place the Tabletop (A), please note that the side with a Groove aligned with the Back panel (D) as shown in below.

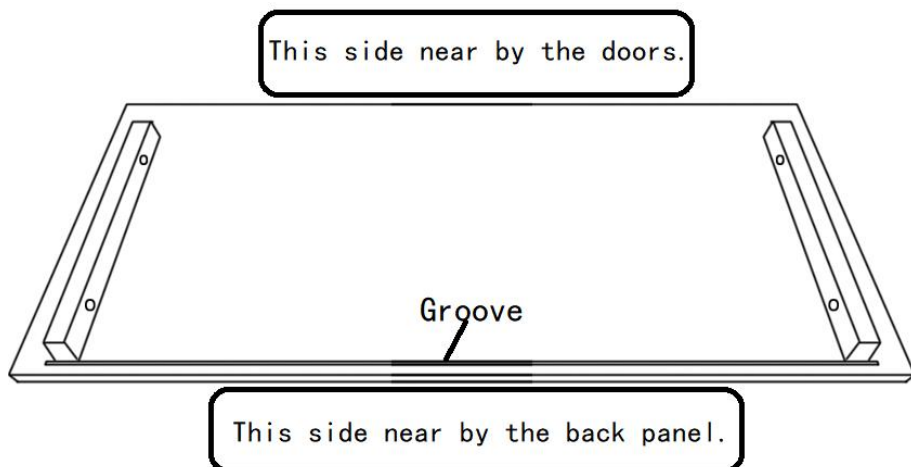


Step 5: Open the doors, attach the Tabletop (A) to the Body (B) with Hex bolts (H1) and Washers (H2) by Allen key (H4) as shown in picture below. Fully tighten all bolts.

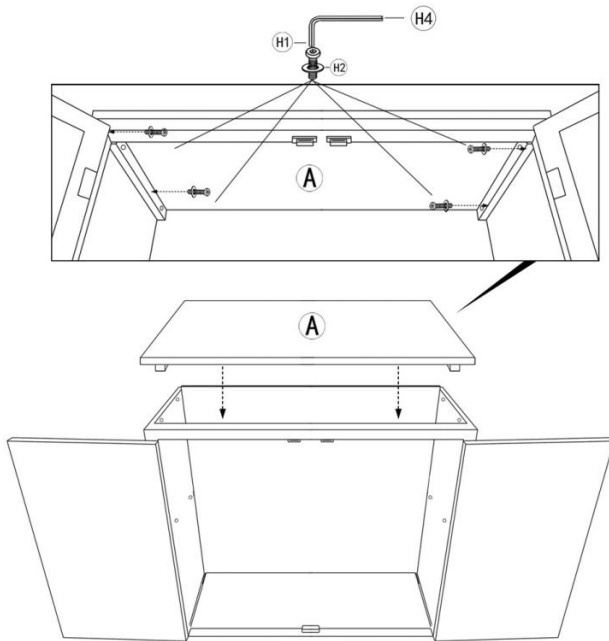


Step 6: Place the Leg (E) with Leg (F) as below photo shown. Attached the Legs (E&F) to the bottom of the cabinet with Hex bolts (H1) and Washers (H2) by Allen key (H4) as shown.

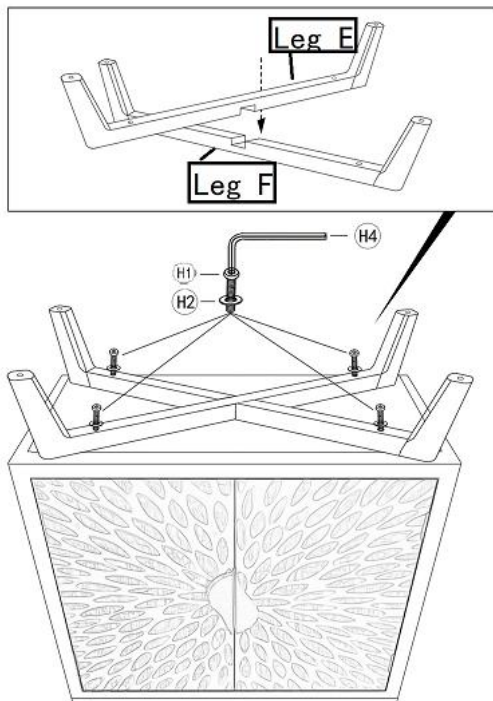


Step 7: Attach the Foot pads (H3) to the bottom of all Legs as shown in picture below.

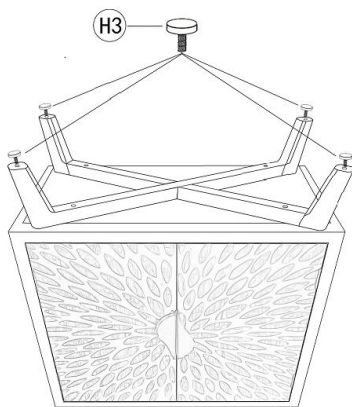


Step 8: Insert the Shelf Pins (H4) into the Left&Right Panel as below shown.
Noted: Pre-drilled holes on Left&Right panel.

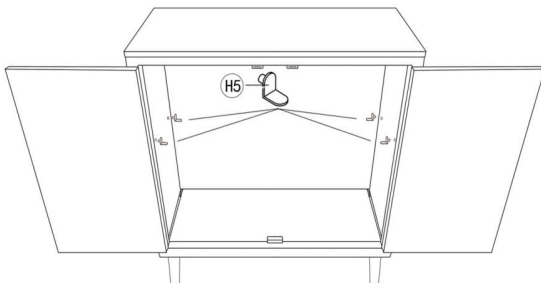

Step 9: Place the Shelf (C) inside as shown in picture below.

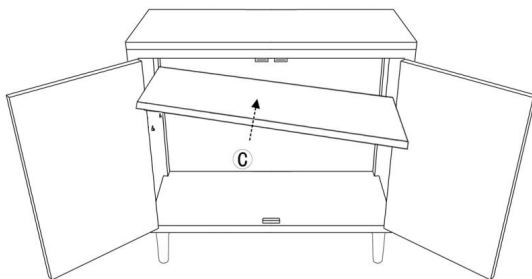

Assembly finished.

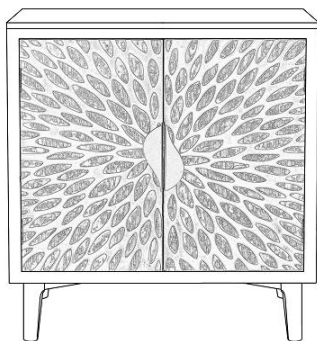

Notice:

If you have any inquiries regarding your purchase or any other products for sale, please don't hesitate to contact us at support@mi-din.com with your order ID. Our dedicated customer service team is available to assist you.