


# XWH Series Installation

www.ifilters.com

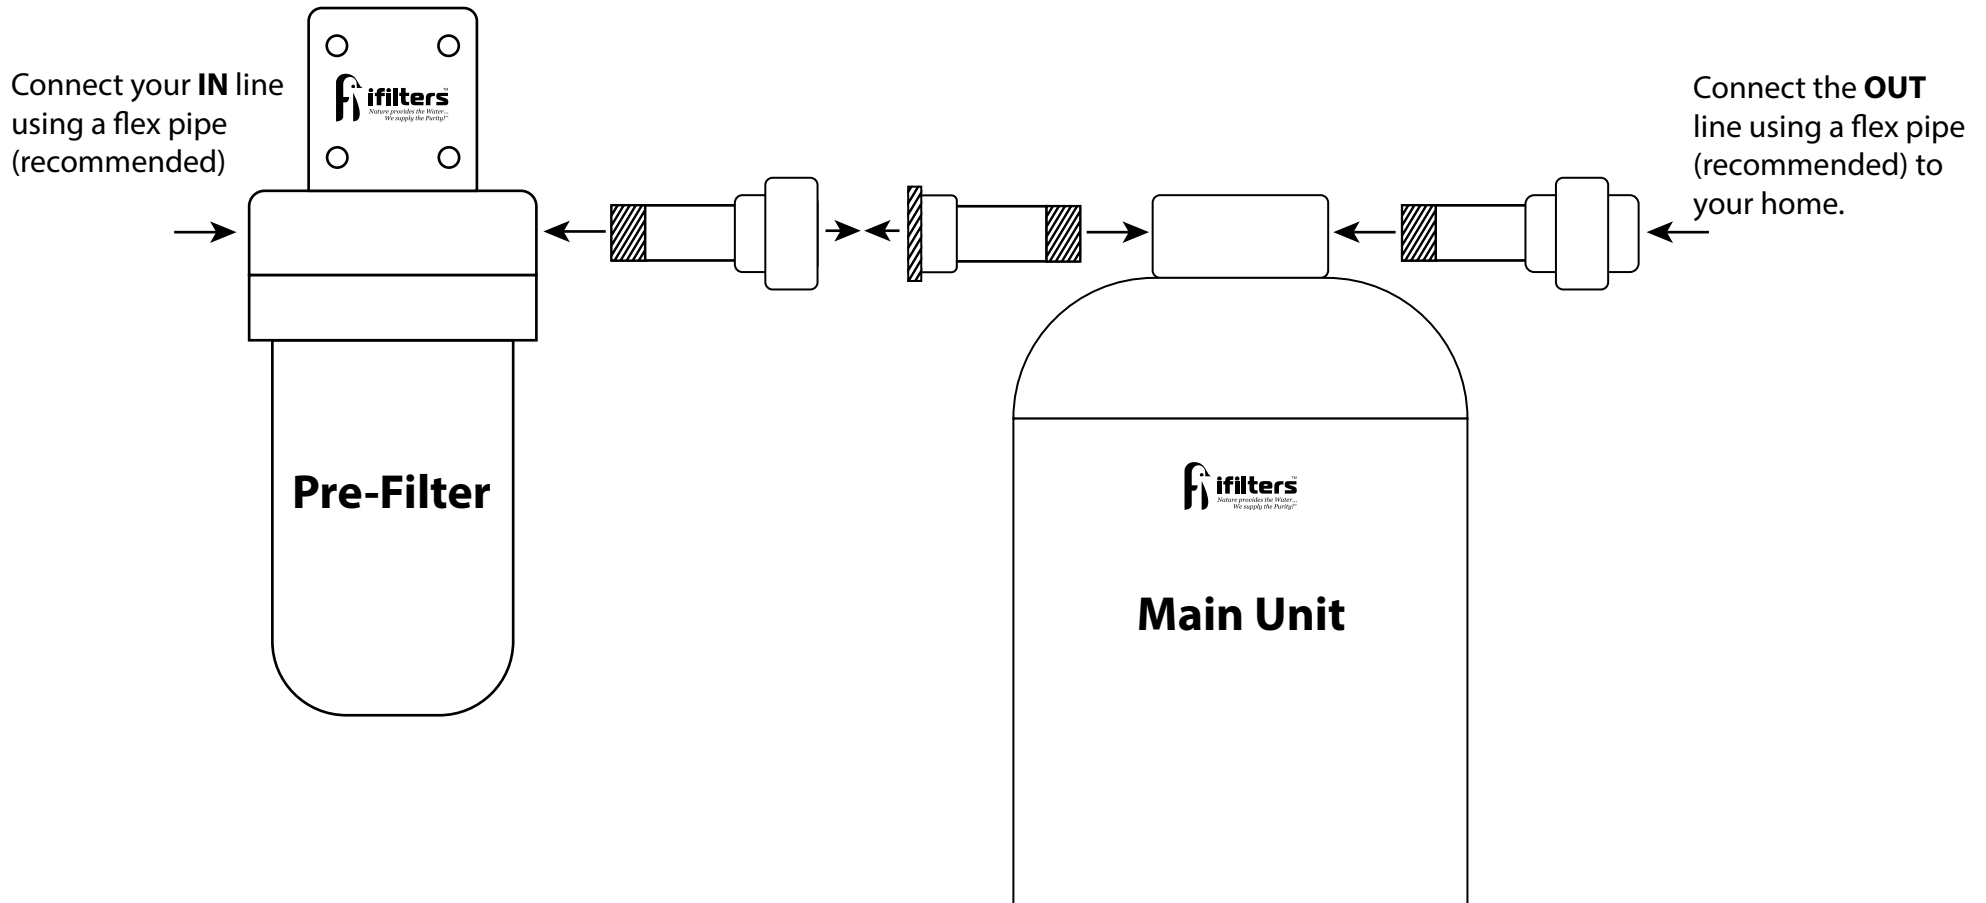

**1)** Ensure ground is leveled and the system has 2-3 feet of clearance.

**2)** Mounting the Pre-filter to the wall is optional but might be required if using flex lines. A block of wood might be required to extend the back of the pre-filter bracket to the wall.

**3)** Flush the main unit for 10-15 minutes before installing the **OUT** port to your home/business. Using a hose is recommended to avoid water damage in an in-home installation. Simply connect a hose to the **OUT** port of the main unit and run the hose to a grass or planter area.

**4)** Once the system is flushed, simply connect a Flex Line (not included) from the **OUT** port of the unit to the **IN** pipe of your home or business.

**5)** Installing a shutoff valve and a bypass valve is recommended for servicing.

**6)** Installing a ground jumper cable is also recommended to comply with local electrical laws.

\*Install this system according to your local laws. It is highly recommended to have this unit installed by a license professional.