

MDF Wainscot

32" Overlapping Assembly
INSTALLATION INSTRUCTIONS

PRIMED – READY TO PAINT

IMPORTANT WARNING!

This product will expand and contract. Loosely fit individual boards together to allow for expansion. **DO NOT** tightly press individual boards together. They **WILL** buckle when expansion occurs. Leave a minimum of 1/8" at the edge of first/last board and corner. Best installed in a climate-controlled environment. Allow ample time for product to acclimate to room temperature.

PRIMED – READY TO PAINT


PRIOR TO INSTALLATION:

- To minimize expansion or contraction of the product, open all packages. Place the pieces flat with space between each for air to circulate. Allow 72 hours for pieces to adjust to the temperature and humidity of the room in which they will be installed – not in a damp or unheated area.
- Your MDF has a primer only finish. It will require a finishing coat of paint. MDF can be painted either before or after installation. If installing in a high moisture area, we recommend that you paint the back side prior to installing.

Expansion and contraction are inherent characteristics of MDF products due to humidity. The manufacturer cannot be held liable for contraction and expansion of planks.

WALL PREPARATION:

- If walls are cracked, uneven or extremely rough, planks should be glued and/or nailed to a framework of 2" x 4", 1" x 3" or 1" x 4" strips of kiln-dried wood.
- If walls are in good condition, glue or nail wainscot directly on existing drywall, plywood or paneling.
- Note:** In rooms with extremely high moisture (e.g., saunas, bathrooms or laundry areas), apply a vapor barrier, like 4 mil polyethylene, between the studs and wainscot.

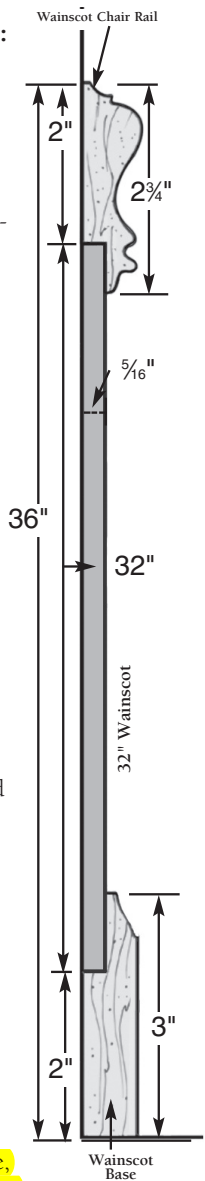





INSTALLATION

Installing planking with House of Fara Wainscot Base Trim:

- Glue or nail wainscot base trim to wall – with grooved end up.

PLANKING:

- Start with top lap edge toward corner.

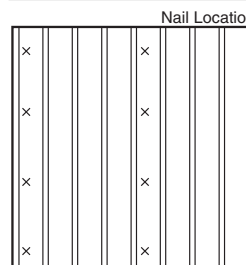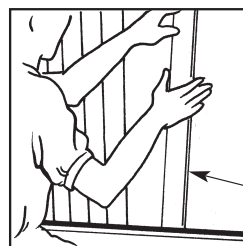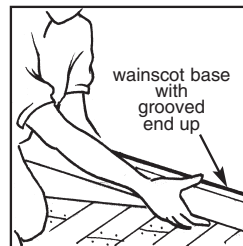

- Leave about 1/8" space between your first piece and corner, allowing for expansion.
- Make sure first piece is plumb. Secure first piece by nailing close to the overlapping edge with 1" finishing nails. (Contractor's glue can also be used.)

vertical application using grooved Wainscot Base Trim

End View

- Continue to nail additional pieces, leaving approximately 1/32" between pieces to allow for expansion/contraction. (See diagram for nail location)

- As you are working, check frequently for plumb with level or tape measure.
- When you come to a corner, rip the piece to proper width. Finish corner with corner round, cove or square stock.
- Secure with glue or 1" finishing nails.

TIPS

- Nailing:** Use nail gun for fastest, easiest application. Putty nail holes before painting.
- Your MDF has a primer only finish, it will require a finishing coat of paint. MDF can be painted either before or after installation.
- Check frequently for plumb with level or tape measure.
- Gluing:** Use quality panel glue to secure.
- To maintain House of Fara MDF products, simply wipe with damp cloth.
- An oil based paint will offer more moisture resistance than a water based paint.