

Classic Home

Installation For 2" and 2 1/4" Wood Pole and Drapery Bracket #9323 Pair


House Parts urges you to engage a professional installer.

Start at the Window where the Treatment will be Installed

Brackets should be installed into window frame or studs.

Only light weight fabric drapes should be hung on installations into Drywall using the mollie/anchors which are included.

Common installations for window treatments are:

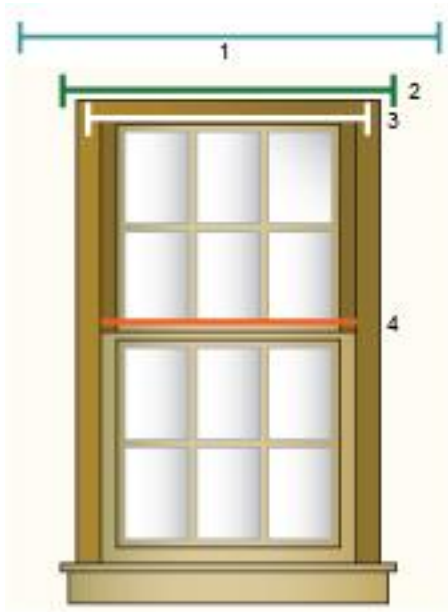

- 1) To make windows appear larger and allow more light into the room, mount the pole at the top edge of the trim and allow the rod width to extend beyond the actual width of the window by 3" to 10".
- 2) Above the window on the wall
- 3) On the window frame
- 4) Inside the window frame

Drapery finials will add approximately 6 inches to the width of the overall installation.

Measuring for the Height of Your Draperies

To determine the vertical height for mounting the brackets, you need to decide if the bottom of the draperies should fall at the window sill, below the sill, fall to the floor or puddle on the floor.

The top of the draperies should be approximately 4" above the glass so the back of the pleats will not be visible from outside the window.

Classic Home

Determine the Measurements of your Brackets

Three important measurements to know are:


Projection – the distance from the front of the bracket to the wall

Return – the distance from the center of the bracket cup to the wall

Clearance – the distance from the back of the pole to the wall

Pay attention to the Projection and Return measurements of the bracket.

The **Return** for a standard drapery hardware bracket is 3 ½ inches.

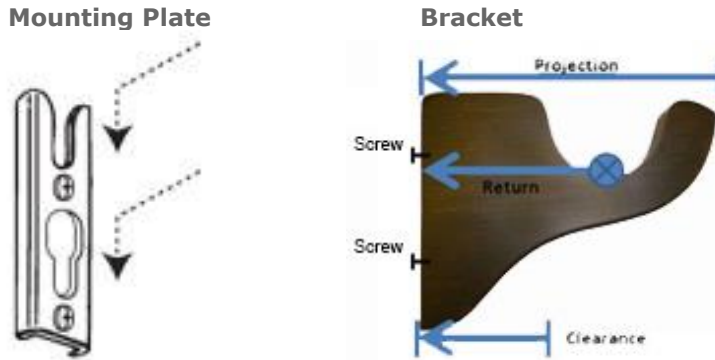

Bracket Hardware for Wood Pole Installation

These brackets come with a plate that mounts to the wall or window frame.

Loosen the screws on the back of the bracket holding the mounting plate and remove the plate.

Tighten the screws on the bracket a bit.

Mark where you want the plate and drill the holes with a 1/8" wood drill bit. Be sure to mount the plate with the open hole at the top. The screws on the back of the bracket slide into the plate. To achieve a firm grip, you can adjust of the screws until the bracket tightly fits onto the mounting plate.