



ASSEMBLY INSTRUCTIONS

HI 224 (MOP) (4 DOOR PANTRY)

~ Before assembly, please read the instructions ~ ~ Follow these steps to assemble the 4 Door Pantry ~
~ Keep these instructions for future reference ~

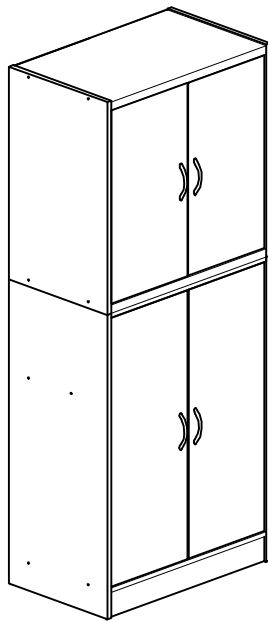

FRONT VIEW

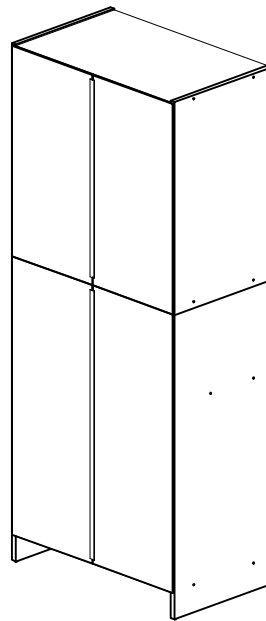

BACK VIEW




THIS INSTRUCTION BOOKLET CONTAINS IMPORTANT INFORMATION ABOUT ASSEMBLY AND SAFETY. PLEASE READ AND KEEP FOR FUTURE REFERENCE.

Parts




The parts of the product are packed in one box.
There are inner box(es) or package(s) that included components and accessories required to complete the assembly

I) Main Unit :

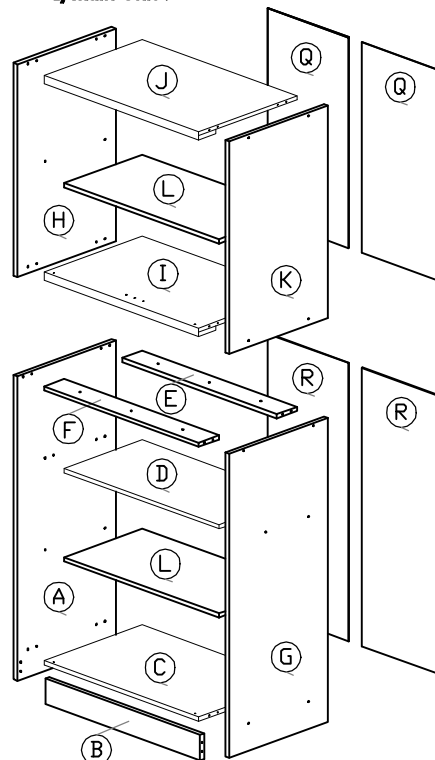


II) Door :

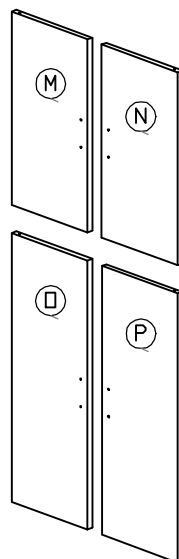

A) Left Side Panel

1 Pc.
1069 x 368 x 15mm



B) Kick Panel

1 Pc.
578 x 89 x 15mm




C) Bottom Panel

1 Pc.
578 x 368 x 15mm



D) Partition Panel

1 Pc.
578 x 292 x 15mm



E) Back Strengthening Panel

1 Pc.
578 x 76 x 15mm




F) Front Strengthening Panel

1 Pc.
578 x 76 x 15mm



G) Right Side Panel

1 Pc.
1069 x 368 x 15mm



H) Left Side Panel

1 Pc.
747 x 368 x 15mm



I) Partition Panel

1 Pc.
578 x 368 x 15mm



J) Top Panel

1 Pc.
578 x 368 x 15mm



K) Right Side Panel

1 Pc.
747 x 368 x 15mm



L) Adjust Panels

2 Pcs.
578 x 292 x 15mm



M) Left Door

1 Pc.
678 x 284 x 18mm




N) Right Door

1 Pc.
678 x 284 x 18mm



O) Left Door

1 Pc.
945 x 284 x 18mm




P) Right Door

1 Pc.
945x 284 x 18mm




Q) Back Panels

2 Pcs.
740 x 301 x 3mm


















R) Back Panels

2 Pcs.
978 x 301 x 3mm



Hardware And Accessories


1 Screw M6 x 40mm 20 Pcs.   Pvc Cap 20 Pcs.	2 Handle 4 Pcs.   SCREW M4 X 20mm 8Pcs.	3 Pvc Dowel 20 Pcs. 	4 SHELF SUPPORT 8 Pcs. 	5 Nail 60 Pcs. 
6 Allen Key 1 Pc. 	7 MAGNET + METAL PIECE 8 Sets.   Screw M3 x 12mm 8 Pcs.	8 DOOR SUPPORT 8 Pcs. 	9 Protection Nail 4 Pcs. 	10 Screw M4 x 25mm 6 Pcs. 
11 H-PROFILE 1 Pc. 	12 H-PROFILE 1 Pc. 			







IMPORTANT

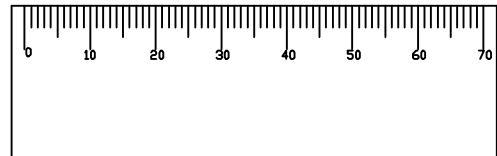Check the measure of the bolts on the scale below or with a measuring tape before applying them in the parts

Observe correctly the application and the position of each bolt accessory, as the step-by-step instructions, before applying them in the parts.



Required Or Recommended Tools

Sample Screwdriver 	Sample Hammer 	Sample Measuring Tape 	Sample Electric Screwdriver 
--	---	---	---



IMPORTANT!

The required or recommended tools for assembly are not supplied with the product.



Hodedah

www.hodedah.com
support@hodedah.com

- This product contains small components, please ensure that they are kept away from small children.
- THIS INSTRUCTION BOOKLET CONTAINS **IMPORTANT** SAFETY INFORMATION.PLEASE READ AND KEEP FOR FUTURE REFERENCE.



DO NOT RETURN PRODUCT TO THE STORE.

If a part is missing or damaged, email our customer service. We will gladly ship your replacement parts **FREE** of charge.

Need Parts or Assistance?

email us at

support@hodedah.com

For prompt, reliable service; please have your assembly manual ready.



Hodedah

www.hodedah.com
support@hodedah.com

Thank you for purchasing from Hodedah

**To learn more about hodedah and our products visit
www.hodedah.com**

READ BEFORE BEGINNING ASSEMBLY

- Read each step carefully. It is very important that each step of instruction is performed in the correct order. If these steps are not followed in sequence, assembly difficulties will occur.
- Make sure all parts are included. Most parts are labelled or stamped on the raw edge.
- Work in spacious area, preferably on a carpet, near the place the unit will be used.
- Do not use power tools to assemble your furniture. Power tools may strip or damage the parts.

HELPFUL HINTS

- Call us if you need assistance.
- Move your new furniture carefully, with two people lift and carry the unit to it's new location.
- Never push, drag or pull your furniture (especially on carpet).

Warranty Information

Hodedah warrants this product to be free from defects in material and workmanship agrees to remedy any such defect. This warranty covers one year from the date of original purchase. This is solely limited to be repair or replacement of defective parts and no assembly labor is included.

This warranty does not apply to any product which has been improperly assembled, subjected to misuse or abuse or which has been altered or repaired in any way.


To obtain warranty service, purchaser must present original bill of sale. Components repaired or replaced warranted through the remainder of the original warranty period only. The defective components will be repaired or replaced without charge, subject to the terms and conditions described above.

For help with assembly, identifying parts, product information or to order parts, please contact us:




Call us at:
718-456-0505
Monday-Friday
9:00am-5:00pm

Visit our website:
www.hodedah.com

Pre - Assembly

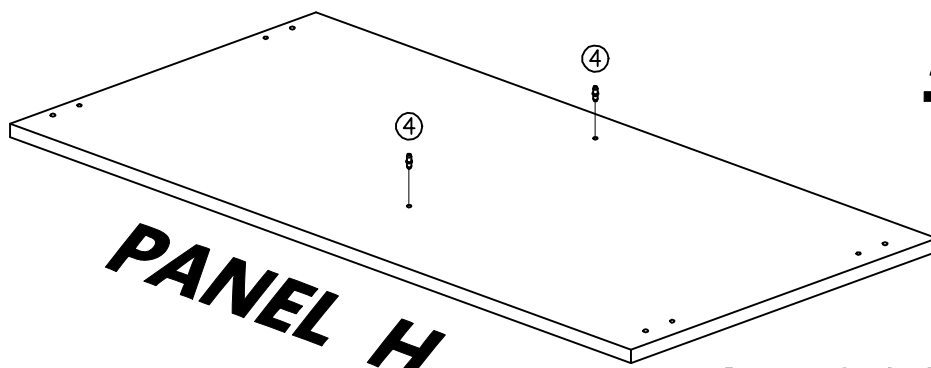


Insert 8 shelf supports ④ into panels A,G,H and K' s non thru holes as shown.

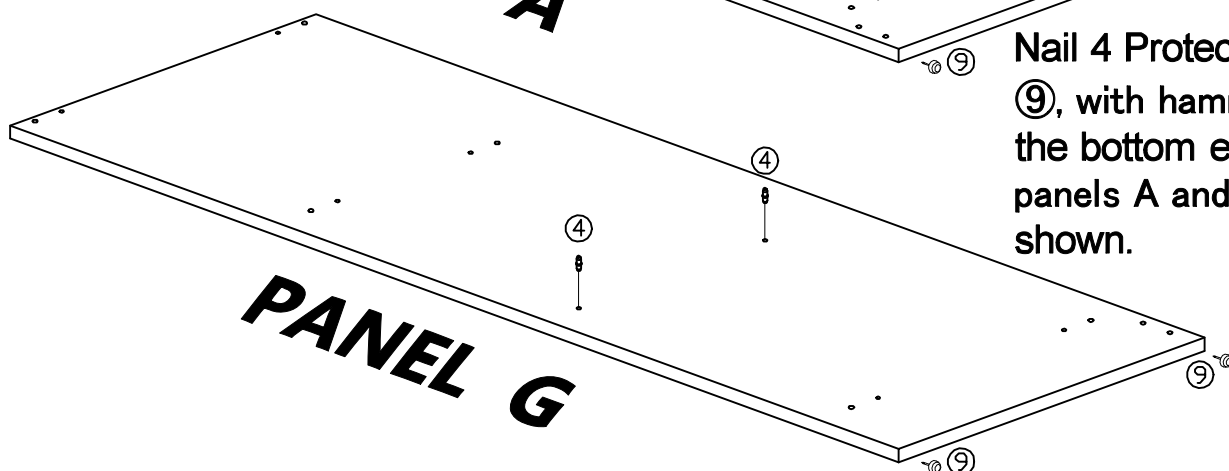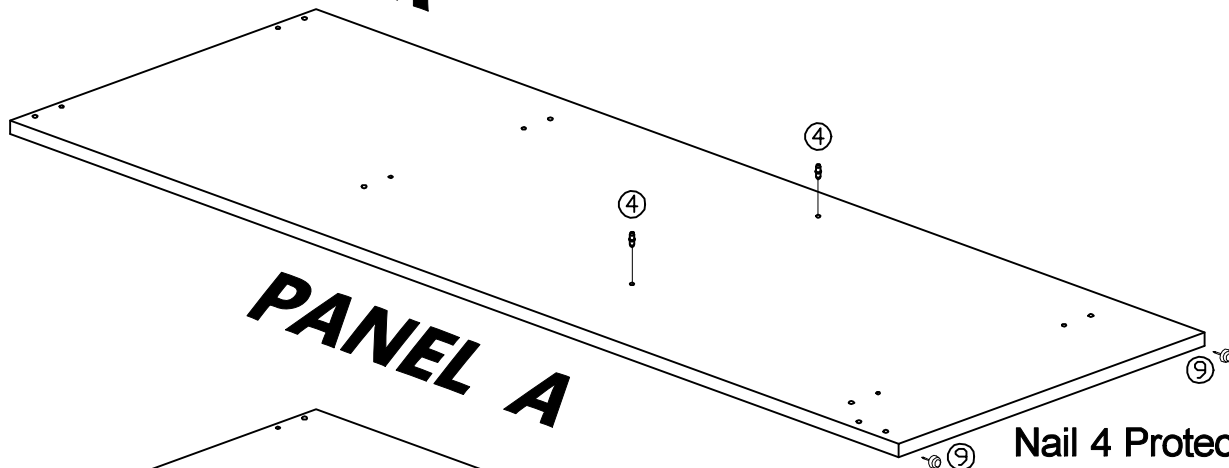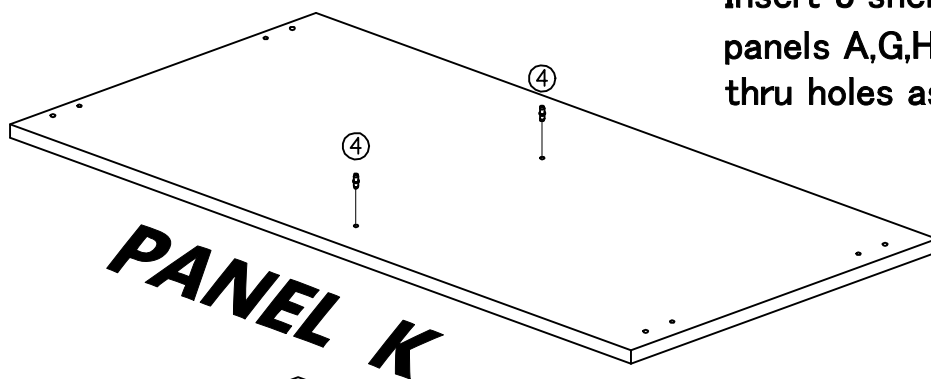






Nail 4 Protection Nail ⑨, with hammer onto the bottom edge of panels A and G as shown.

Pre - Assembly




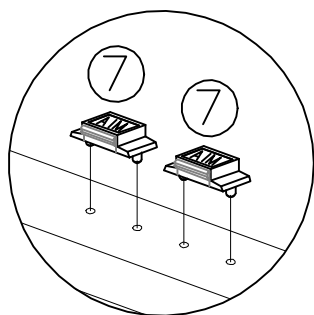


Insert magnets ⑦ onto panels C, F, I and J's non-thru holes as shown, make sure the magnets' iron side facing frontward.

Insert PVC dowels ③ to panels B, C, D, E, F, I and J's non-thru holes as shown, using hammer to gently tap them in.

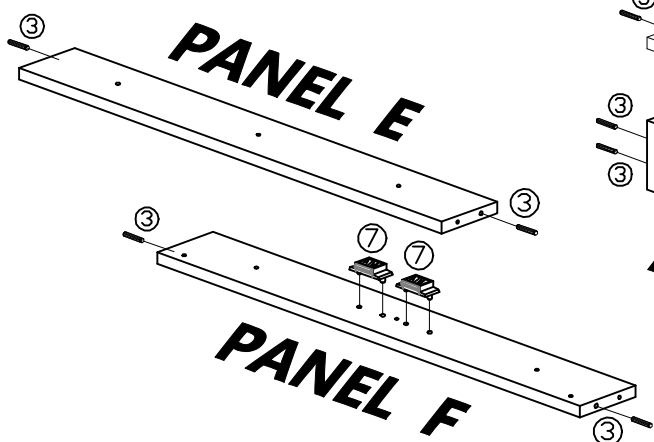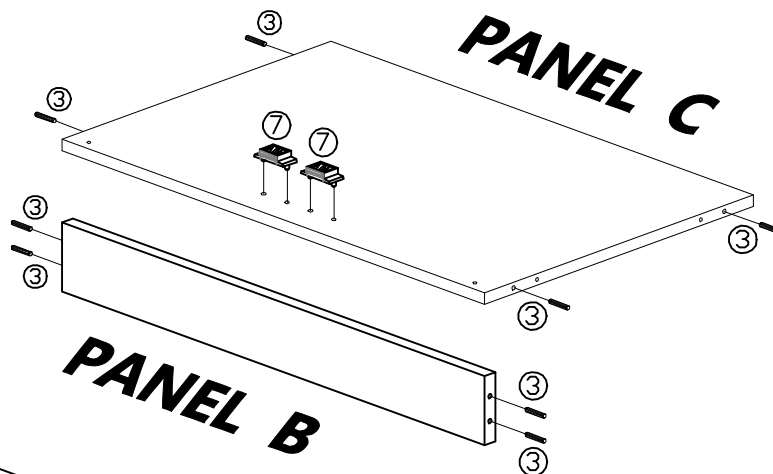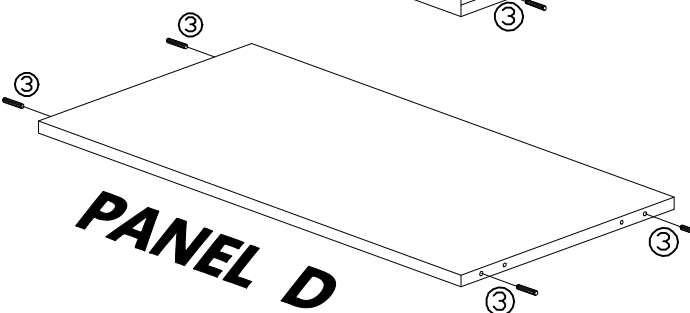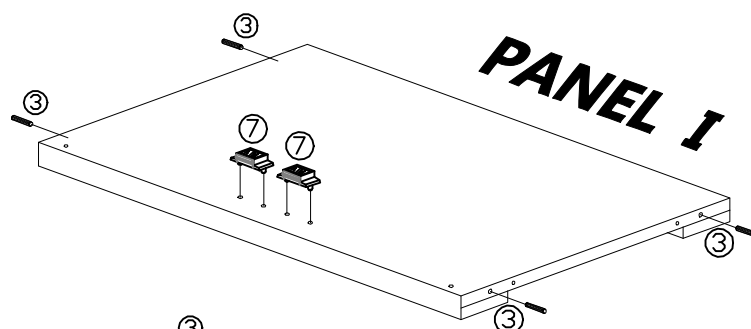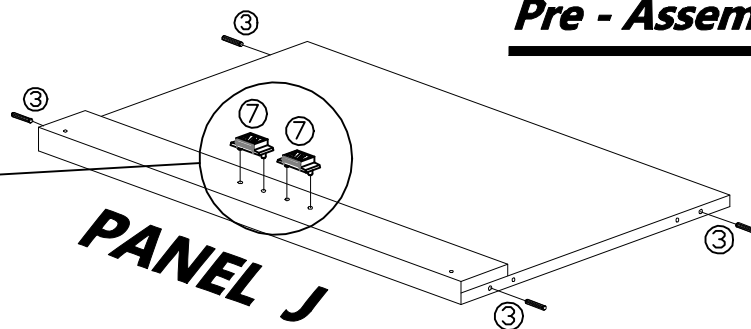

Door Panel Assembly Instruction Step 1

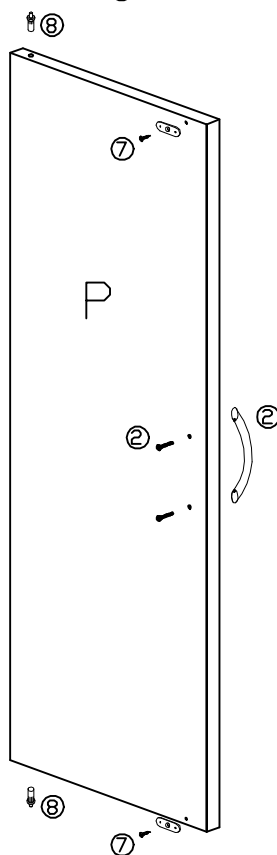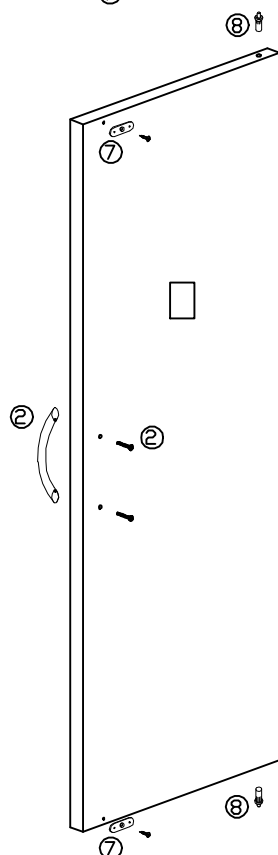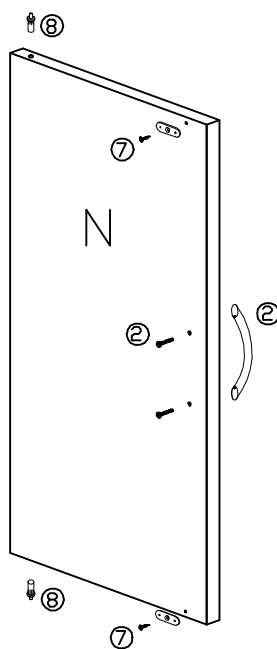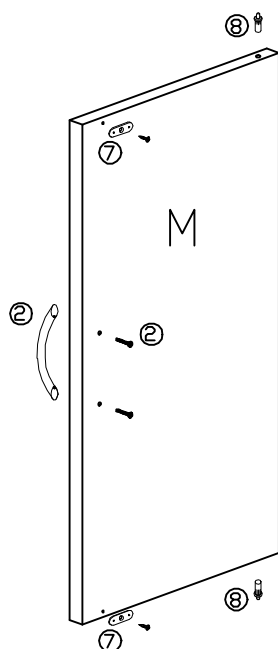


Fix and tighten metal pieces ⑦ with screw ⑦ at all door panels M,N,O and P as shown.



Insert door supports ⑧ to both ends of all door panels M,N,O and P.

Tighten 2 screws ② from all door panels M,N,O and P's thru hole into the handle ② holes.

Assembly Instruction Step 1

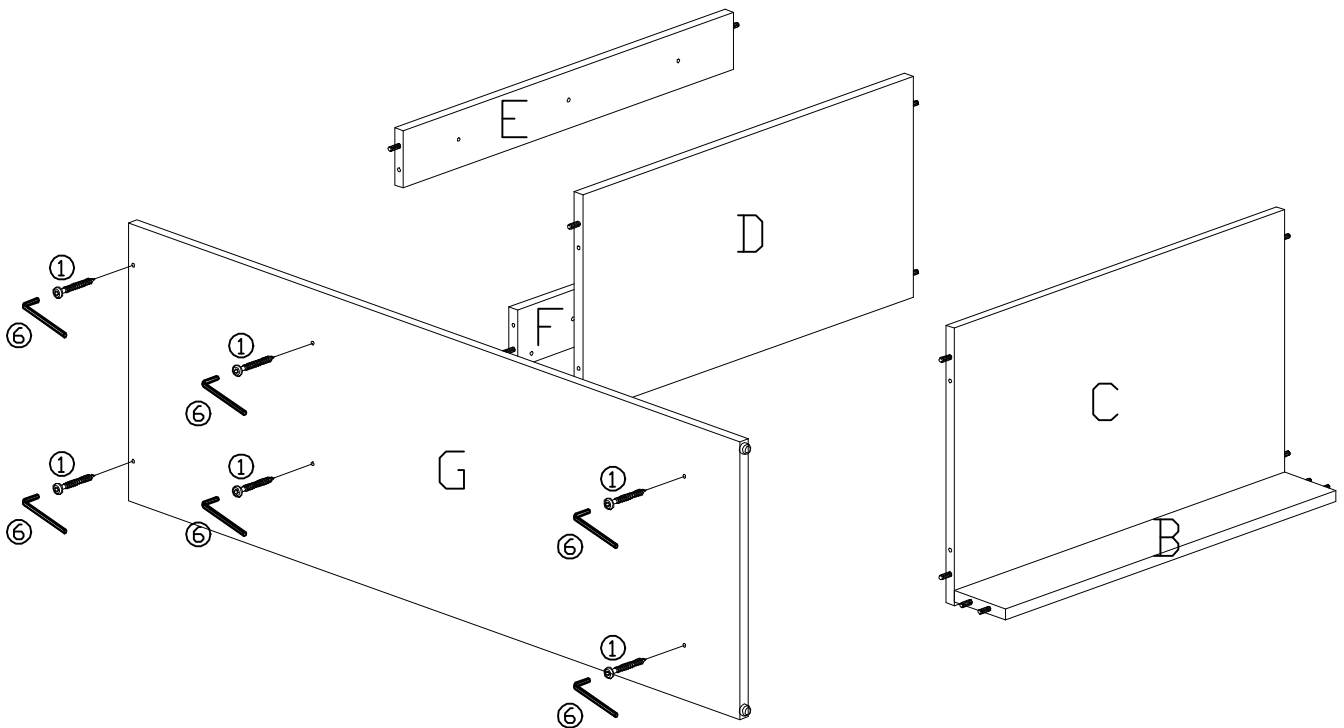- * Place and fix Panels B,C,D,E,F onto Panel G by inserting the (Left) dowels onto the non-thru holes at Panel G.
- * Using allen key ⑥ to tighten screw ① from the 6 thru holes of panel G.






<p>① Screw M 6 x 40mm 8 Pcs.</p> 	<p>⑥ Allen Key 1 Pc.</p> 
--	--

CAUTIONS : When inserting the PVC Dowels to non-thru holes, don't push to hard. Otherwise, the side panels (A,G,H & K) may be damaged.

Assembly Instruction Step 2

- * Place and fix Panels B,C,D,E,F onto Panel A by inserting the (Right) dowels onto the non-thru holes at Panel A.
- * Using allen key ⑥ to tighten screw ① from the 6 thru holes of panel A.

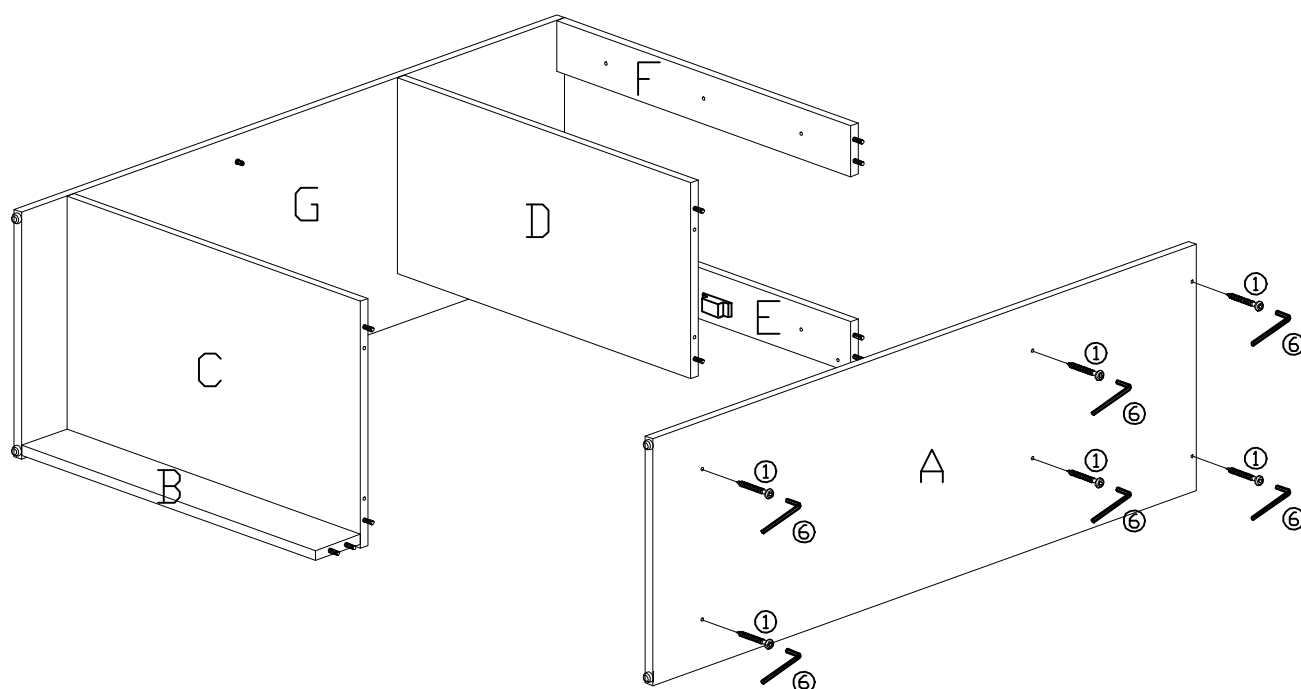


<p>① Screw M 6 x 40mm 8 Pcs.</p> 	<p>⑥ Allen Key 1 Pc.</p> 
--	--

CAUTIONS : When inserting the PVC Dowels to non-thru holes, don't push to hard. Otherwise, the side panels (A,G,H & K) may be damaged.

Assembly Instruction Step 3


Place 2 back Panels R onto the back of the main unit, and join 2 panels R together with H-profile by slotting one side each of panel R into the track of H-profile. Then align them properly for nailing.



Then use hammer to nail the nails one by one and at center of 4 side edges. Gap between 2 nails should be about 100mm for all.

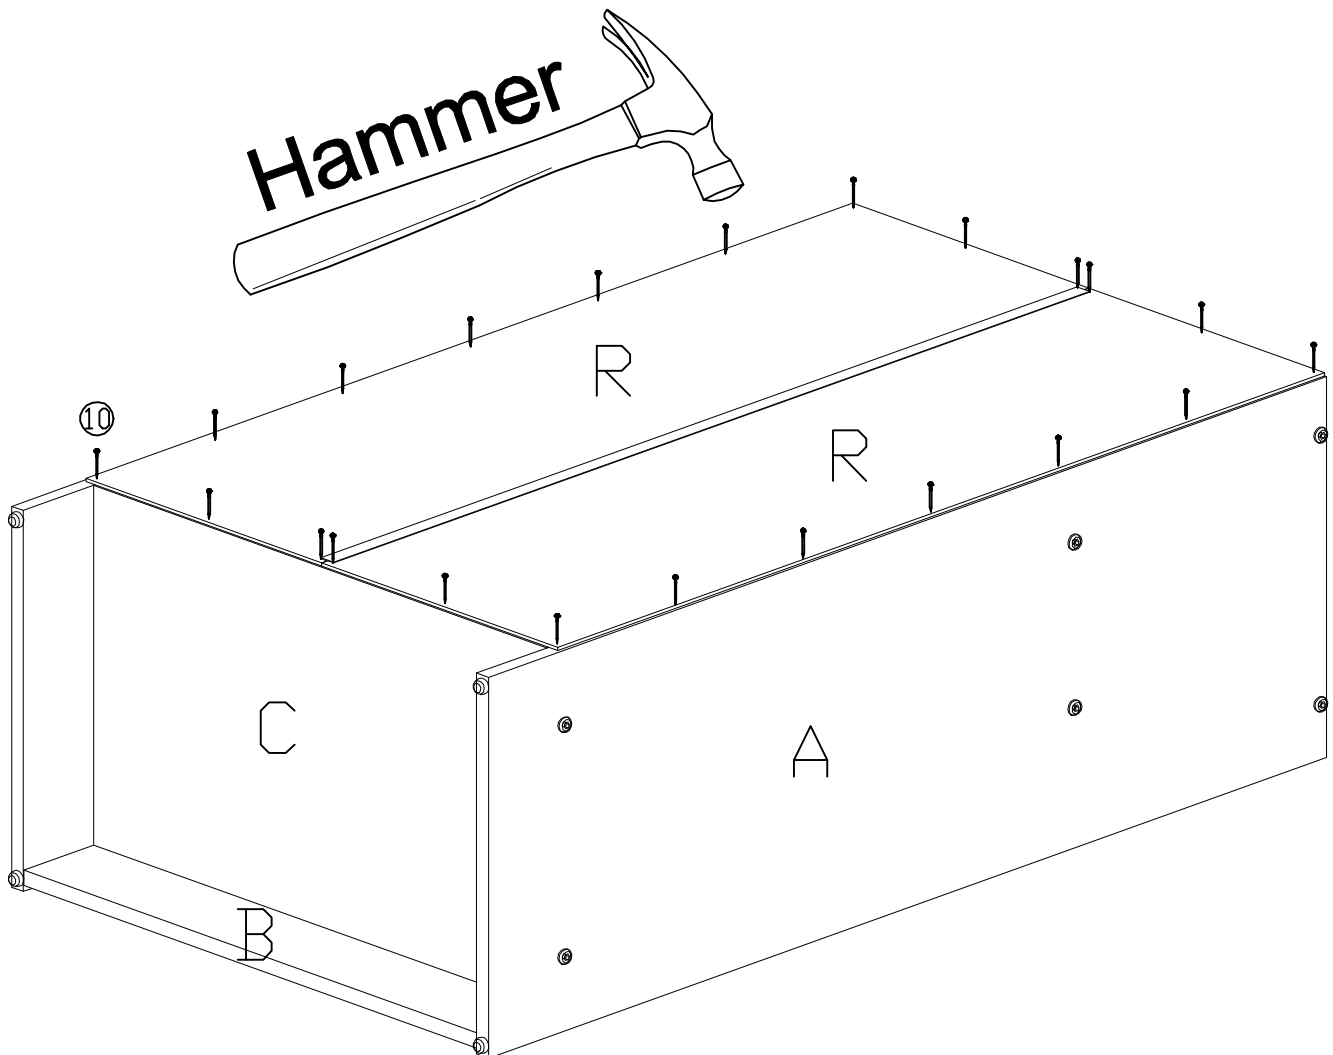

Assembly Instruction Step 4

- * Place and fix Panels I and J onto Panel K by inserting the (Left) dowels onto the non-thru holes at Panel K.
- * Using allen key ⑥ to tighten screw ① from the 4 thru holes of panel K.

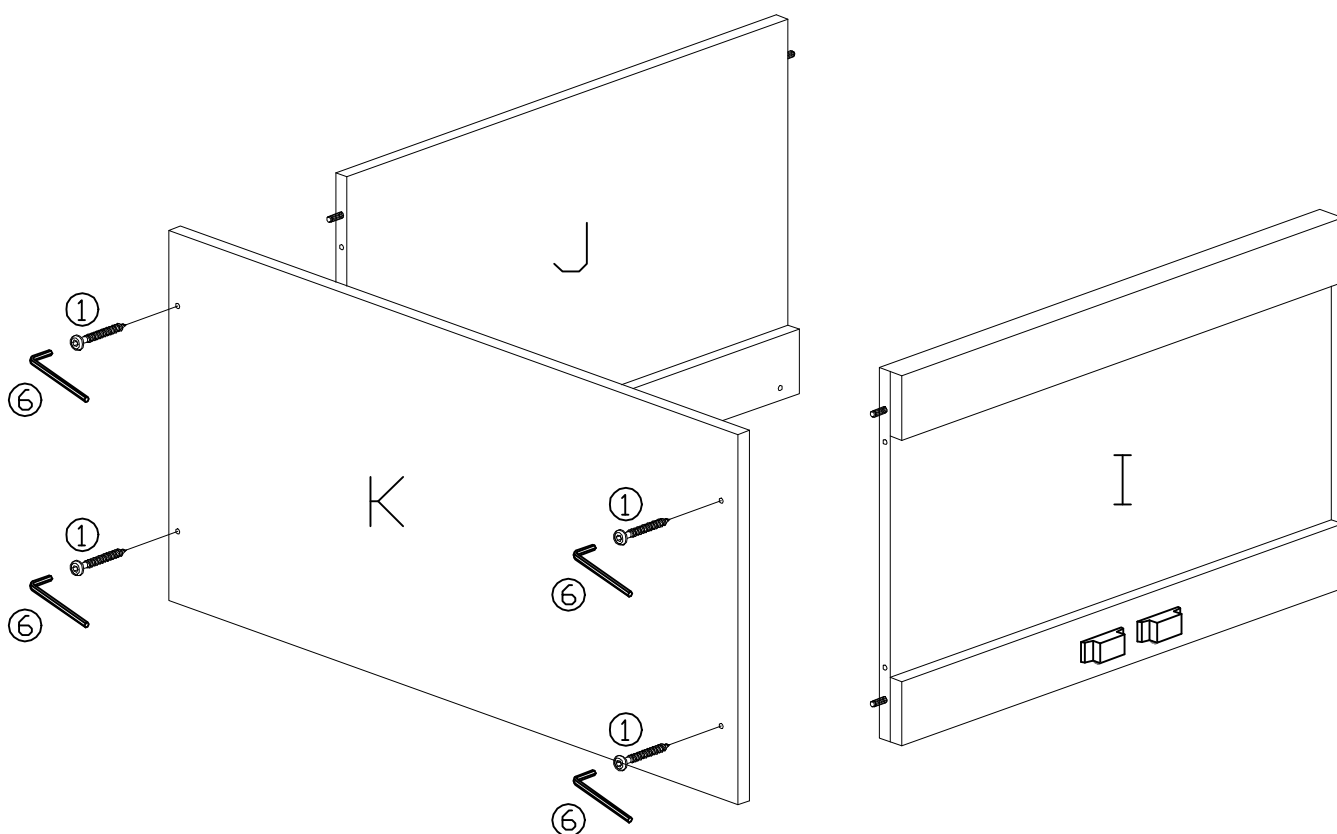




<p>① Screw M 6 x 40mm 8 Pcs.</p> 	<p>⑥ Allen Key 1 Pc.</p> 
--	--

CAUTIONS : When inserting the PVC Dowels to non-thru holes, don't push to hard. Otherwise, the side panels (A,G,H & K) may be damaged.

Assembly Instruction Step 5

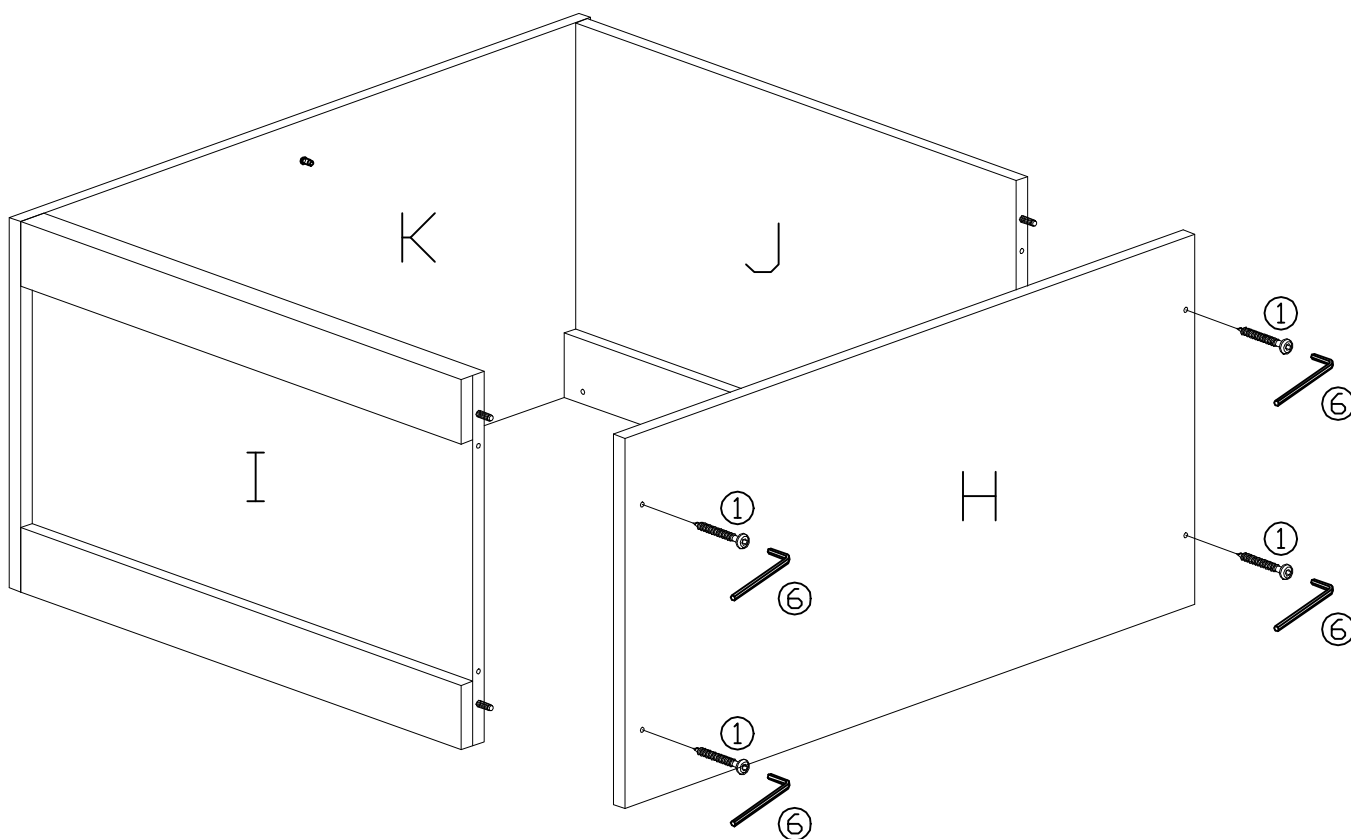- * Place and fix Panels I and J onto Panel H by inserting the (Right) dowels onto the non-thru holes at Panel H.
- * Using allen key ⑥ to tighten screw ① from the 4 thru holes of panel H, one by one.




<p>① Screw M 6 x 40mm 8 Pcs.</p> 	<p>⑥ Allen Key 1 Pc.</p> 
---	---

CAUTIONS : When inserting the PVC Dowels to non-thru holes, don't push to hard. Otherwise, the side panels (A,G,H & K) may be damaged.

Assembly Instruction Step 6

Place 2 back Panels Q onto the back of the main unit, and join 2 panels Q together with H-profile by slotting one side each of panel Q into the track of H-profile. Then align them properly for nailing.


Then use hammer to nail the nails one by one and at center of 4 side edges. Gap between 2 nails should be about 100mm for all.

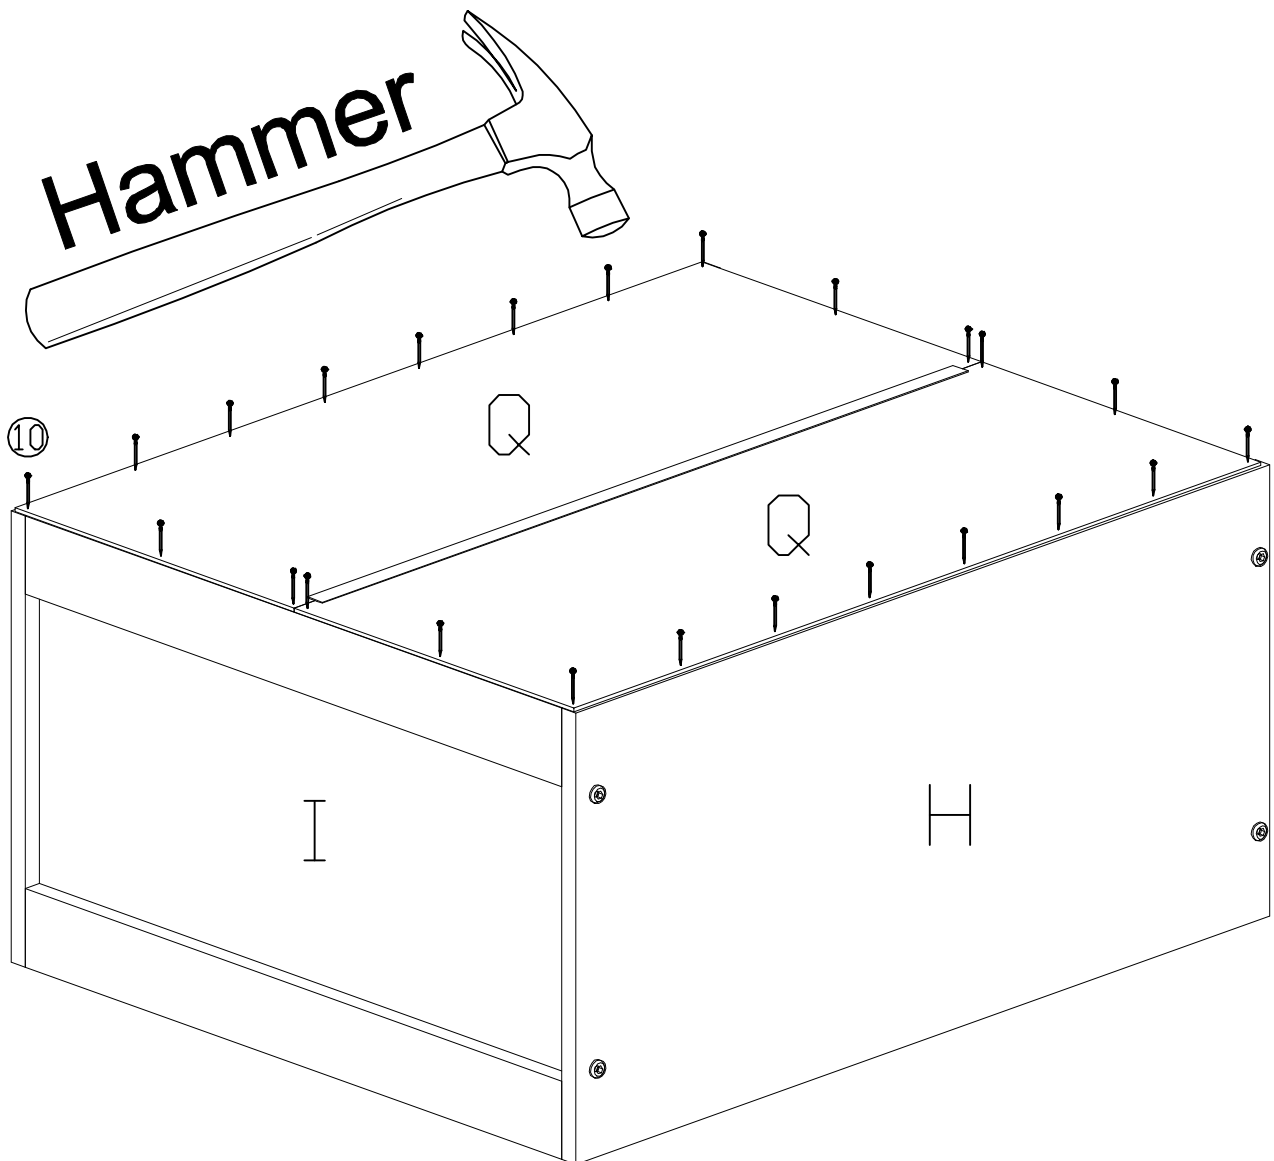

Assembly Instruction Step 7


Join upper part and lower part together as picture shown.

Tighten screw ⑩ from the 6 thru holes of panels F and E to non-thru hole of panel I.

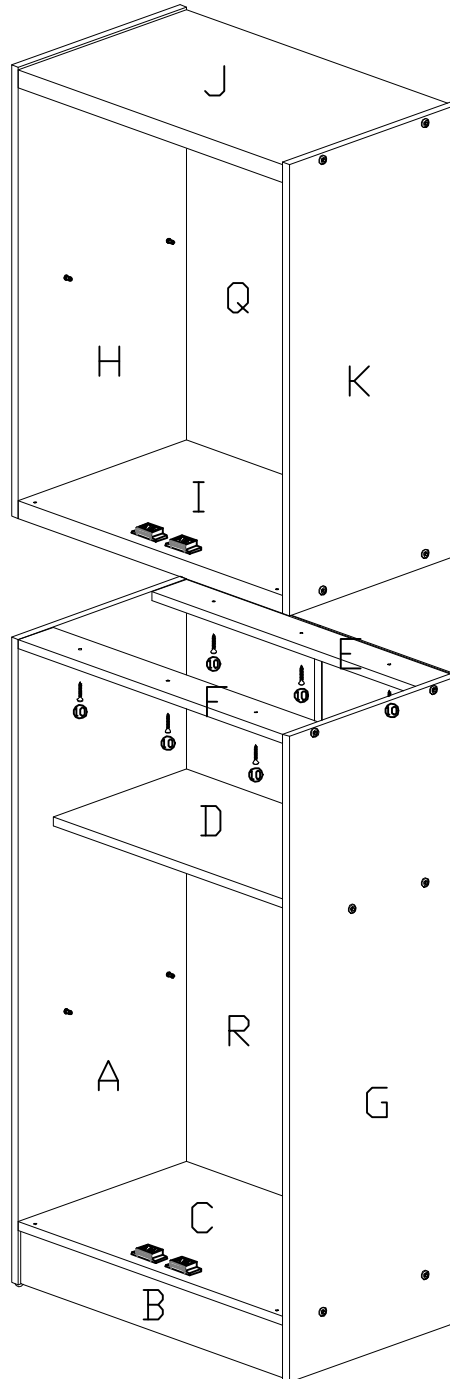


Assembly Instruction Step 8

Put adjusting panels L onto shelf supports as shown

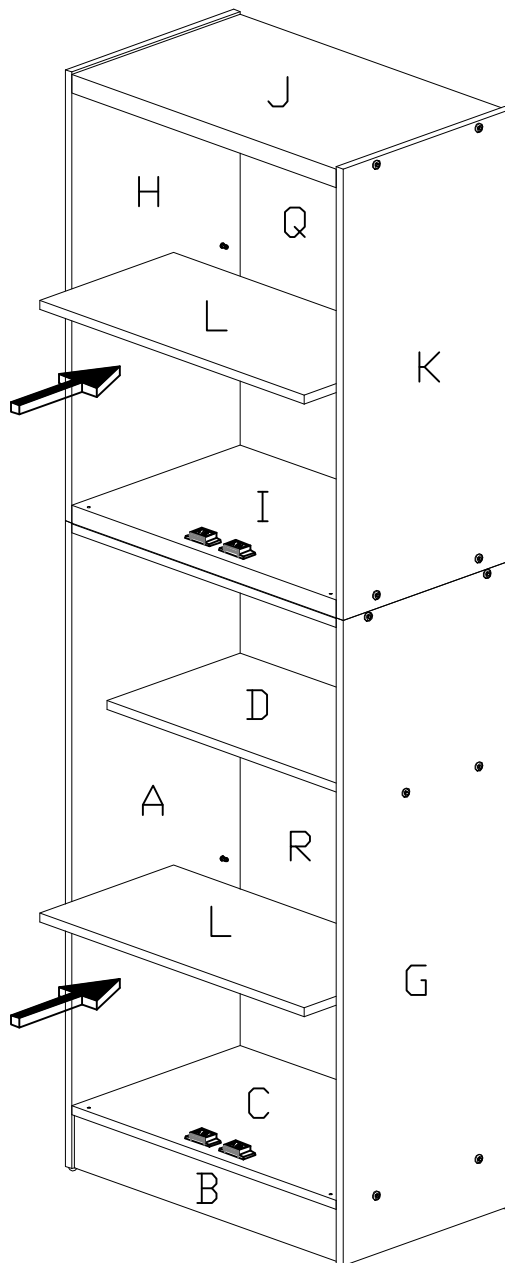



Assembly Instruction Step 9

Fix door panels M, N, O and P by pushing and slotting the door supports ⑧ onto each holes at bottom of panels J, I and top of panel C and I.

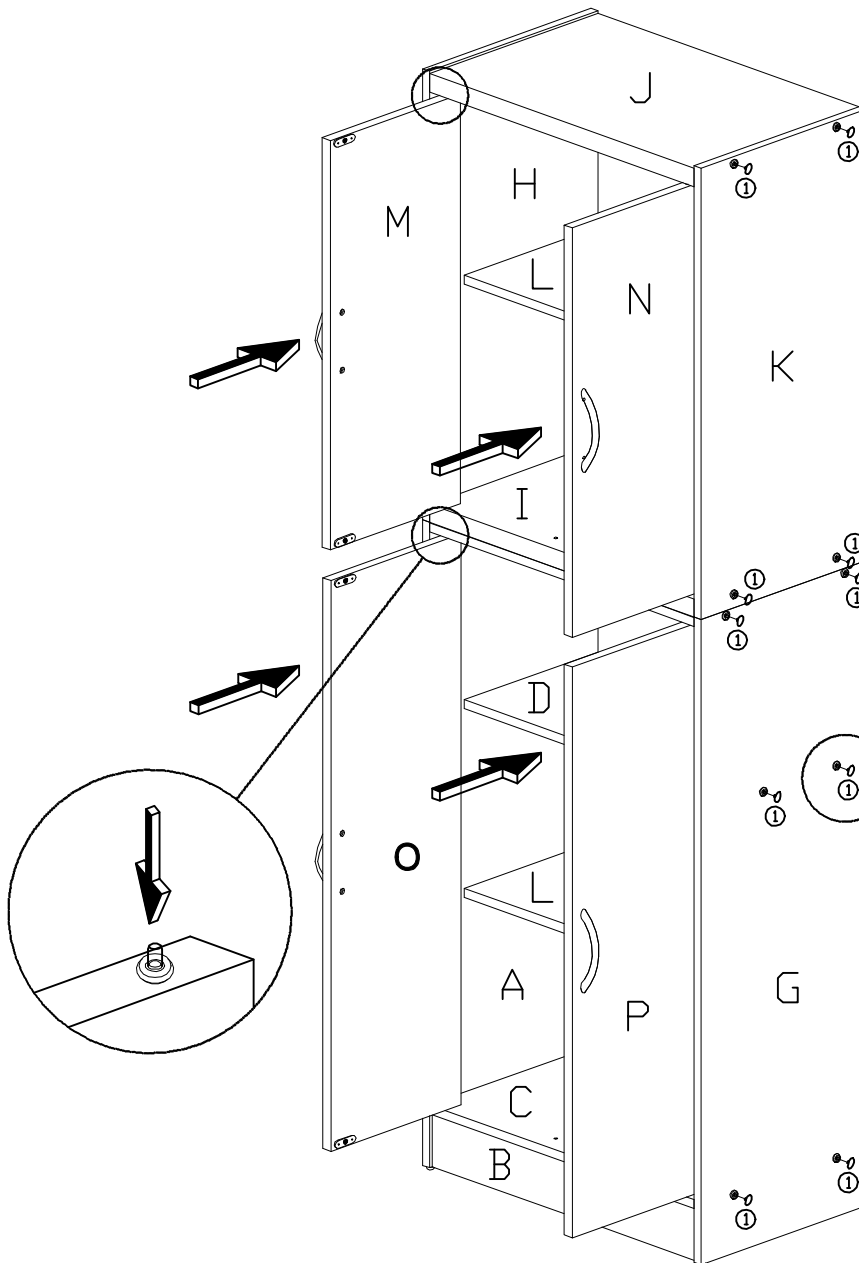

Cover all the screws ①' head with PVC cap ① provided by pushing cover's stem onto the hole of screw heads one by one for all screws.

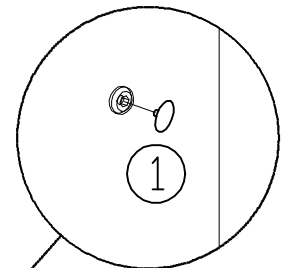

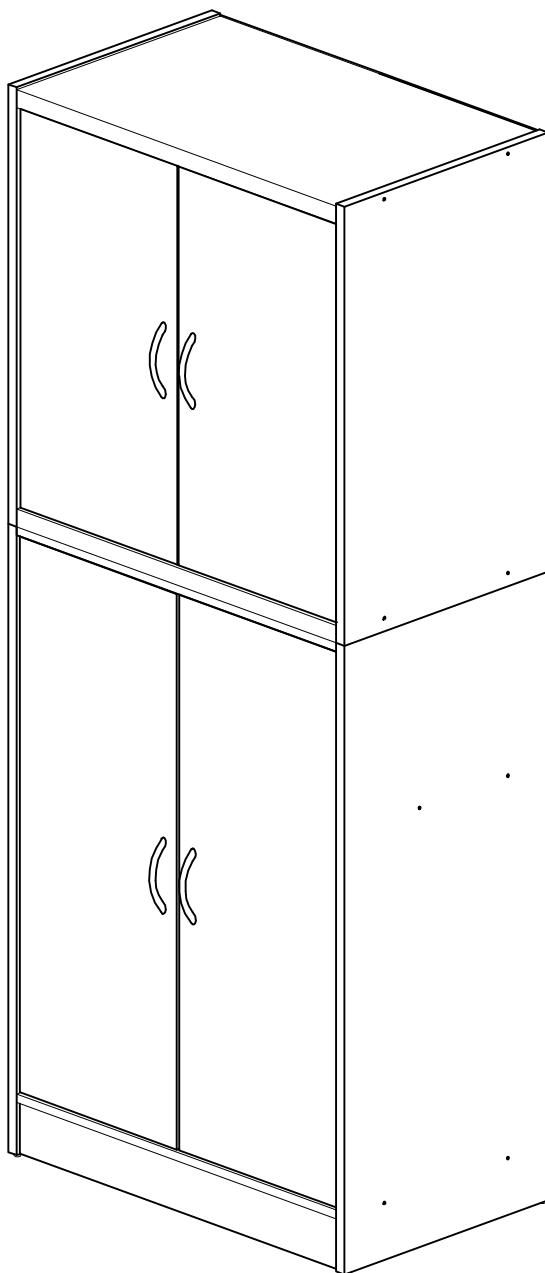

Completion

In the interest of our environment please dispose of all packaging thoughtfully.