

### PACKAGE CONTENTS

A - (1) 1-Gang Low Voltage Mounting Bracket


### TOOLS NEEDED

- Pencil
- Drywall Saw or Utility Knife

## Installation


### 1 TRACING THE BRACKET

- Hold the bracket backwards against the wall in desired location and trace the inside with a pen or pencil.

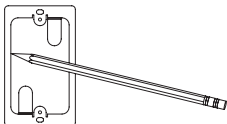


### 2 CUTOUT THE HOLE

- Use a drywall saw or utility knife to cutout the hole in the install location.

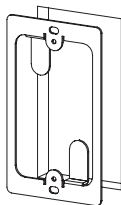


### 3 PLACING THE BRACKET

- Place the bracket into the cutout and bend the tabs to secure the bracket in place.

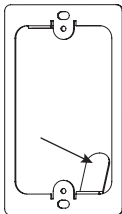

### 4 PULLING THE CABLES

- You can now pull any low voltage cables through the opening and install any 1-gang cable plate.

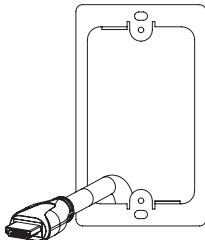

## Safety Information

Please read all instructions and safety information before use.  
Retain this manual for future reference.



**CAUTION:** When using tools always follow the manufacturer's safety guidelines.