




A (x1)

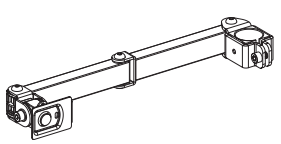


B (x1)

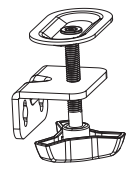


C (x1)



D (x1)




E (x1)



F (x1)



G (x1)



H (x2)



I (x1)
M5x16



J (x1)
M10x20



K (x3)
M6x10



L (x1)
4mm



M (x1)
6mm




M-A (x4)
M4x12




M-B (x4)
D5


1

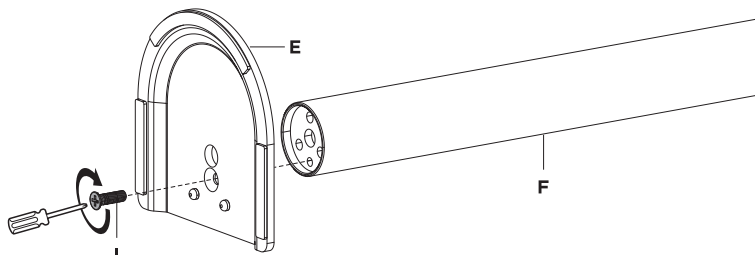

2 Clamp Mounting

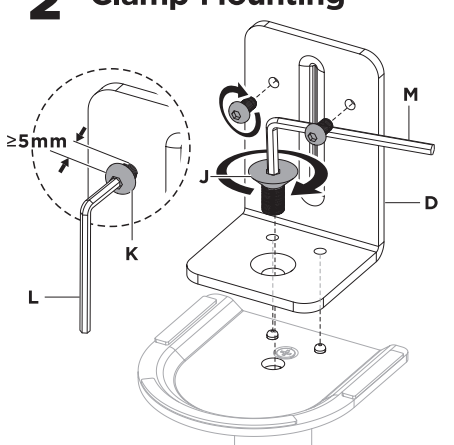

Grommet Mounting

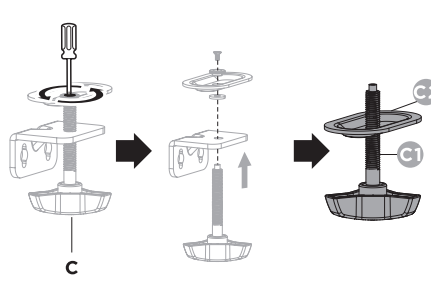

Desktop with Existing Through-Hole.


10-40mm

ø10-60mm

OR


10-40mm

ø 10mm (ø 3/8")

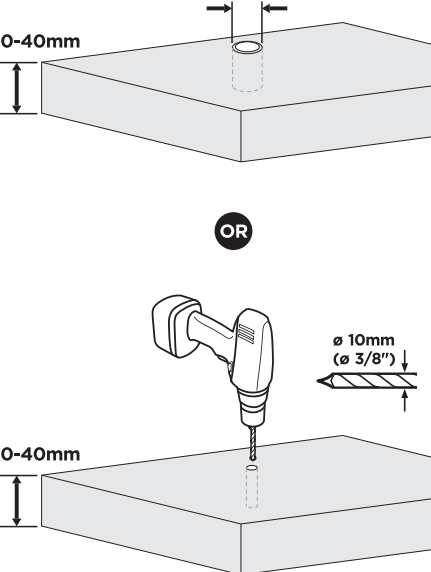


OR


10-40mm

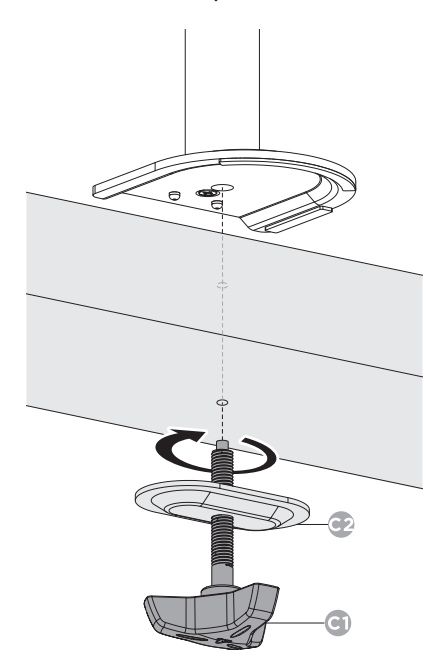

45-85mm

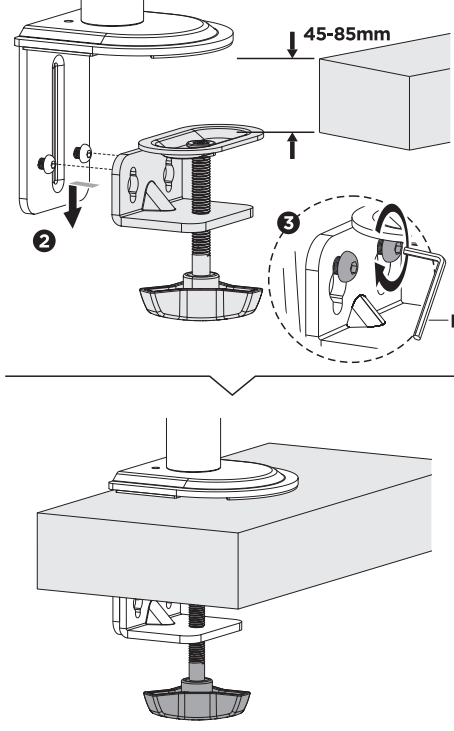


3

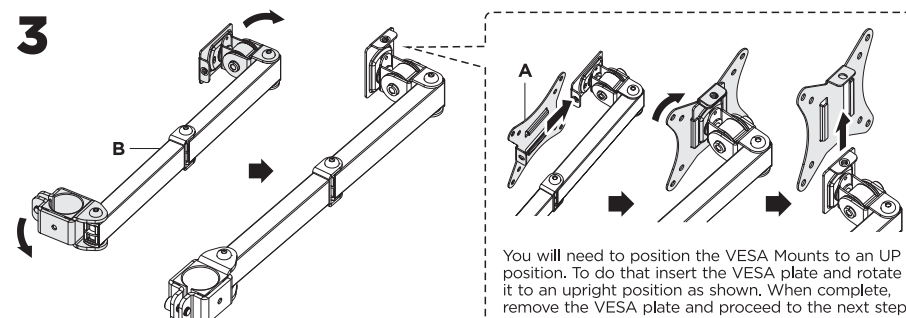

You will need to position the VESA Mounts to an UP position. To do that insert the VESA plate and rotate it to an upright position as shown. When complete, remove the VESA plate and proceed to the next step.

4

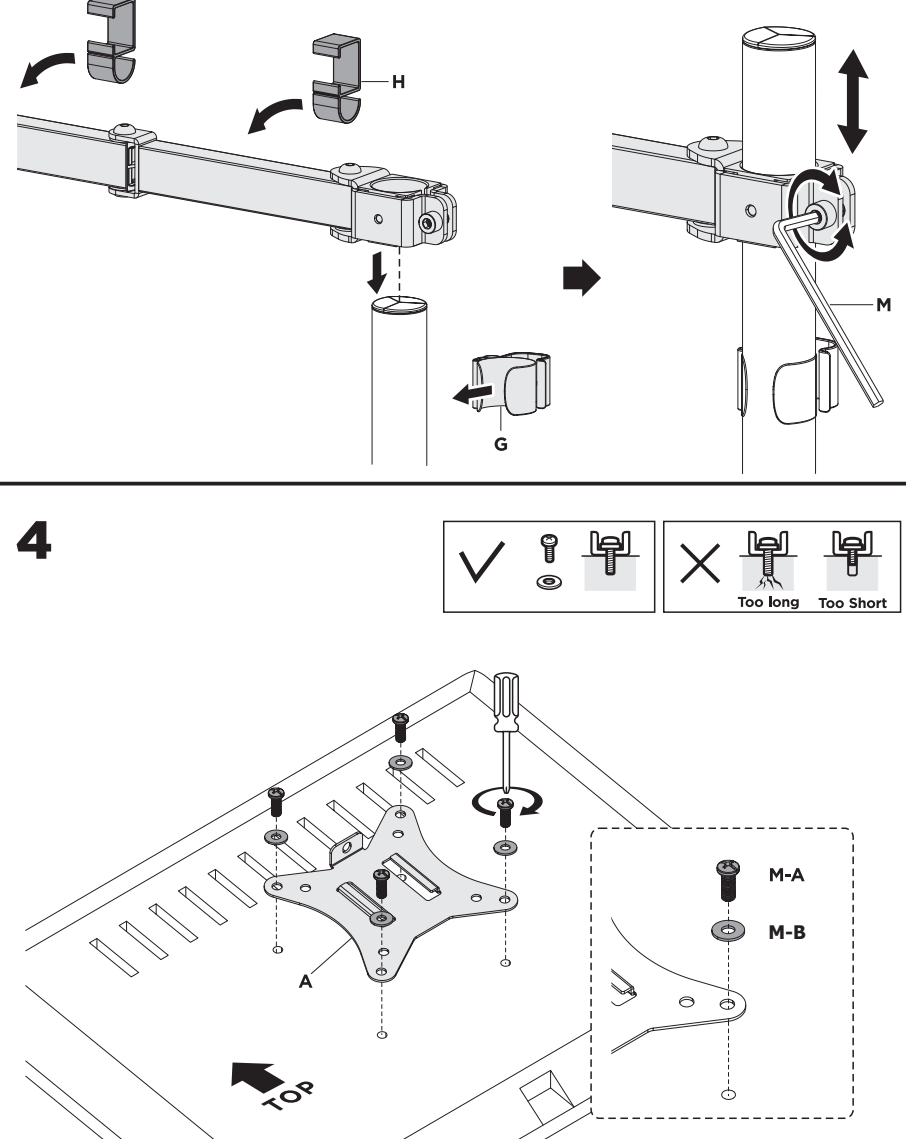

5

