


BONZAI

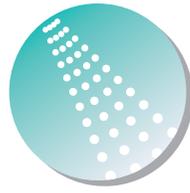

PULSE

SHOWERSPAs

Bonzai Shower System

Model #1017-B & 1017-S

Owner's Manual



1017-Parts Legend

- | | | |
|-------------------------------|-----------------------------|---------------------------|
| 1. NPT Nipple | 10. 2.5 GPM Flow Restrictor | 20. Hand Shower Holder |
| 2. PTFE (plumber's) Tape | 11. Screened Rubber Washer | 21. Hand Shower Hose |
| 3. Chrome 90° w/ Cone Washer | 12. 90° Inlet | 22. 4mm Rubber Washer (2) |
| 4. Tapered Plastic Washer | 13. Mount (2) | 23. Showerhead |
| 5. Chrome Finned Nut | 14. Mounting Screw (2) | 24. 6mm Rubber Washer |
| 6. Escutcheon Base | 15. Metal Washer (2) | 25. Shelf |
| 7. Escutcheon Cover | 16. Nylon Anchor (2) | 26. Shower Arm |
| 8. Thin Escutcheon (Optional) | 17. #4 x 1/2" Screw (10) | 27. Shower Body |
| 9. Supply Line | 18. Cover Plate (2) | 28. Glue (1) |
| | 19. Hand Shower | 29. Adhesive Tape |

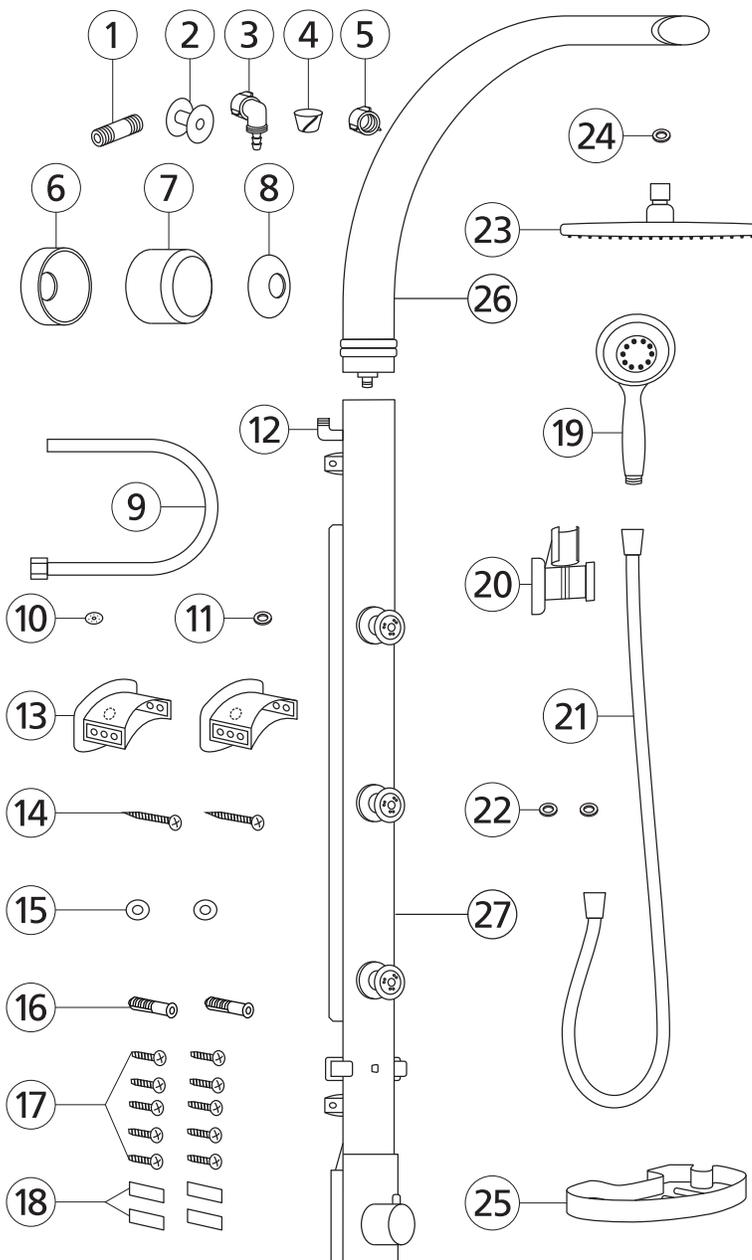


Figure A

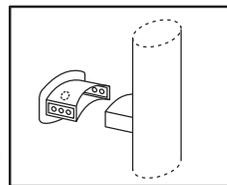


Figure B

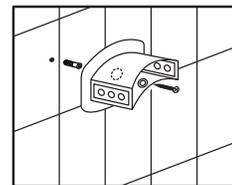


Figure B1

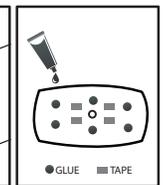


Figure C

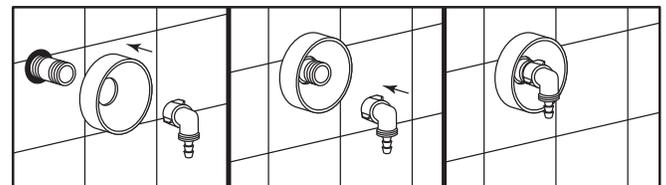


Figure D


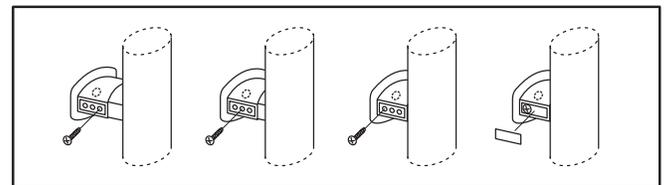


Figure E

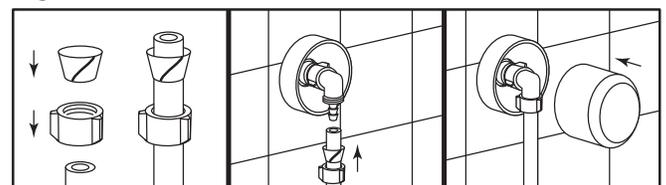

Installation

Thank you for choosing the Bonzai Shower System by PULSE ShowerSpas!

Assembly and installation of the Bonzai Shower System is designed to be quick and easy. If you have installation questions or performance problems, call PULSE Customer Service toll free at 888-785-7320 or visit www.pulshower spas.com.

Please read instructions carefully, become familiar with all parts, installation procedures and tools required. Follow the steps in the order presented to help avoid any mistakes.

FOR NEW CONSTRUCTION OR COMPLETE REMODEL

- A hot/cold mixing valve is required (NOT INCLUDED)
- Nipple should extend ½" past finished wall surface

FOR FIBERGLASS ENCLOSURES

IMPORTANT: PULSE does not recommend mounting through fiberglass wall surfaces without adequate wood or sheetrock backing! If mounting Bonzai to a fiberglass wall you must purchase appropriate mounting hardware (sold separately).

TOOLS REQUIRED

Phillips screwdriver, adjustable wrench, level, pencil or marker, drill, ¼" masonry/tile drill bit, hammer

INSTALLATION

1. Remove your showerhead and escutcheon (trim cover) from your existing shower arm. Leave shower arm in place.
2. Determine the length of brass NPT nipple (1, 1A) needed:
 - a. Place mark on existing shower arm at wall surface. Unscrew shower arm from elbow in wall.
 - b. Measure distance from mark on shower arm to end of shower arm threads. Add ½" to this measurement, and then round to nearest ½".

Example 1: If measurement = 1¼", add ½" = 1¾", rounded = 2" NPT nipple—this is the length needed.

Example 2: If measurement = 1⅝", add ½" = 2⅛", rounded = 2" NPT nipple—this is the length needed.
- NOTE:** If ½" X 1½" nipple (1) provided is not correct length based on above formula, you can attach one or both ¾" nipple extensions (1A) to obtain desired length or it may be necessary to purchase required length ½" NPT brass nipple (available at most hardware stores in ½" incremental lengths).
3. Secure hand shower holder (20) to Bonzai with screws (17). Connect Shower Arm (26) to Shower Body (27) and secure with screws (17).
4. Apply a generous amount of PTFE (plumber's) tape (2) to both ends of nipple (1). Insert flow restrictor (10), then screened rubber washer (11) into hexagon fitting of supply line (9). Connect to 90° inlet (12) on backside of Bonzai body. **DO NOT OVERTIGHTEN.**
5. Slide mounts (13) over their male counterparts. [Figure A]
6. Hold Bonzai up to the wall and determine mounting location. Evaluate showerhead and body jet heights, making certain supply line (9) reaches nipple (1).
7. Use a level to check for vertical (plumb) position.

8. Mark the wall at top & bottom mounts (13) for reference.
9. Reposition mounts (13) to marks on wall. Mark the hole in the center of each mount.

FOR DRILL-FREE INSTALLATION:

POSITION/APPLY 4 ADHESIVE 3M TAPE (29) AND 6 DABS OF THE PROVIDED GLUE (28) (FIGURE B1), EVENLY DISTRIBUTING ON THE FLAT SURFACE OF THE MOUNT. PLACE THE MOUNT AGAINST THE WALL AND APPLY FIRM PRESSURE FOR 30 SECONDS. ALLOW MINIMUM 24 HOURS TO CURE BEFORE INSTALLING THE UNIT.

10. For solid surface walls (tile, marble, granite, etc.) use a masonry/tile bit and drill a ¼" hole at center mark for each mount that is 1½" deep. **BEWARE**—Live Plumbing In Wall!
11. Insert nylon anchors (16) into the holes. [Figure B]
12. Secure mounts (13) to wall with mounting screws (14) and metal washers (15). **DO NOT OVERTIGHTEN.** [Figure B]
13. Remove tape backing on escutcheon base (6), slide over nipple (1) and attach to wall. [Figure C]
- NOTE:** Optional thin escutcheon (8) is for installations where the ABS escutcheon (6,7) interferes with desired mounting height of Bonzai. For best look with thin escutcheon (8), nipple should not extend more than ¾" from wall surface.
14. Secure chrome 90° w/ cone washer (3) to nipple (2). **DO NOT OVERTIGHTEN.** [Figure C]
- NOTE:** Cone washer is already installed on chrome 90° (3).
15. Insert Bonzai into wall mounts.
16. Determine length of supply line (9). Supply line must install completely over barbed portion of 90° connector (3). To shorten, remove Bonzai from wall, cut supply line with sharp utility knife and re-insert Bonzai into wall mounts.
17. Secure Bonzai to wall mounts (13) with screws (17). Choose holes that set Bonzai at desired distance from the wall. [Figure D]
18. Insert cover plates (18) into side of mounts (13). [Figure D]
19. Slide chrome finned nut (5), then tapered plastic washer (4) over supply line (9). Refer to Figure E for proper positioning.
20. Push hose onto barbed portion of chrome 90° (3). Slide tapered plastic washer (4) over barbs and secure with chrome finned nut (5). **DO NOT OVERTIGHTEN.** [Figure E]
- HINT:** Apply small amount of liquid soap to help hose slide onto barbed connection.
21. Push escutcheon cover (6) into base plate (1). [Figure E]
23. Insert 4mm rubber washer (22) into each end of hand shower hose (21). Secure to Bonzai and hand shower (19).
24. Insert 6mm rubber washer (24) into showerhead (23) and securely tighten to Bonzai. **DO NOT OVERTIGHTEN.**
25. Carefully insert shelf (25) into mounting bracket until tabs lock in place. Secure shelf to Bonzai with screw (17).

The arched shower arm pivots from side to side.

Turn diverter either direction to change functions or set between functions for further enjoyment.

Turn face of hand shower to switch settings.

Adjust the hand shower position by loosening the knob on the hanger and rotating forward or back.

Always turn cold water on first to help prevent any accidental burning or scalding; especially for children and elderly.

The Bonzai is equipped with Spray-Straight™ technology in the tips of the showerhead and hand shower. If the stream becomes obstructed from mineral deposits, simply rub the soft tips with your finger to loosen deposits.

To remove debris from flow restrictor, unscrew supply line from backside of Bonzai. Take out screened washer and restrictor from inside the nut. Use a toothpick or rinse with water to remove debris.

Care and Maintenance

To keep your ShowerSpa looking new, wipe down after each use with soft cotton cloth.

Protect your ShowerSpa from hard water stains and mineral deposits by periodically using an auto spray wax.

Clean using mild liquid soap and a non-abrasive sponge or cloth. Rinse with clean water.

Do Not Use Any Kind Of Chemicals Or Abrasives!

Manufacturer's Limited Warranty

PULSE ShowerSpas, Inc. warrants that all ShowerSpas are free from defect in workmanship and/or materials for a period of three years from the date of purchase. This warranty extends to the original purchaser only and is non-transferable.

This warranty does not cover, and PULSE ShowerSpas will not pay for conditions, malfunctions or damages resulting from (1) normal wear and tear, improper installation (whether performed by a contractor, service company or the consumer), improper maintenance, misuse, abuse, negligence, accident or alteration; (2) the use of abrasive, caustic or "no-rinse" cleaning agents; (3) the use of the product in any manner contrary to the product instruction; (4) conditions in the home such as excessive water pressure or corrosion.

Should any ShowerSpa be determined by PULSE ShowerSpas, Inc. to be defective in normal residential use, at the option of PULSE ShowerSpas, Inc., such product shall either be replaced or repaired and returned to the customer free of defects. The consumer shall give notice of any defects to PULSE ShowerSpas, Inc. within thirty days of discovery of such defect.

Proof of purchase (original sales receipt) must be provided to PULSE Shower Spas, Inc. with all warranty claims. PULSE ShowerSpas, Inc. is not responsible for labor charges, removal charges, installation or other consequential costs. In no event shall the liability of PULSE ShowerSpas, Inc. exceed the purchase price of the ShowerSpa.

Some states/provinces do not allow limitations of how long an implied warranty lasts or the exclusion or limitation of such damages, so these limitations and exclusions may not apply to you. This warranty gives the consumer specific legal rights. You may also have other rights that vary by state/province.

Follow manufacturers recommended installation. Use caution with children under ten years of age. Do not use your ShowerSpa as a support device. Do not use harsh chemicals or abrasives when cleaning. Always turn water supply off when servicing your ShowerSpa.

PULSE
SHOWERSPAS

PULSE ShowerSpas, Inc. • 297 Anna Street • Watsonville, CA 95076 • 888.785.7320
info@pulseshowerspas.com • www.pulseshowerspas.com • support@pulseshowerspas.com