




TRANSITION INSTALLATION

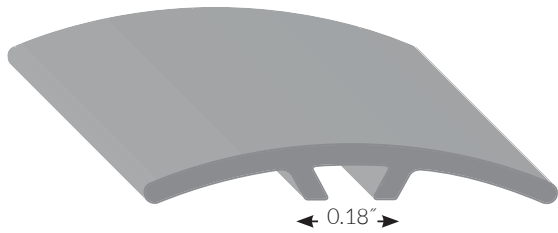

Dimension: 1.59" w x 0.23" h

V-MT WATERPROOF MULTI-TRIM

Multi-trim can be used for both floors of equal and unequal height. Can also be used as a surface reducer.

Automatically adjusts to varying heights.

1

Install the flooring leaving a 1 1/8" gap between the two floors for the installation.

Measure and trim to fit.

2

Draw a line down the center of the space between floors. Drill 1/4" holes along the line, approximately 15" apart.

3

Slide plugs into the slot on the transition and align with the pre-drilled holes.

4

With a rubber mallet, hammer the plugs into the holes until flush.