

# CUSTOM WINDOW WELL COVER

## DUAL LOCK INSTALLATION INSTRUCTIONS

### INCLUDES

- (6) Dual-Lock Discs
- (6) Dual-Lock Self-Adhesive Pads
- (6) 3/4" Screws

### INSTALLATION

1. You will be installing (6) Dual-Lock Disc and Pads to your well and cover.

- a. (2) will be installed 8" from the foundation wall, centered on the rim of the well.
- b. (2) will be installed 30" from the foundation wall, centered on the rim of the well.
- c. (2) will be installed 10" from the center point of the well.

2. Using a marker or pencil and a tape measure, measure and mark all (6) hardware locations. NOTE: Be sure to make markings as close to the center of the rim as possible.

3. Attach (6) Dual-Lock Discs at marked locations using the screws provided.

4. Once the Dual-Lock Discs are attached, place your window well over the well, ensuring it is centered. Use your pencil or marker to mark the center of the Dual-Lock Discs.


5. Using these marks, remove backing from each Dual-Lock Self-Adhesive Pad and adhere them to the underside of the cover.

*NOTE: Each pad should be placed so it can attach to the corresponding disc.*

6. Let the adhesive cure for at least 1 hour. Once cured, align each Dual-Lock Self-Adhesive Pad with the corresponding Dual-Lock Disc and firmly press down until you feel the structures interlock.

### CLEANING INSTRUCTIONS

Clean your window well cover with a mild solution detergent and water. Use of harsh chemicals or solvents may damage plastic and void warranty.

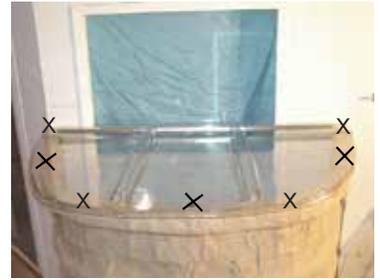

# CUSTOM WINDOW WELL COVER

## SPRING CLIP INSTALLATION INSTRUCTIONS

### WHAT YOU NEED

Tension Spring Clips  
3/16" Bolts  
3/16" Cap Nuts

### INSTALLATION

1. Place the Window Well Cover over the window well and push it tight against the house.

*NOTE: If the cover doesn't fit symmetrically, the steel well may be bent out of shape. Use a sledgehammer to tap the well to allow the cover to fit. (FIGURE A)*

2. Center the cover on your well and mark the locations where the clips will attach. (FIGURE B)

3. Remove the cover from your well and drill a 3/16" hole at each marked location. (FIGURE C)

4. Mount the clips to your cover using the cap nuts and bolts provided and tighten the screw until there is about 1/4" space in the spring clip. (FIGURE D)

5. Snap Window Well Cover onto the rim of the window well. (FIGURE E & F)

### CLEANING INSTRUCTIONS

Clean your window well cover with a mild solution detergent and water. Use of harsh chemicals or solvents may damage plastic and void warranty.

FIGURE A



FIGURE B

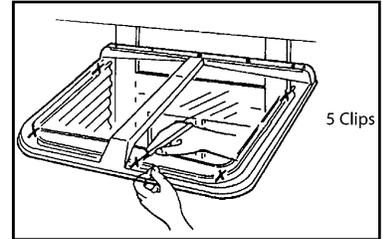


FIGURE C

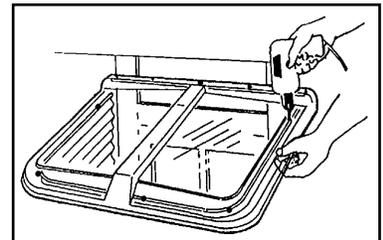


FIGURE D

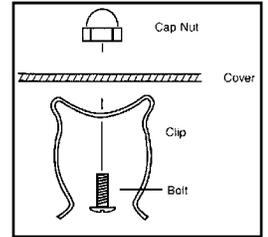


FIGURE E

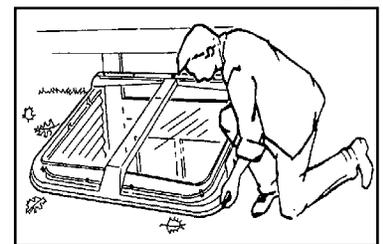


FIGURE F

