


# TRUE FLOAT

INVISIBLE BRACKET, HANGING INSTRUCTIONS



## STEP 1

Insert the galvanized bracket into the hole on the back of the shelf.  
Use a piece of masking tape to hold the bracket to the shelf. Hold at desired height, with a pencil make a small mark at center notch of each galvanized bracket. Level each bracket and mark screw holes.

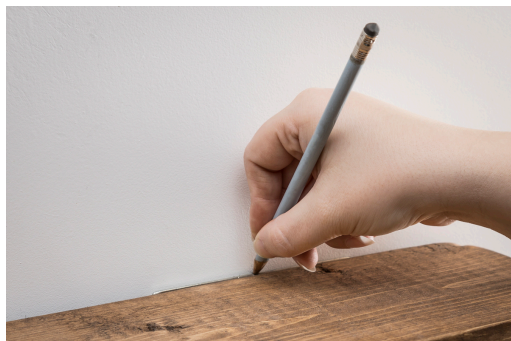

## STEP 2

Insert the supplied drywall anchors for each bracket into the wall. Align the bracket with anchor Use supplied 2" #6 phillip's head screw to mount the bracket to the wall (do not over tighten)



## STEP 3

Insert peg into each predrilled hole.

