ROCKWELL™ WINDOW WELLS


COVER INSTALLATION INSTRUCTIONS

Hardware Kit

2 Brackets



4 Masonry Anchors



Needed Tools


2 Spacers

Pencil


Hammer Drill

3/16" Masonry Bit

5/16" Socket or Wrench

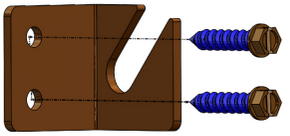

Left Slot Bracket

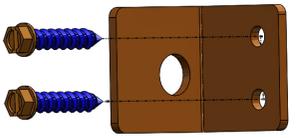

Right Hole Bracket



Note: Cover may be installed by placing the cover on top of a window well without using brackets.



Step 1 - Place 2 spacers, one on each side of the window well.

Note: Spacers are not provided in hardware kit. Height of Spacers define slope for water runoff. Discard spacers after install.



Step 2 - Center the cover on the window well while on top of the spacers.



Step 3 - Define the hole locations by placing the right and left brackets over the pivot rods. Make sure the brackets are against the cover and level.

Note: Left bracket has a slot, and the right bracket has a hole.



Step 4 - Mark the wall using holes of the left and right brackets.



Step 5 - Drill the holes with a 3/16" masonry bit and a hammer drill. Remove all concrete dust from hole before proceeding to Step 6.



Step 6 - Using a 5/16" socket, attach the left and right brackets to foundation with the 4 provided masonry anchors.

Note: Do not over tighten masonry anchor



Step 7 - Attach the cover to the brackets by placing the pivot rods into the hole and then slot of the brackets.



Step 8 - Remove protective plastic film.