
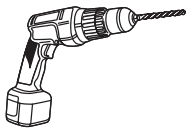
UNIVERSAL HARDWARE®
The Professional's Choice


UH40094

TOOLS REQUIRED


Ruler/tape measure


Pencil


Drill, 3/8" drill bit (wood door), 1/2" drill bit (glass door)

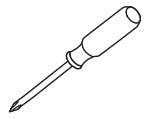

#2 Phillips Screwdriver


INSTALLATION INSTRUCTIONS

1. Hold your Pull Door Handle up to the door to determine the desired mounting height, make sure the mounting holes can be drilled completely through the door at the desired location without any obstructions, and mark the height with a pencil.
2. For these 12-Inch C-Shape Door Handles, the mounting holes in the door must be 11 inches apart (See the template to the right). Drill 3/8-inch diameter clearance holes through the door.
3. Place the Collar, Escutcheon and Plastic Washer on the bolt and insert through the door and screw into the pull side handle on the outside of the door.
4. Tighten the bolts firmly and make sure the door pull is secured and fastened solidly to the door.
5. Place the inside door pull over the bolts and collars and while pushing the door pull handle tightly against the door, tighten the set screws.

NOTE: In the case of installing pull handles in glass doors, it is highly recommended to add the included plastic casing/insert in the hole through the glass door. Plastic casing/insert requires a ½-inch hole in the glass door.

CAUTION: To avoid stains, do not use cleaners with a chlorine base.

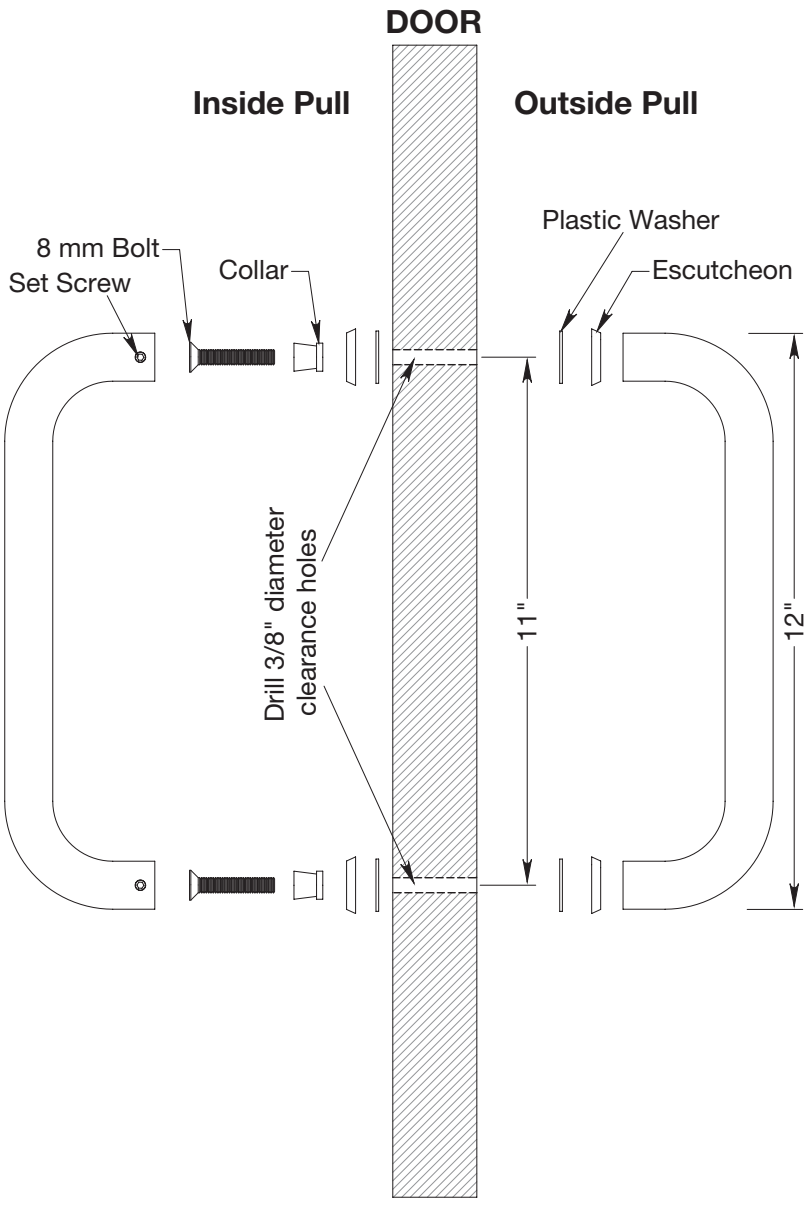

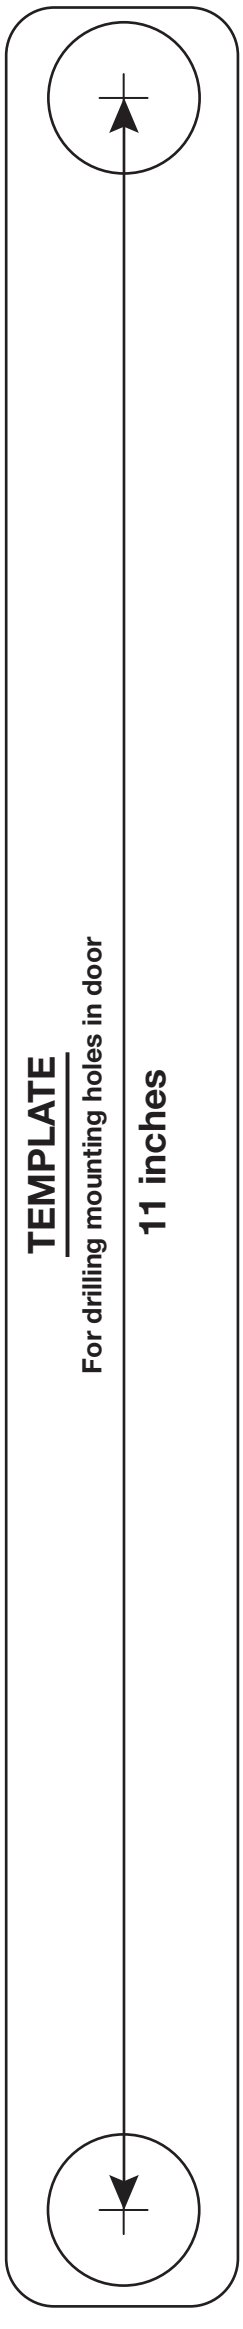

FULL LIFETIME WARRANTY – Visit www.hampton.care or call 1-866-LOCK-PRO (1-866-562-5776)

0 39208 22931 9

⚠ **WARNING:** Cancer and Reproductive Harm – www.P65Warnings.ca.gov

50 Icon, Foothill Ranch, CA 92610-3000
Customer Support: 1-866-LOCK-PRO (1-866-562-5776)
www.universalhardware.com
Made in India
©2025 Hampton Products International Corp.
20000_UH40094 REVG 06/25