

REMARKABLE™

Must be used within 6 months of purchase date.

INTRO

- Make sure your surface is perfectly nice and smooth
- Surface must be solidly painted and cured satin or eggshell enamel
- White ReMARKable must go over pure white

BASE COAT

- ReMARKable Tintable Base coat is the preferred base coat
- Same Satin or Eggshell Water Based Enamel paints may be used instead. Referr to: [//www.remarkablecoating.com/faq-2/](http://www.remarkablecoating.com/faq-2/) for further information

How to use ReMARKable™

1 Prepare Your Surface

Clean the surface that ReMARKable™ will be applied to, and make sure the surface is dry and free of foreign matter. Also, repair any imperfections on your surface. Make sure the area that you are applying ReMARKable to is taped off properly with painter's tape.

2 Mix It

ReMARKable™ comes in two parts - A and B. Thoroughly mix and fold Part A with Part B together in a clean container for 3 to 4 minutes right before you are ready to apply ReMARKable™ to the surface. *NOTE: If using ReMARKable™ White, thoroughly stir Part B in its own container for about 30 seconds, then mix Part A with Part B as stated above. This mixture is a 2:1 ratio containing one (1) Part A with two (2) Parts B.

3 Paint It

Use the smooth 1/4" or 3/8" nap/micro fiber roller cover and roll ReMARKable™ onto the surface. You have about 40 minutes to apply ReMARKable to the surface before it starts to cure, so plan well!

4 Let It Cure

Once applied, ReMARKable™ dries to the touch in 6 to 8 hours (depending on the temperature). Let it cure for another 48 hours, and your surface is now ready to go.

5 Get Creative

ReMARKable™ is ready to be written on in about 48 hours. Draw and write on your surface—then wipe it off using a micro-fiber cloth whenever you want. It's ReMARKable™!
How To Use ReMARKable™

Maintenance

ReMARKable works best with low odor dryerase markers. Erase it with a micro-fiber cloth. You never need to use harsh cleaners to keep it spotless. Never use an abrasive tool or chemical to clean ReMARKable.

Recoating

We recommend applying one (1) coat of ReMARKable™. If you use a second coat, be sure to wait until the first coat is dry (about 10 hours) but don't wait too long-the second coat should be applied within 24 hours. If you ever want to recoat a surface in the future, lightly sand the existing coat of ReMARKable™ with 220 grit sandpaper, remove debris, wipe with acetone and apply another coat.

Health and Safety

ReMARKable™ contains less than 50g/l VOCs, which meets or exceeds the strictest of VOC standards. ReMARKable™ is also free of lead and asbestos. When applying ReMARKable™, it is recommended to have the room well ventilated and/or to use a respirator. For more information, view our Material Safety Data Sheet (MSDS) at remarkablecoating.com.

Warranty

With proper maintenance and normal wear and tear, ReMARKable™ retains its dry-erase ability 10+ years indoors before you ever need to recoat the surface. It's guaranteed not to crack, peel, stain, yellow or fade with proper use and maintenance.

For more information, visit us online at

remarkablecoating.com

If you have questions about ReMARKable™. Please call our customer care team at 800. 936.2159.

Must be used within 6 months of purchase date.

- The “smoother” your wall is the better!
- Remove excess lint from roller nap by wrapping the roller in 2” masking tape, then remove the tape and the excess lint will be removed with the tape.
- Always use a ReMARKable™ 1/4" nap micro fiber roller. Never use a foam or other synthetic roller.
- White ReMARKable™ should be applied over a “Pure White” painted background to ensure single coat “opaque” coverage. Primer alone is not recommended. Primer goes through what is called an “off gas sing” process and needs to “breath” for several weeks. Painting over primer works because standard paint is porous and designed to “breath”, allowing the primer to properly off gas. ReMARKable™ is an impervious coating and will not allow primer to “breath”, thus creating the possibility of causing “bubbles” in the coating as it cures. Paint must dry at least 24 hours prior to ReMARKable™ application. Clear ReMARKable™ can go over any pale to mid toned color, including white.
- Relative humidity needs to be below 50%.
- If you have a choice in the sheen of paint you are applying ReMARKable™ over, choose eggshell or semi-gloss enamel for the best results. It does work over flat paint, but flat paint absorbs Remarkable much faster, and if Remarkable is applied too thin in certain areas, it will not perform as well as it should. An eggshell or semi-gloss enamel has a much more sealed surface allowing the Remarkable to sit more on top of the finish as opposed to soaking into a flat paint.
- Always keep the ambient room where you are applying ReMARKable™ at a consistent 68 – 77 degrees, during the 48-hour curing process.
- Gently, but thoroughly Mix part A and B for 3-4 minutes right before you are ready to apply it. Do not use a mixer or drill or use a whipping motion. This can cause unwanted bubbles to occur during the cure process.
- For White ReMARKable™ ONLY you may add 1-2% water to encourage easier flow. Do not add water to clear ReMARKable™.
- A 2” sponge brush works great for cutting in the ceiling, floor, and corners. Using the foam brush, cut in as you go, Always working wet on wet.
- Apply a medium/heavy coat of ReMARKable™ to your substrate. It is important that you do not attempt to “stretch” the product by applying it too thin. This will result in a failed application. Also, do not apply ReMARKable™ too heavy or it will cause ReMARKable™ to “sag” or “run”, also causing a failed application. For best results, fully saturate the micro fiber roller nap with ReMARKable™ and apply it to the wall in a vertical up and down motion. Always lead with the “heel” of the roller (See picture below) applying a slight forward pressure toward the heel (gently twist the roller handle from left to right). Roll ReMARKable™ in vertical patterns going up, then shifting the roller to the right, overlapping about 50% of your previous pass, and roll downward and repeat, going back up and back down until you are finished with your designated area. Do not overwork ReMARKable™! Going over and over and over ReMARKable™ once it has been applied to your substrate can and will most likely effect the film forming process and cause a failed application. If you have any questions before applying ReMARKable™ Please call Susan at: 800- 936-2159. We want you to have the best experience possible with ReMARKable™.


NEVER mix an entire 600 square foot kit together all at one time.

Here are the ratios for measuring smaller areas.

4 oz Part A with 8 oz Part B covers 35 square feet

6 oz Part A with 12 oz Part B covers 50 square feet

12 oz Part A with 24 oz Part B covers 100 square feet

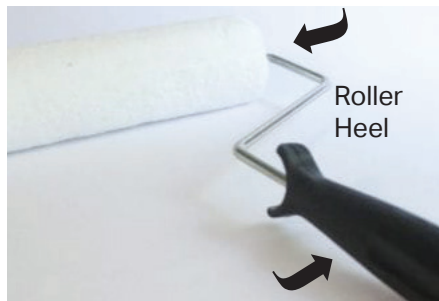

SLIGHTLY ROTATE THE ROLLER HANDLE FROM LEFT TO RIGHT APPLYING A LITTLE MORE PRESSURE TOWARD THE HEEL. THIS WILL ENSURE A NICE EVEN SPREAD OF ReMARKable™ AND ELIMINATE “ROLLER LINES” IN YOUR WALL.