

GOOF PROOF SHOWERS[®]


NICHES




MARK E INDUSTRIES

Proudly Made
in the USA


OPEN WALL INSTALLATION

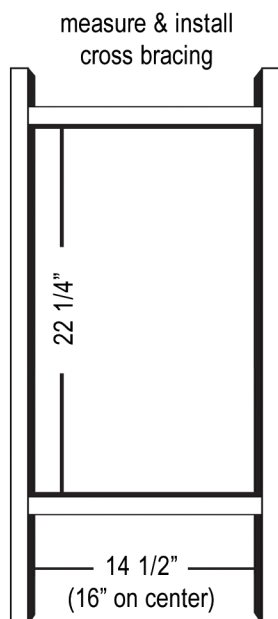

- Determine the proper height and placement of the niche between the studs and mark them appropriately.
- Install horizontal cross bracing to support the top and bottom of unit (This step is recommended but not required for proper installation).
- Adhere niche to studs and cross members using a polyurethane or silicone caulk.
- Install ½ inch backer board tight and flush to the ½ inch flange of the niche.
- Seal the seam between backer board and flange using a waterproofing membrane (liquid or sheet). With liquid applied membrane, if the seam is greater than 1/8 of an inch, use 8" Reinforcing fabric (can be cut into 4" strips).
- Alternatively: Seam can be sealed using the same method used to seam backer board (fiberglass tape and polymer fortified thinset).
- Install tile according to TCNA guidelines.

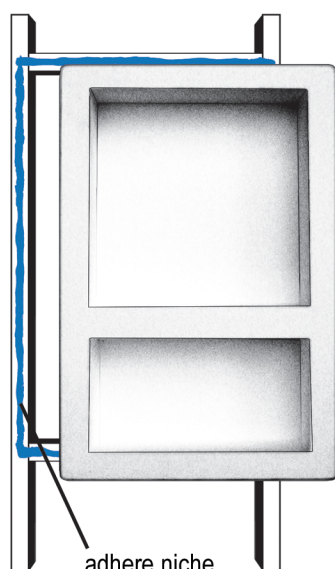


adhere niche
to studs using
a polyurethane or
silicone caulk

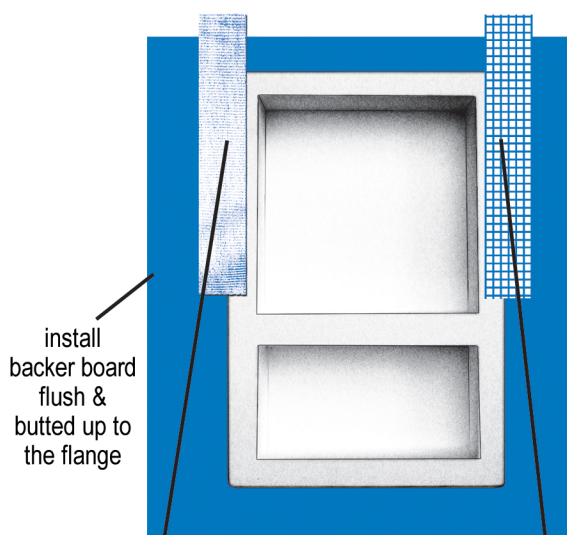


install
backer board
flush &
butted up to
the flange

reinforcing fabric (4") with
liquid applied waterproofing
membrane ANSI A118.10

OR

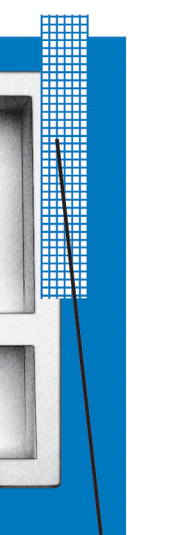

fiberglass
tape & latex
modified thin-set

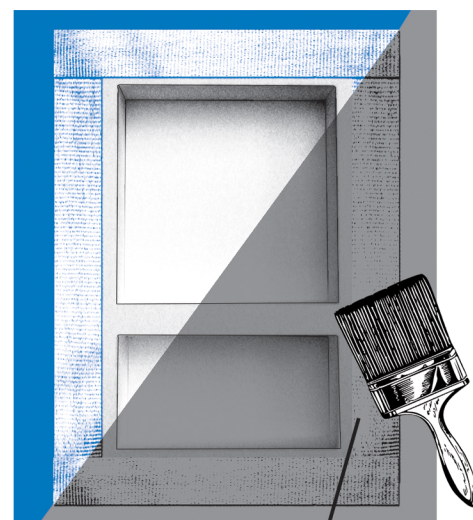


If water proofing - entire shower
niche may be coated if desired

NICHOS DE GOOF PROOF SHOWERS®




Orgullosamente hecho
en los Estados Unidos

INSTALACIÓN DE PARED ABIERTA

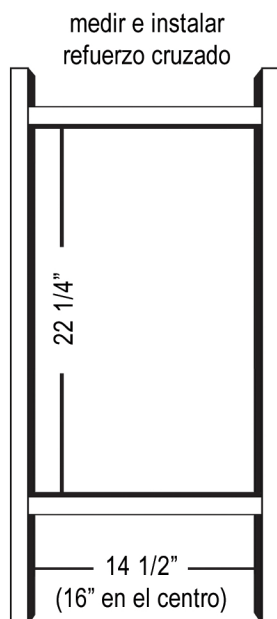

- Determine la altura y la colocación correcta del nicho entre los postes y márquelos adecuadamente.
- Instale refuerzos cruzados horizontales para soportar la parte superior e inferior de la unidad (este paso es recomendado pero no requerido para la instalación correcta).
- Conecte el nicho a los travesaños con un poliuretano o masilla de silicona.
- Instale una placa de soporte de 1/2 pulgada (0.5") ajustada y nivelada a la brida de 1/2 pulgada (0.5") del nicho.
- Selle la unión entre el panel de soporte y la brida con una membrana impermeabilizante (líquido u hoja). Si usa membrana aplicada líquida, y si la costura es mayor de 1/8 de pulgada (1/8"), use tela de refuerzo de 8" (se puede cortar en tiras de 4").
- Alternativamente: La costura se puede sellar usando el mismo método usado para unir el tablero de respaldo (usando cinta de fibra de vidrio y polímero reforzado).
- Instale el azulejo de acuerdo con las reglas de TCNA.

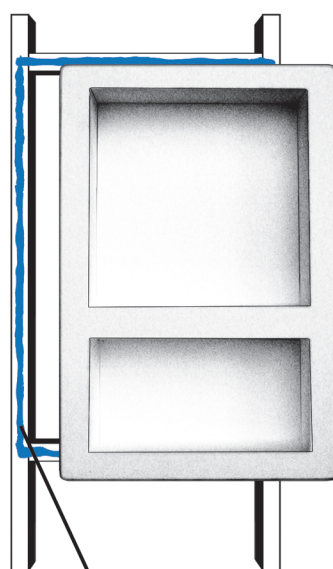

instalar
tablero de
respaldo,
enjuagar y
atar a la brida

tela de refuerzo de 4 pulgadas
(4") con impermeabilización líquida
aplicada membrana de ANSI A118.10

O:

Cinta de fibra
de vidrio y látex
modificado delgado

