



SHOWER DOOR INSTALLATION GUIDE

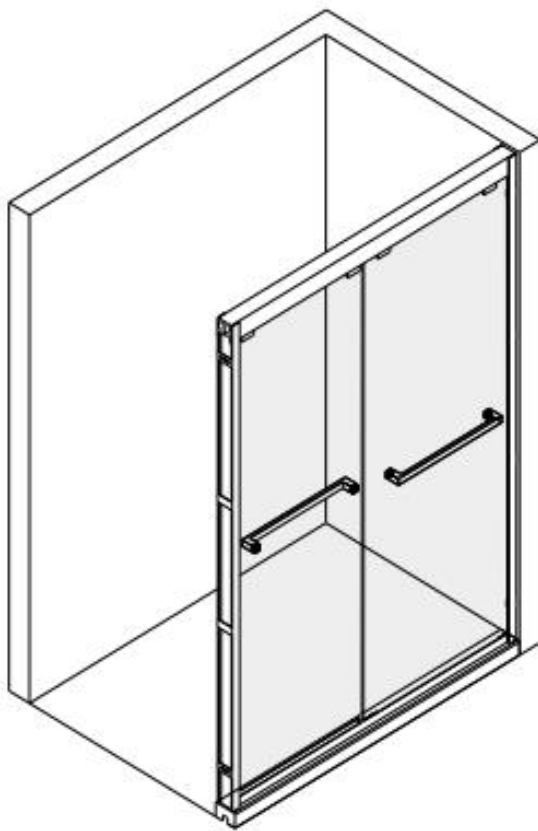

**Without shower base
(P2-P8)**

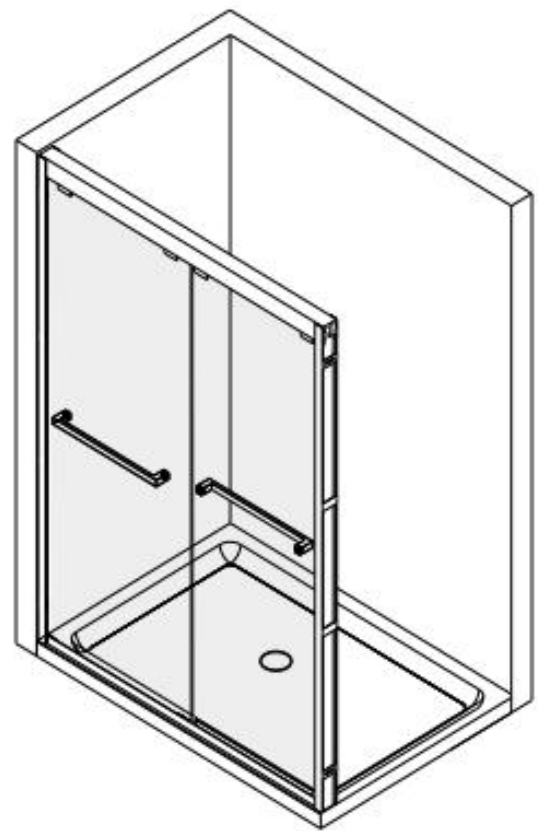

**With shower base
(P9 -P16)**

Customer
service:

For more information about **TOOLKISS®** products please visit www.TOOLKISS.com



+1(832)3768443









sales@toolkiss.com

Dot not return product to the store contact TOOLKISS® directly with any questions.









IMPORTANT - Please read and follow all warnings and instructions before using this product. Injury can result from improper use. Save this documents.

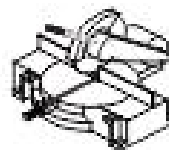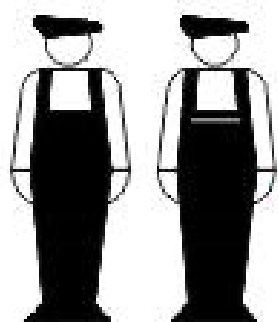

03


06

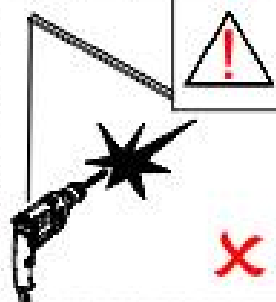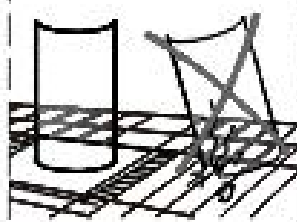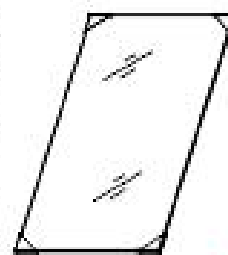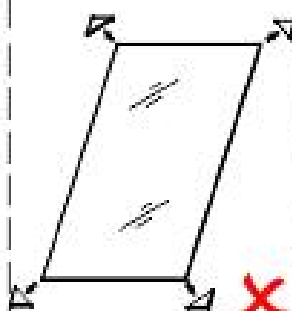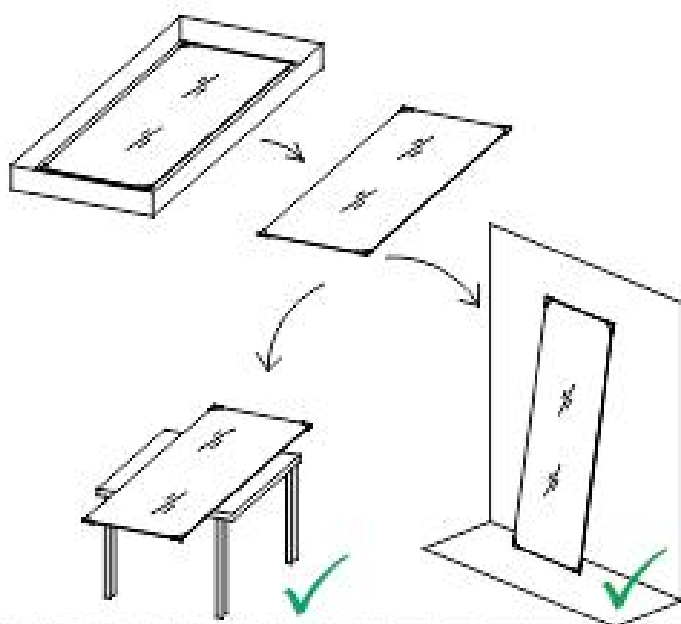

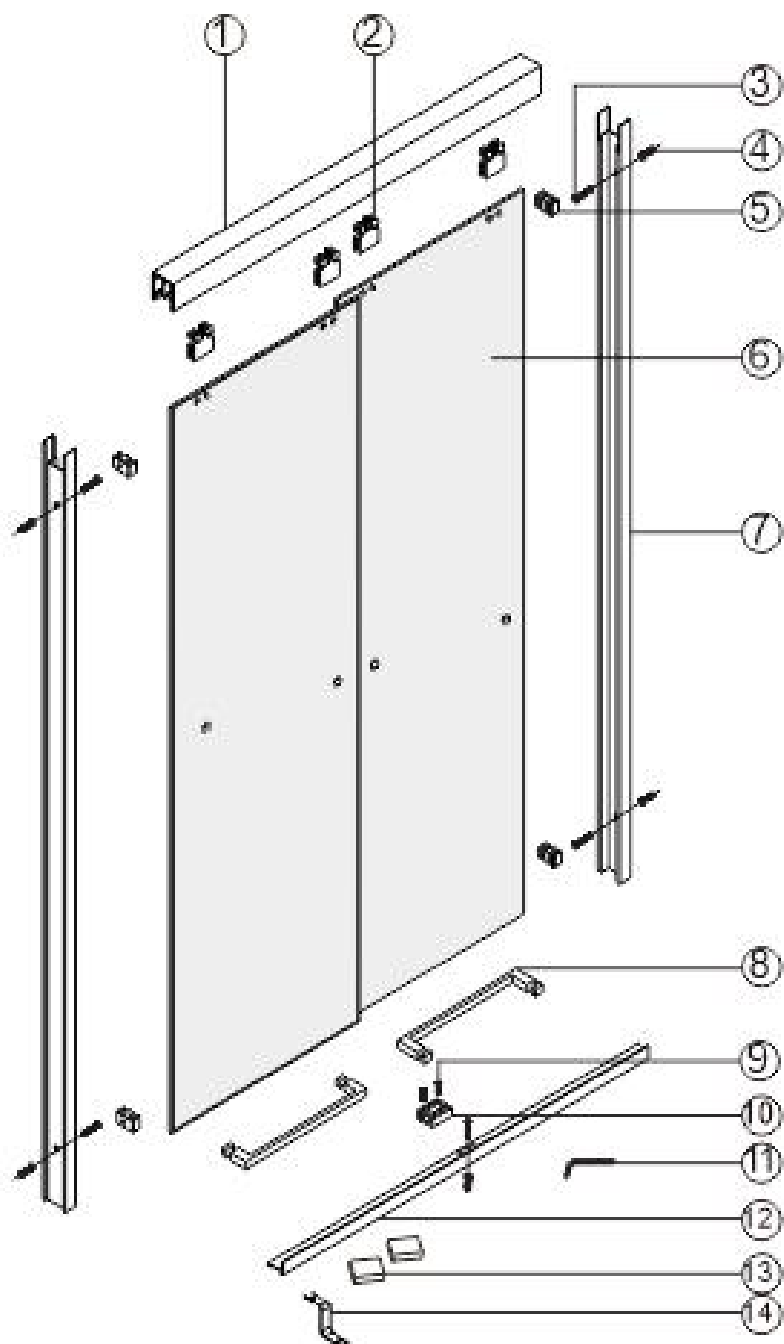


NO.	Picture	Qty	NO.	Picture	Qty	NO.	Picture	Qty	NO.	Picture	Qty	NO.	Picture	Qty
①		1	②		4	③		6	④		6	⑤		4
⑥		2	⑦		2	⑧		2	⑨		3	⑩		1
⑪		1	⑫		1	⑬		2	⑭		1			

1






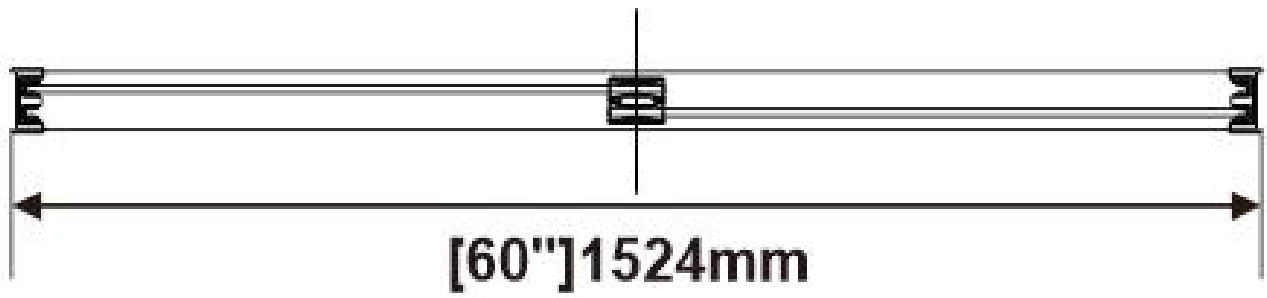


2

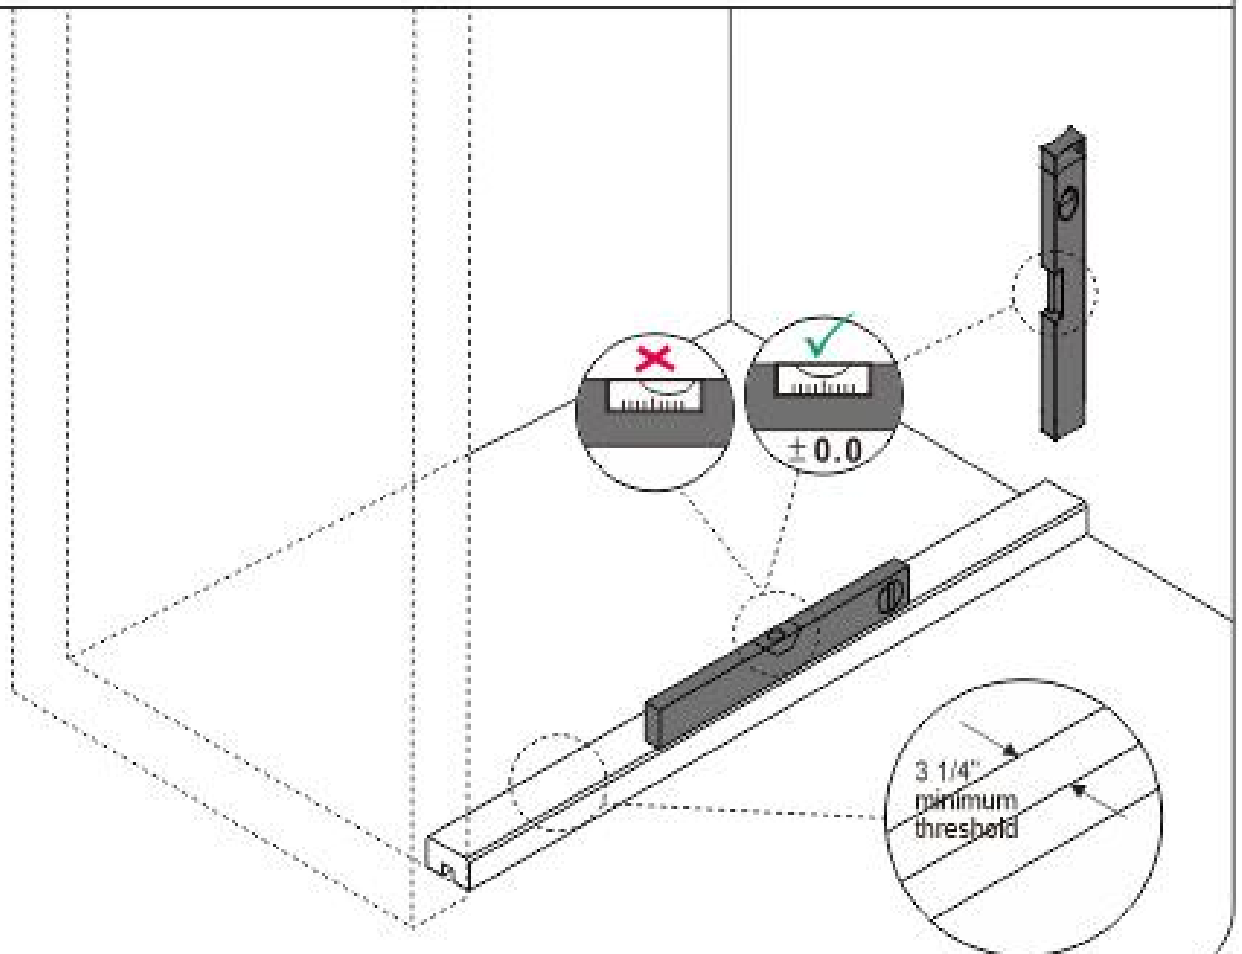







3

NO.	Picture	Qty
③		1
④		1
⑫		1

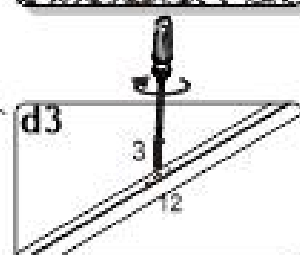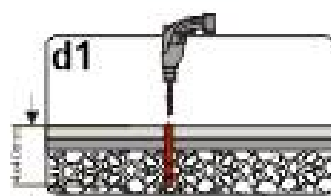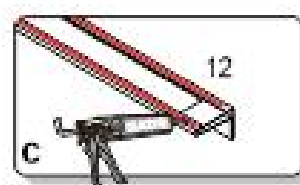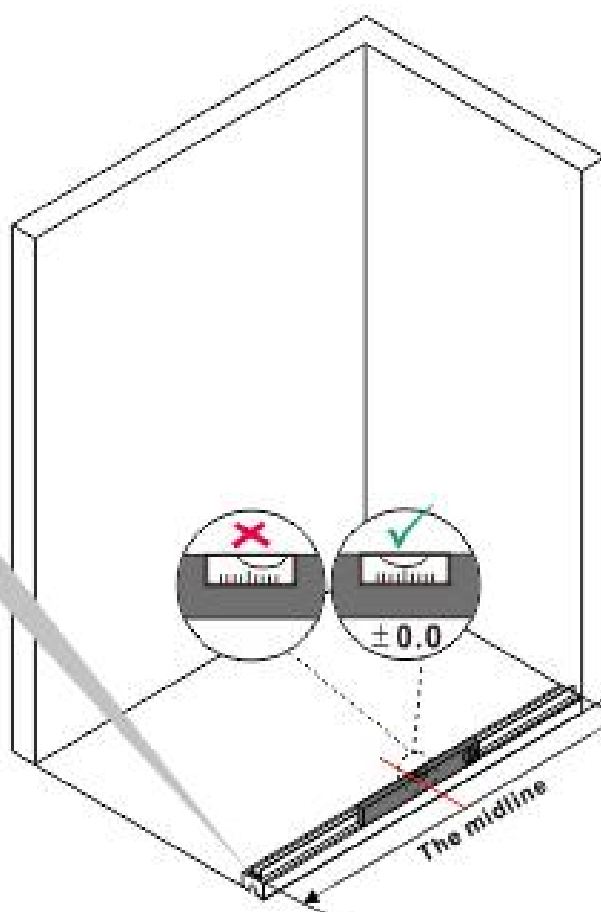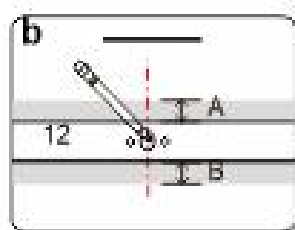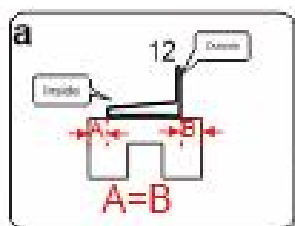





4

NO.	Picture	Qty
③		4
④		4
⑦		2

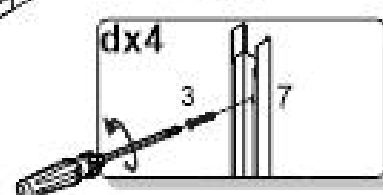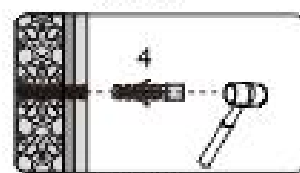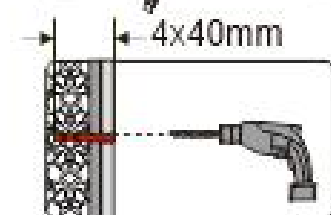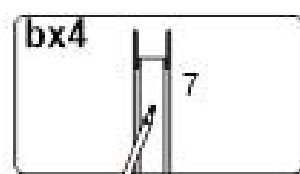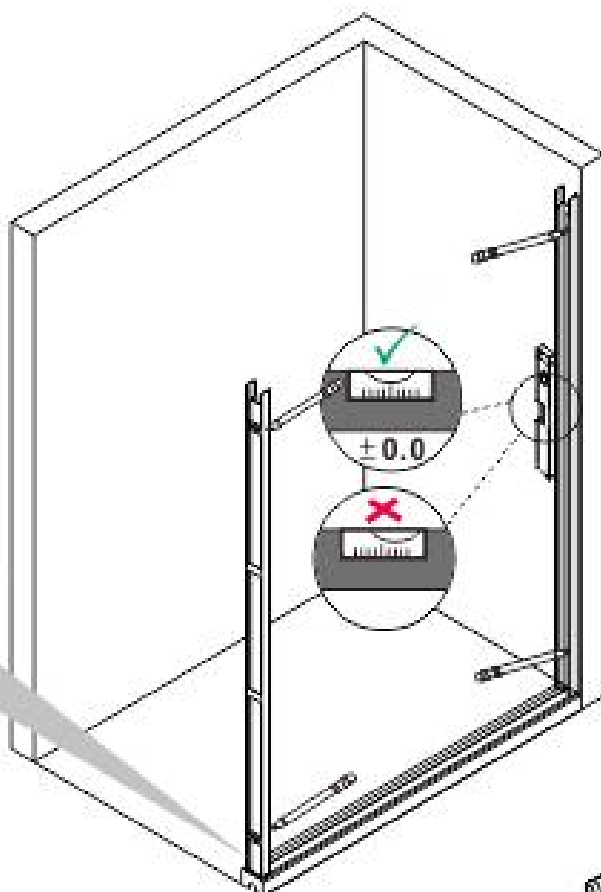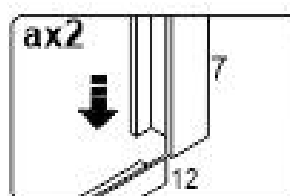








5

NO.	Picture	Qty
①		1
②		4
11		1

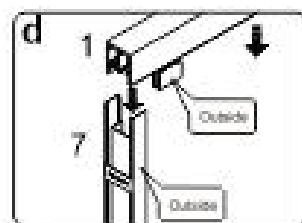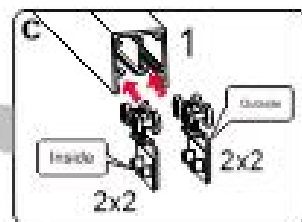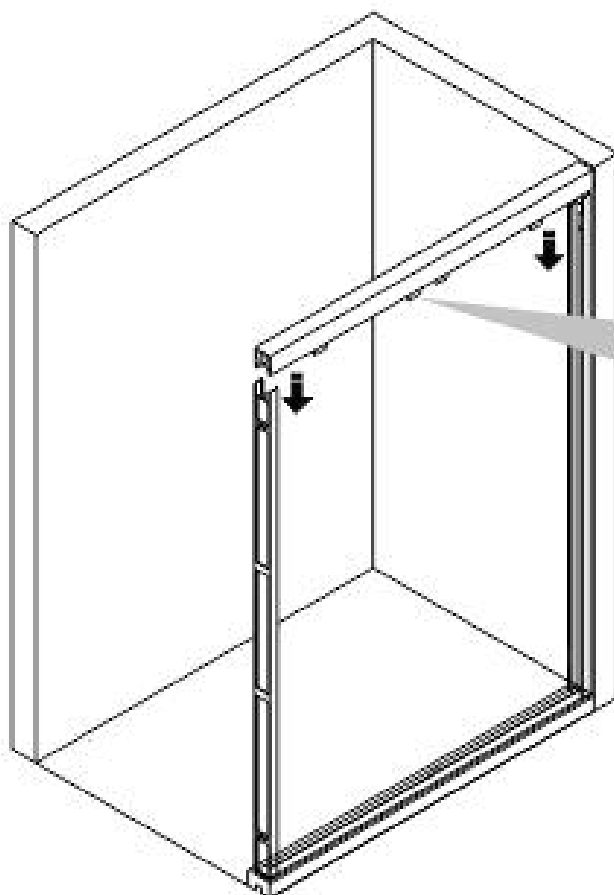
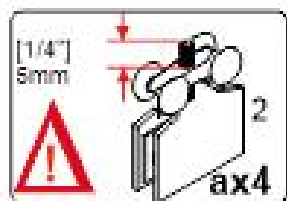


6

NO.	Picture	Qty
⑤		4
⑨		2
10		1

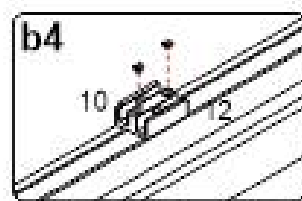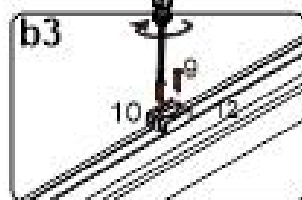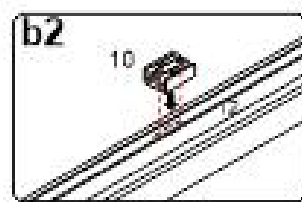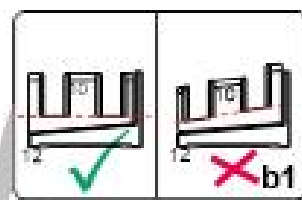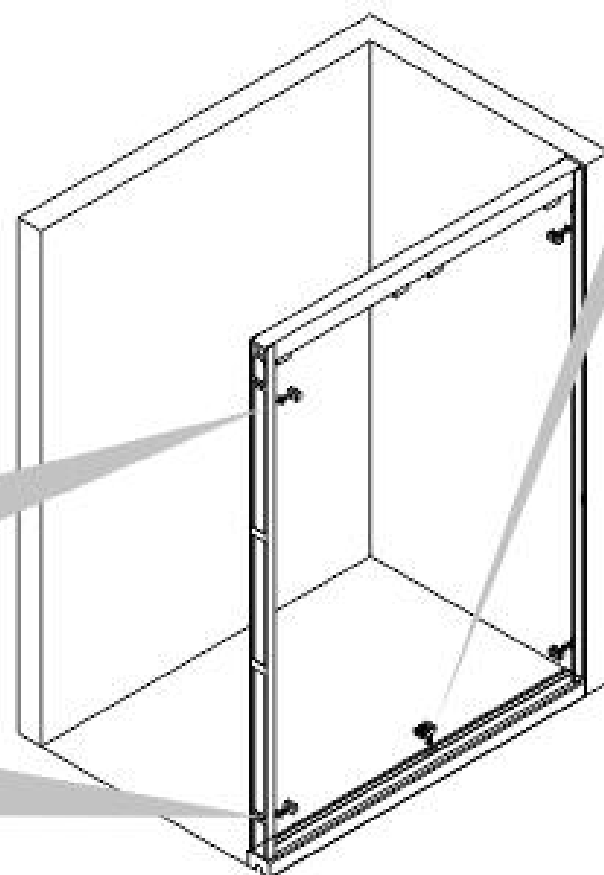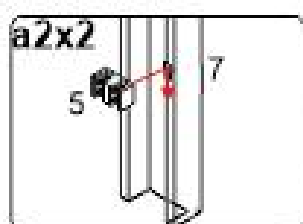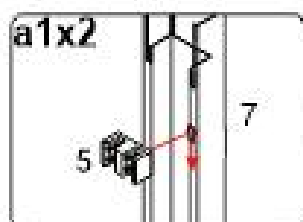

7

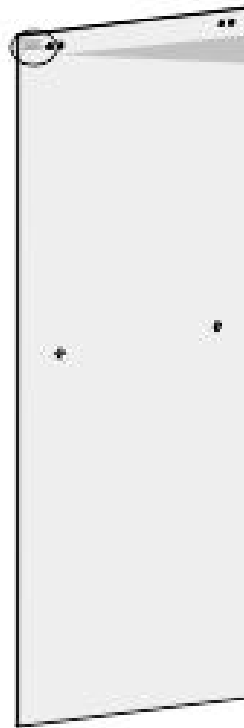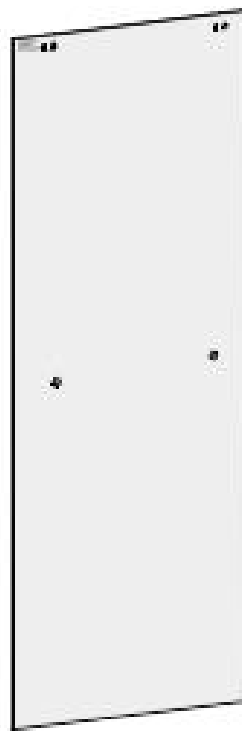






TOOLKISS®

TEMPERED GLASS
ANSI Z97.1-2015
16 CFR 1201
CAN/CGSB-12.1-2017
1/4"UA, SGCC-6119

Inside






8

NO	Picture	Qty
⑥		1
⑬		2

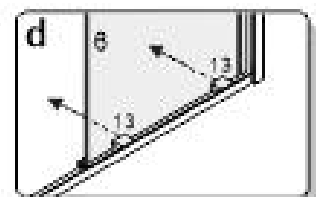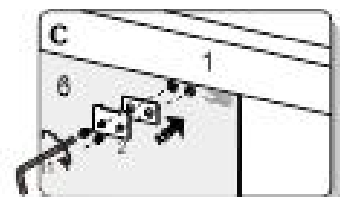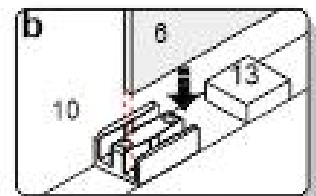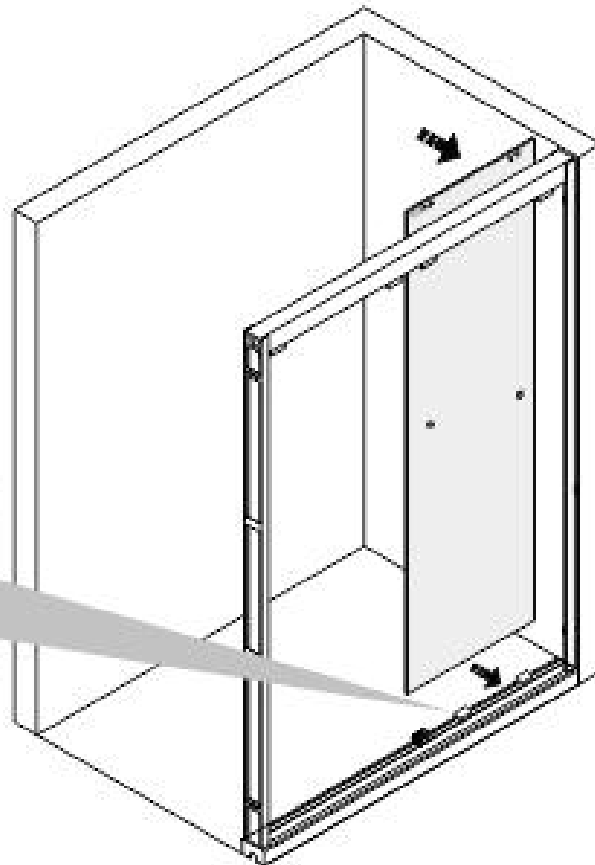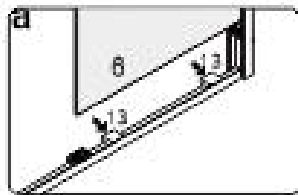







9

NO.	Picture	Qty
⑥		1

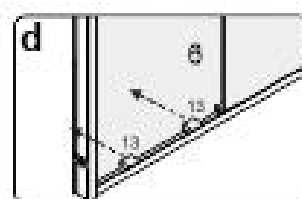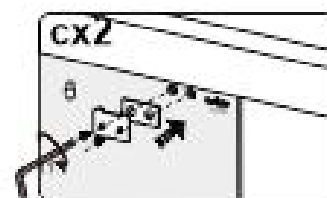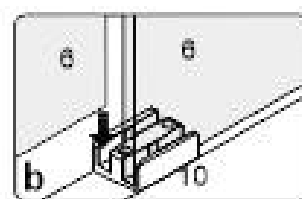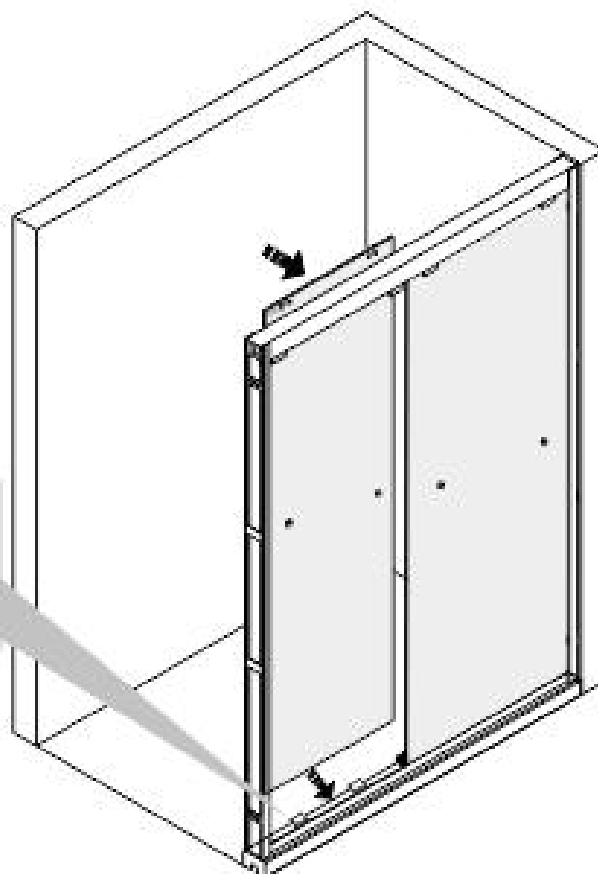
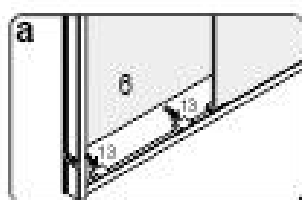


10


NO.	Picture	Qty
⑧		2
⑬		1

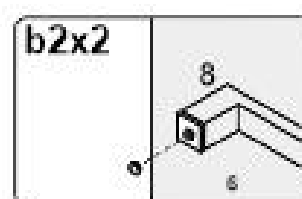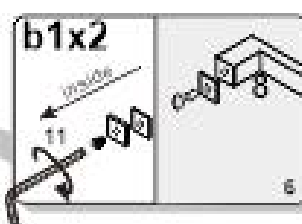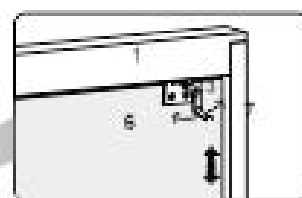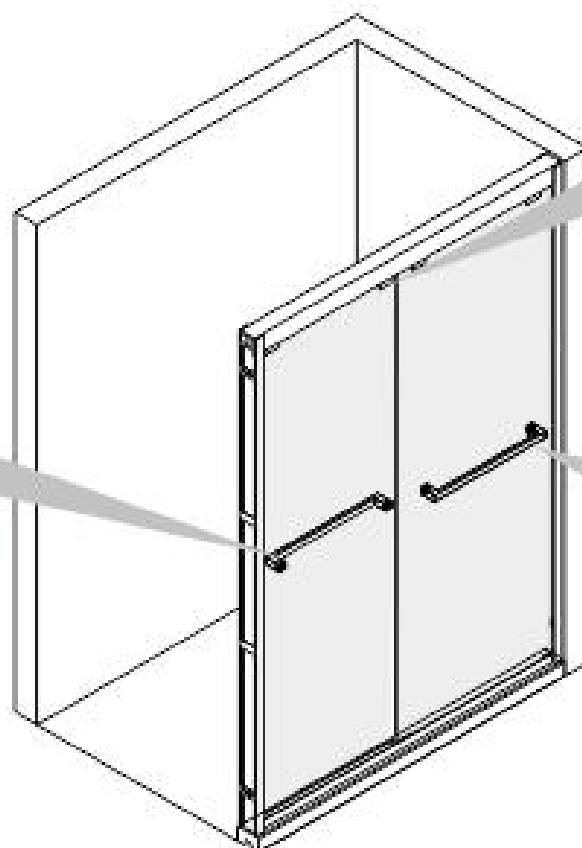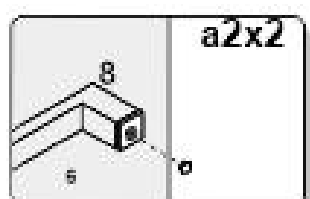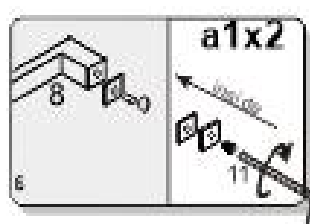

11

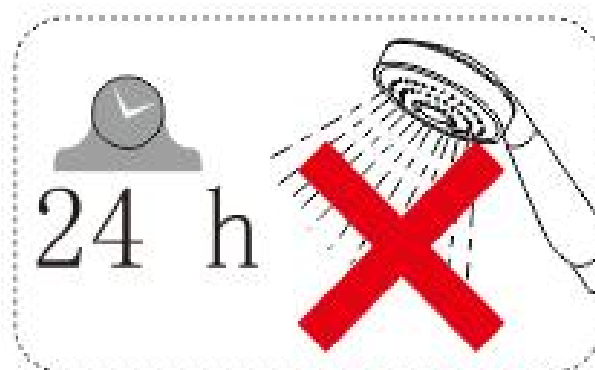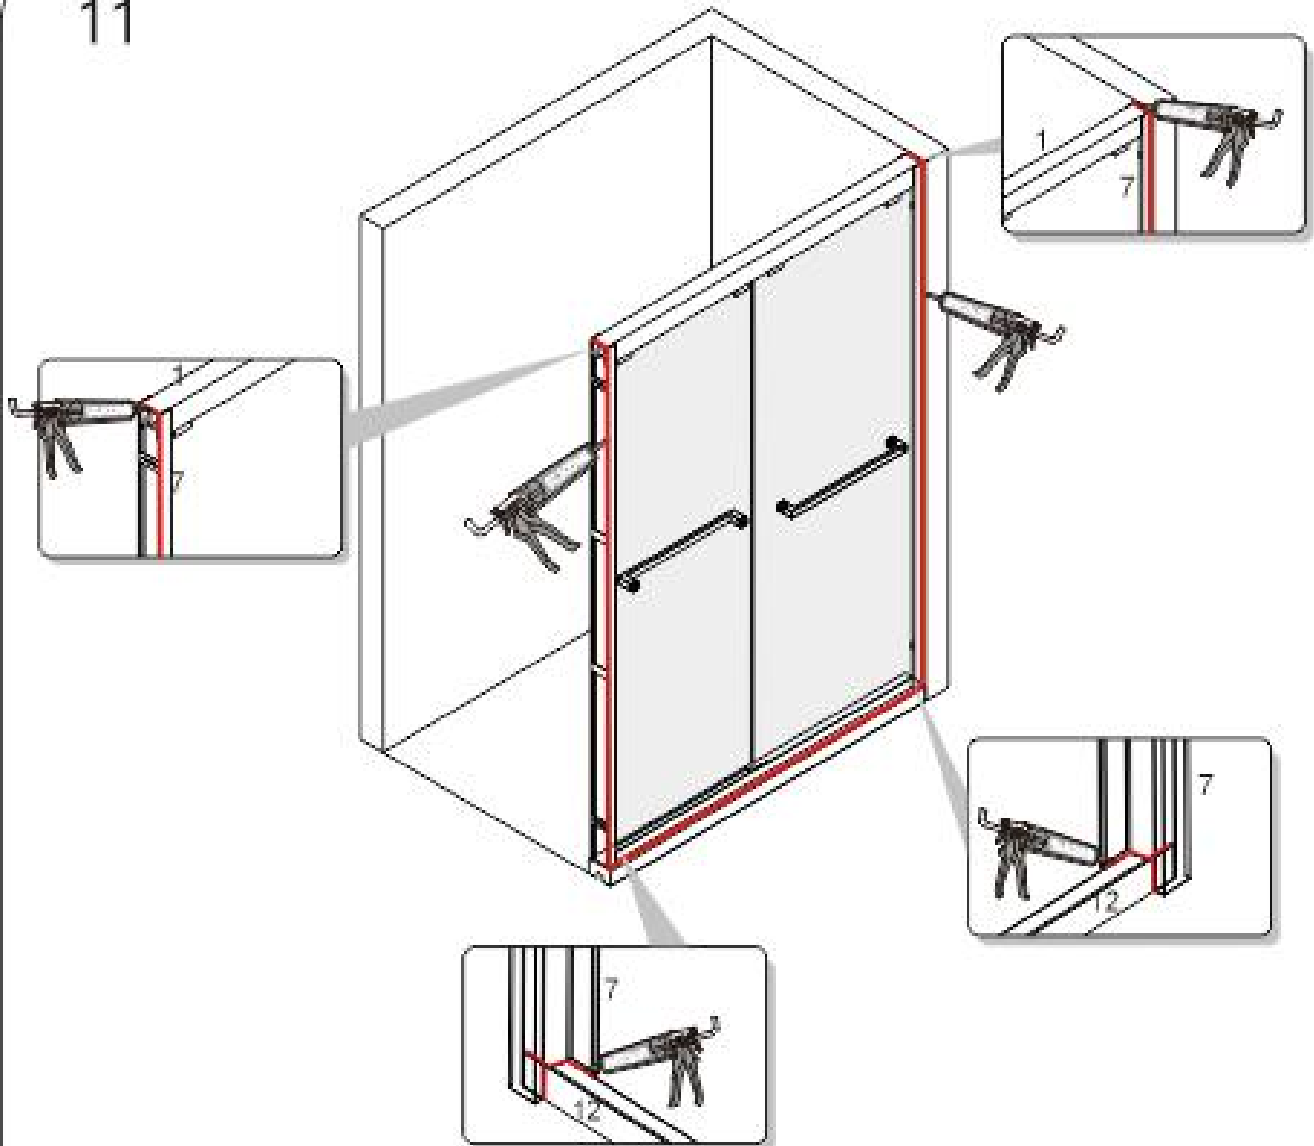


Do not use the shower enclosure for at least 24 hours in order to allow the silicone sealant to cure fully.

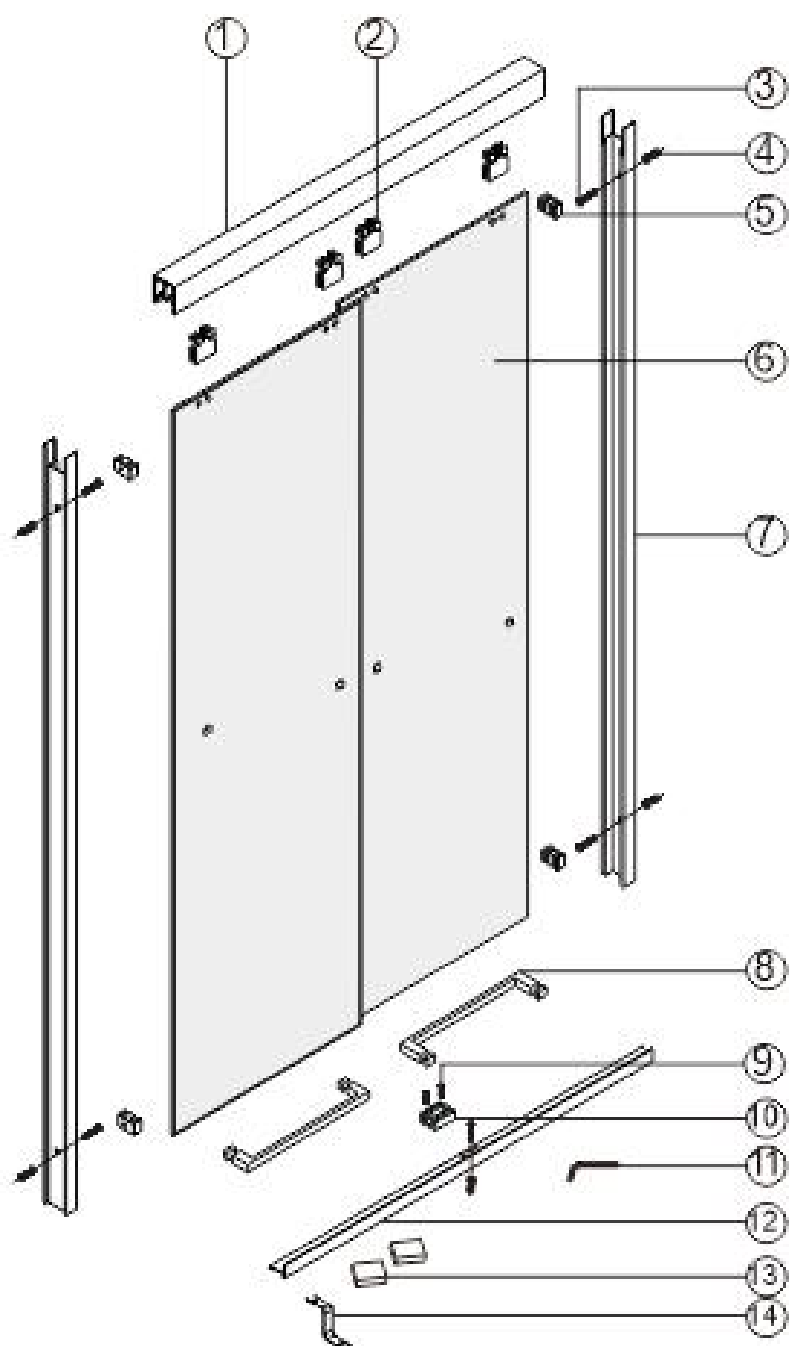


NO.	Picture	Qty	NO.	Picture	Qty	NO.	Picture	Qty	NO.	Picture	Qty	NO.	Picture	Qty
①		1	②		4	③		6	④		6	⑤		4
⑥		2	⑦		2	⑧		2	⑨		3	⑩		1
⑪		1	⑫		1	⑬		2	⑭		1			

1



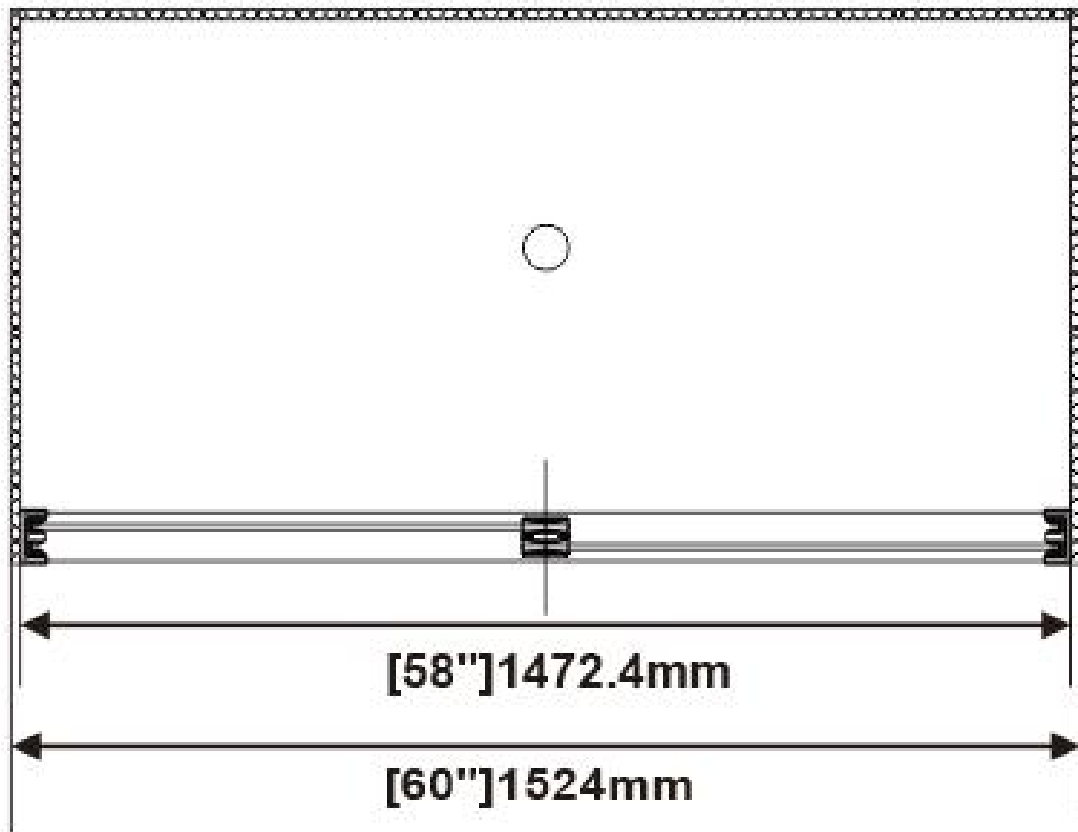


2



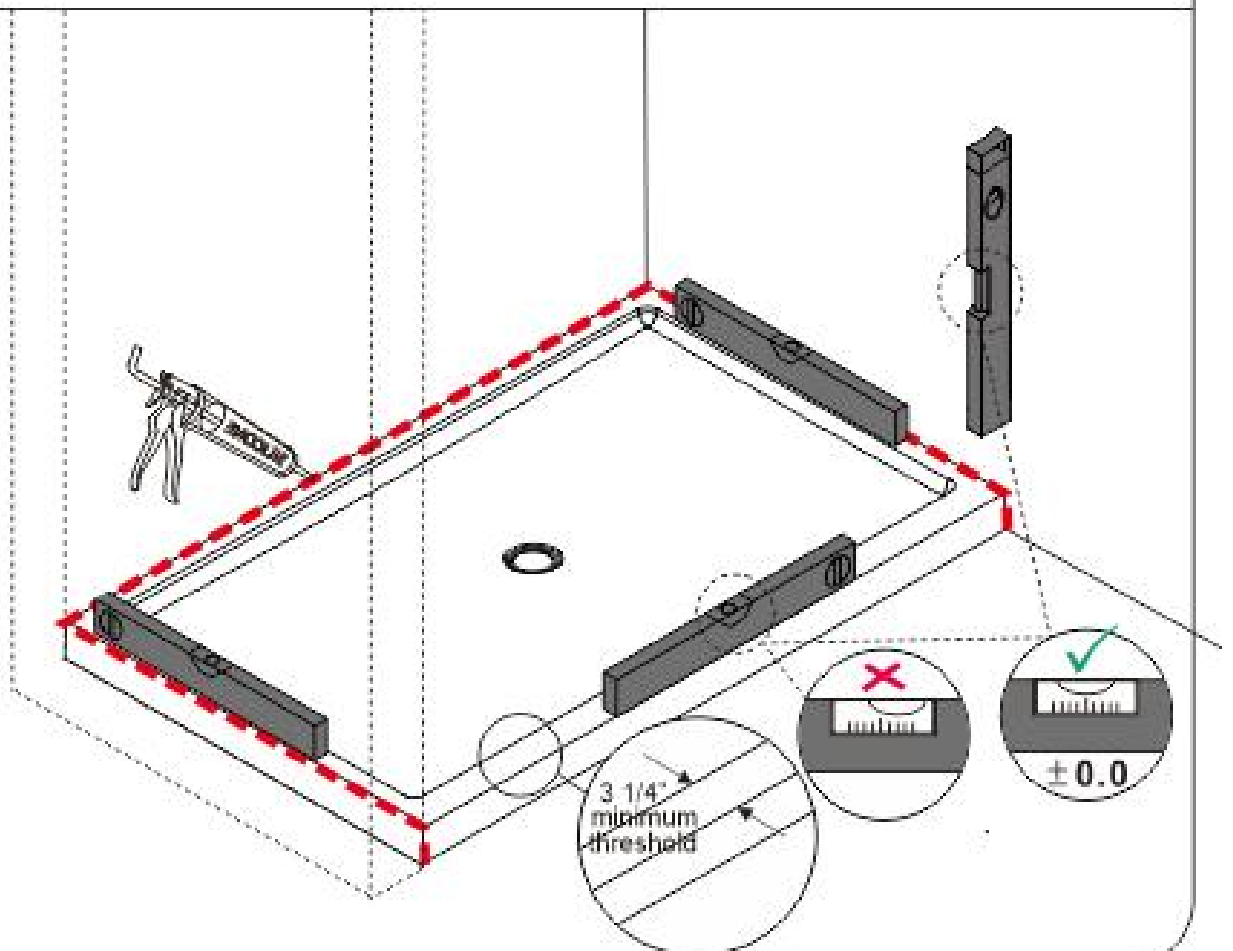


3

NO.	Picture	Qty
⑫		1

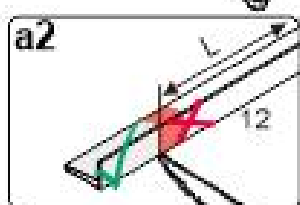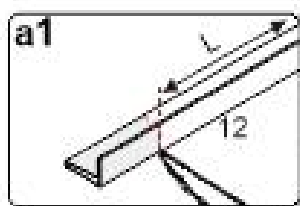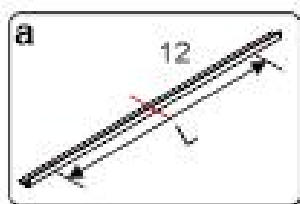







The Bottom Guide Rail (12) must be cut out equally from both ends in order to keep the center guide holes centered.

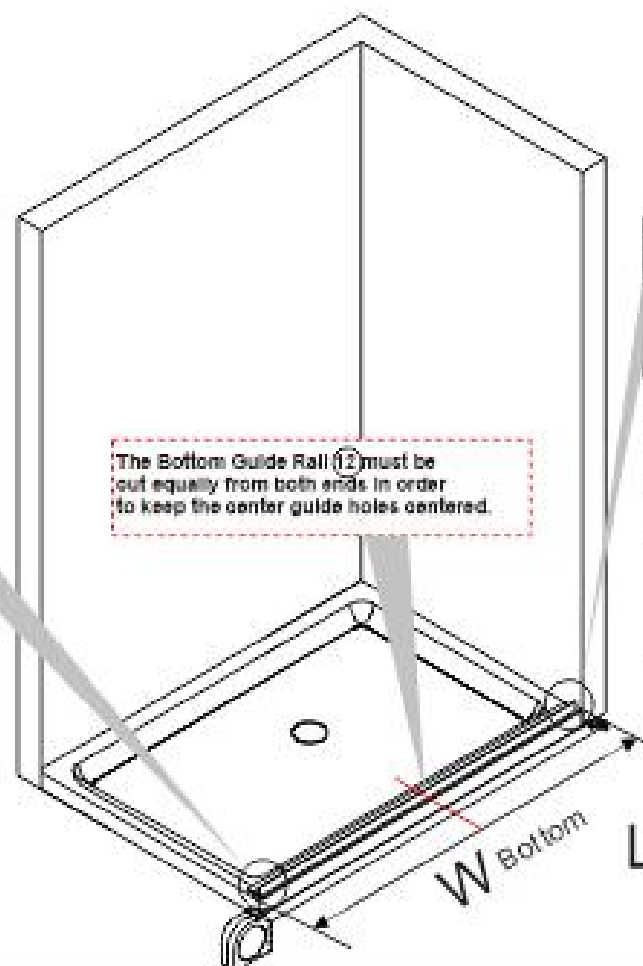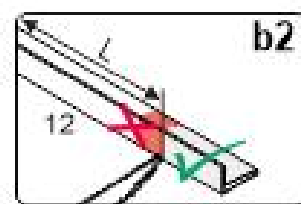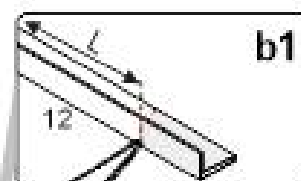

$$L = W - 20 [3/4"]$$







4

NO.	Picture	Qty
③		1
④		1

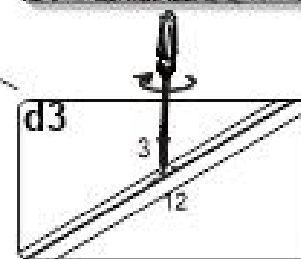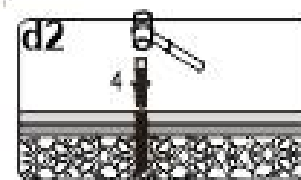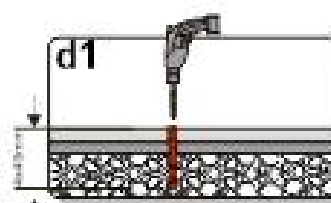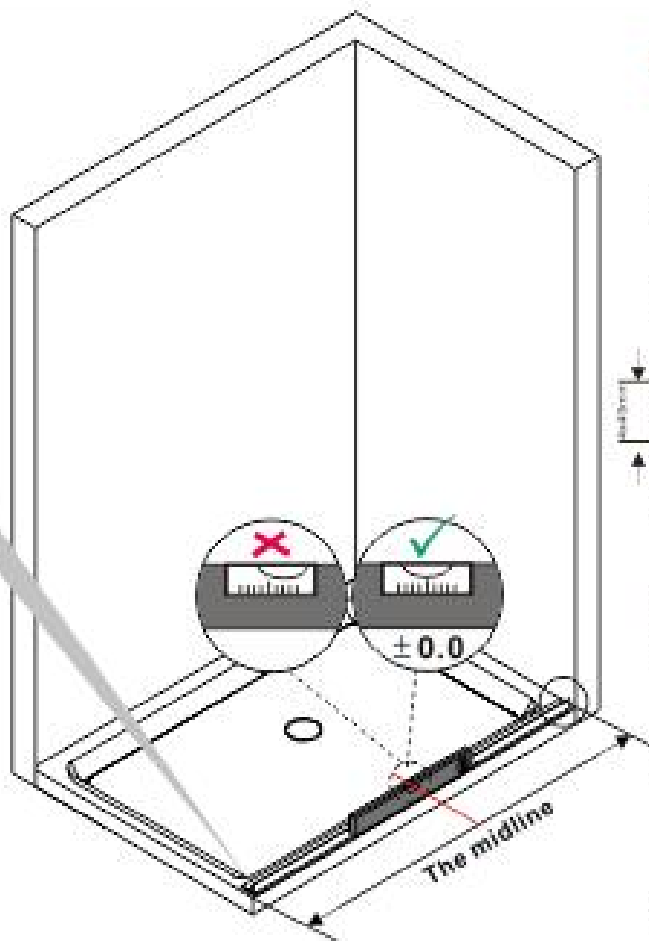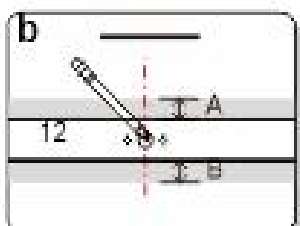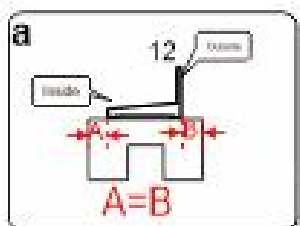





5

NO.	Picture	Qty
③		4
④		4
⑦		2

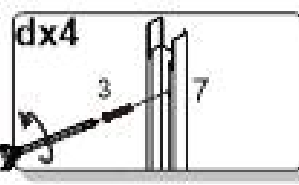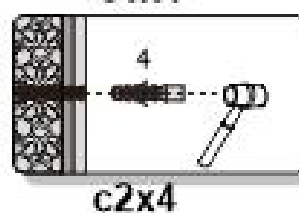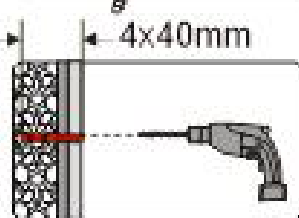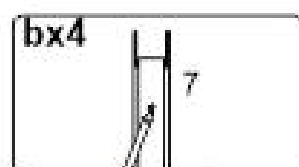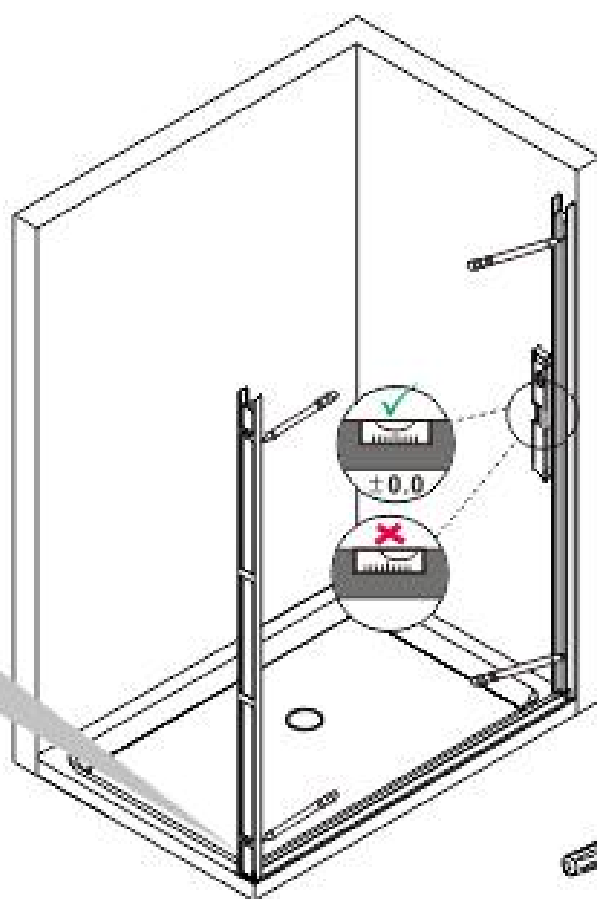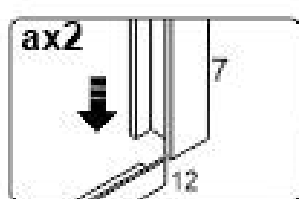





6

NO.	Picture	Qty
①		1

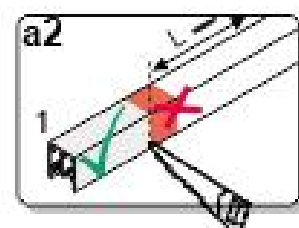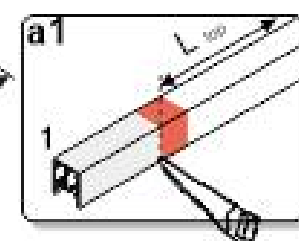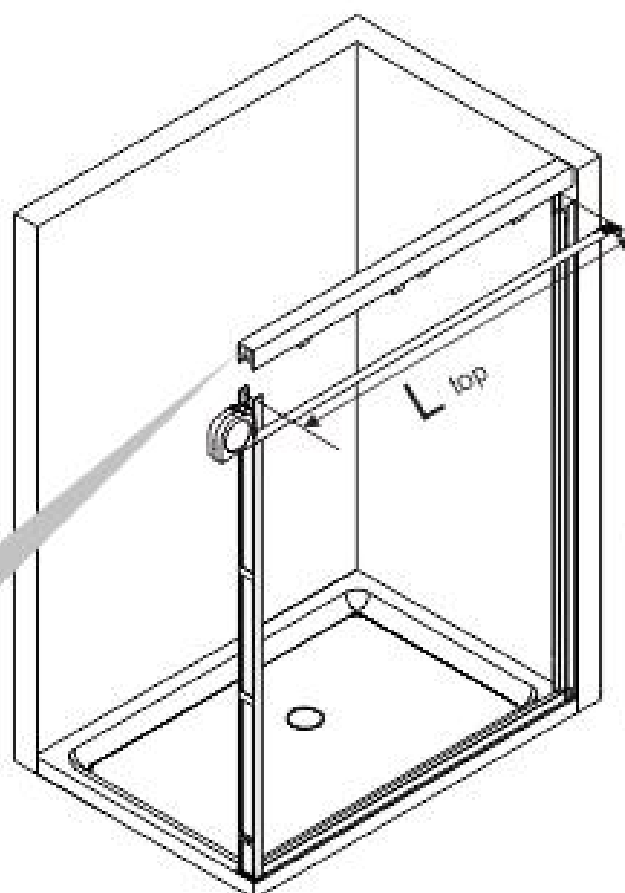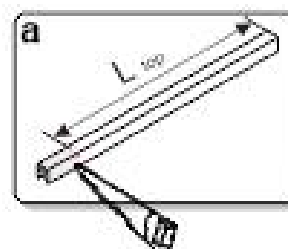






7

NO.	Picture	Qty
②		4
⑪		1

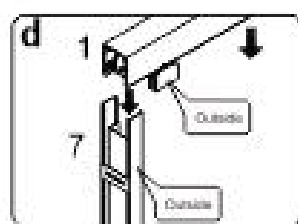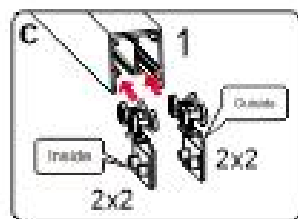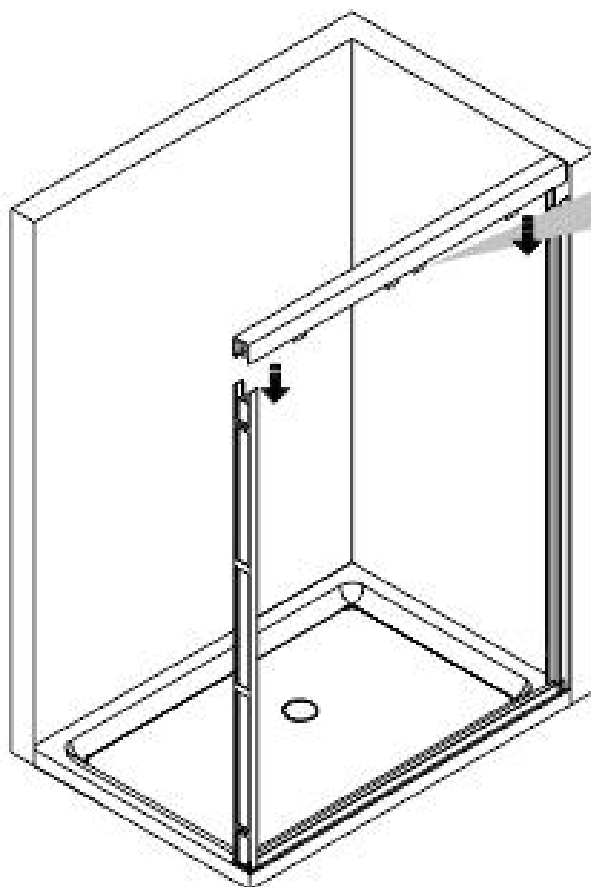
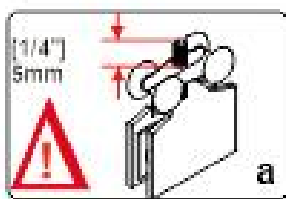


8

NO.	Picture	Qty
⑤		4
⑨		2
⑩		1

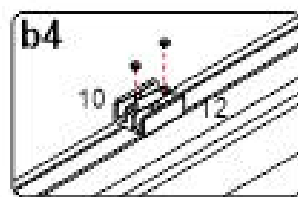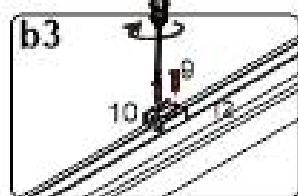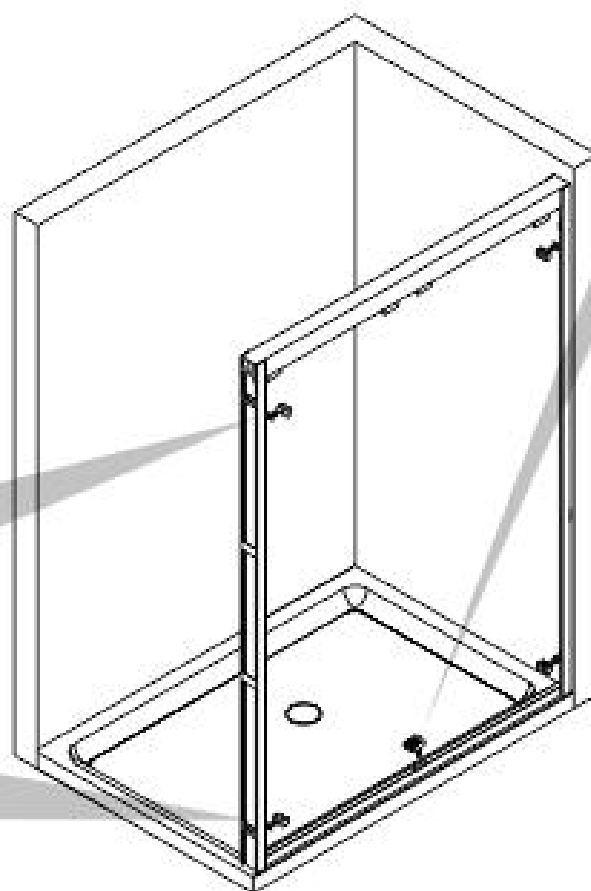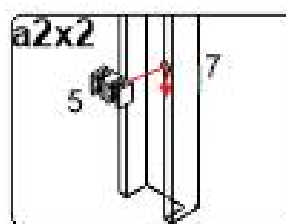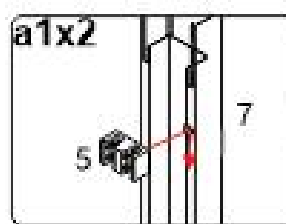

9

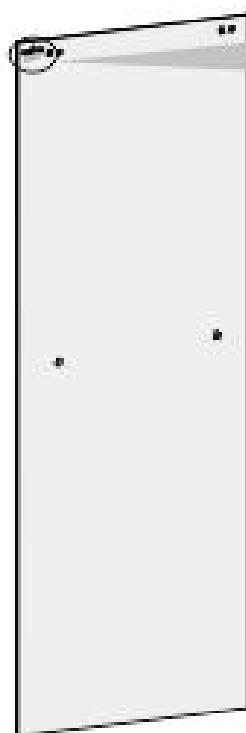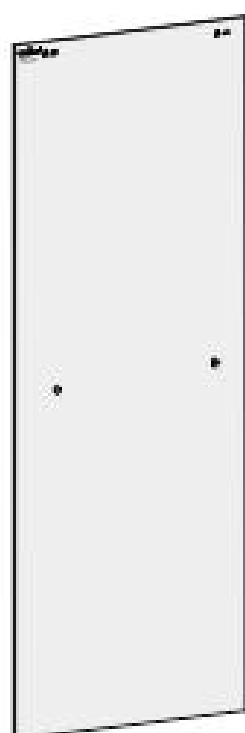






TOOLKISS®

TEMPERED GLASS
ANSI Z97.1-2015
16 CFR 1201
CAN/CSG-12.1-2017
1/4"UA SGCC-6119

Inside






10

NO.	Picture	Qty
⑥		1
⑬		2

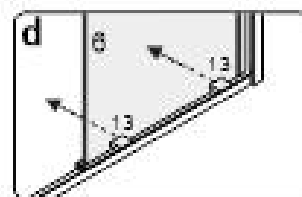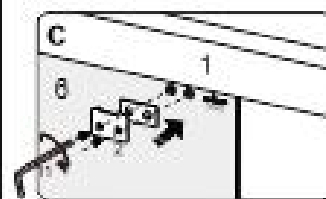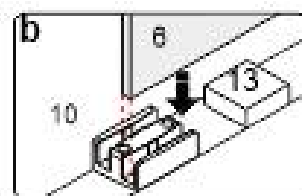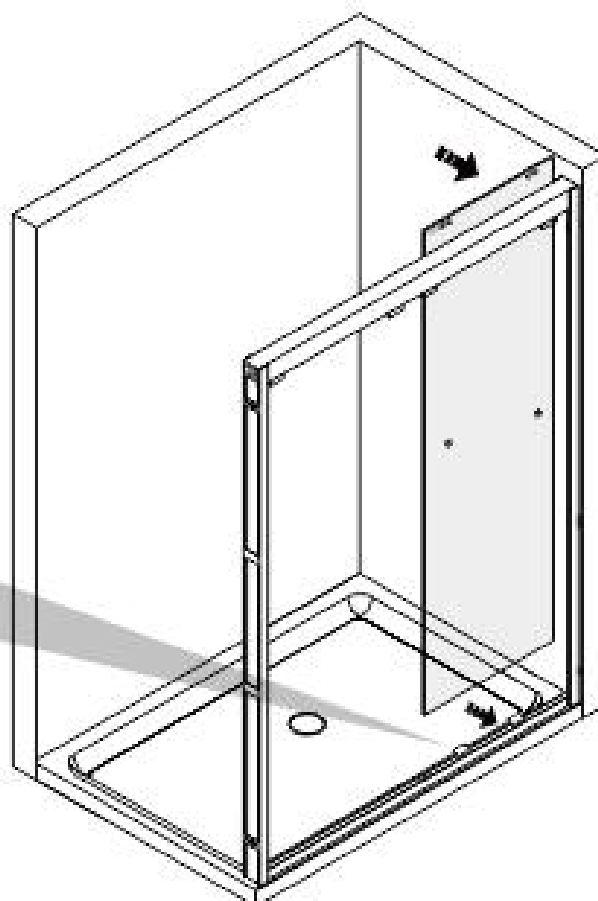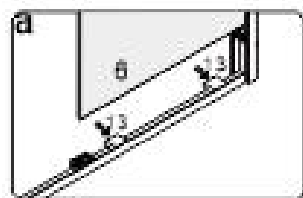







11

NO.	Picture	Qty
⑥		1

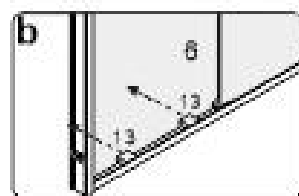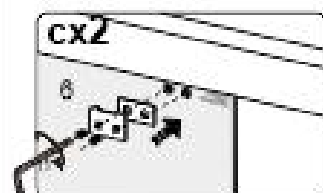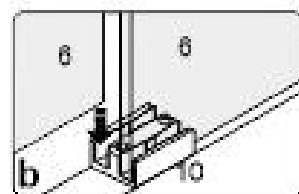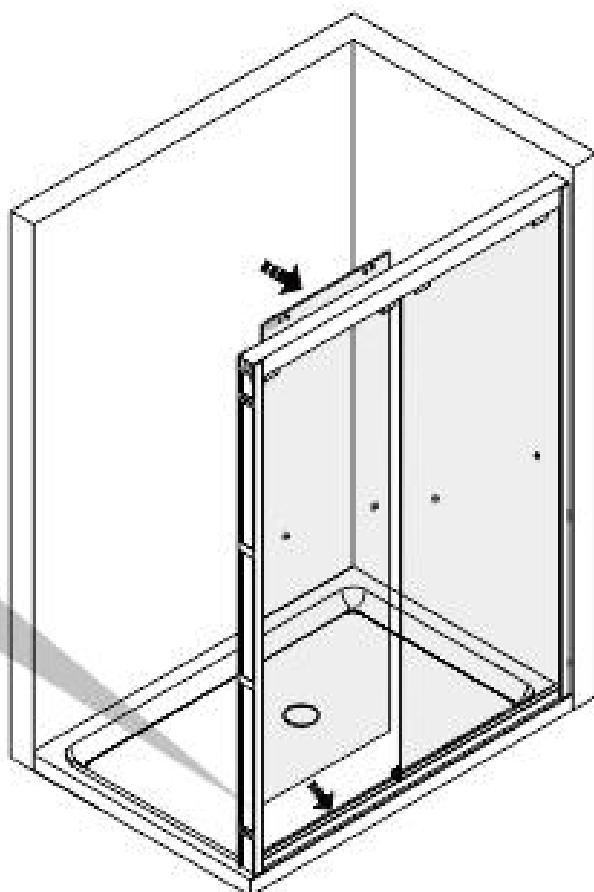
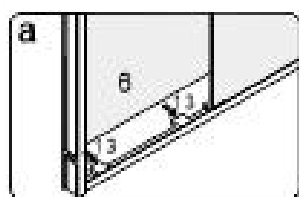


12


NO.	Picture	Qty
⑧		2
⑬		1

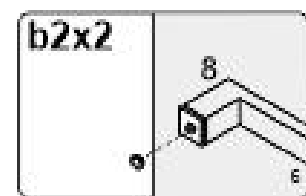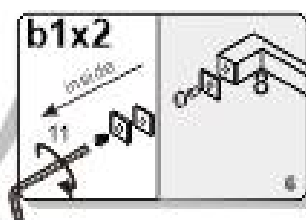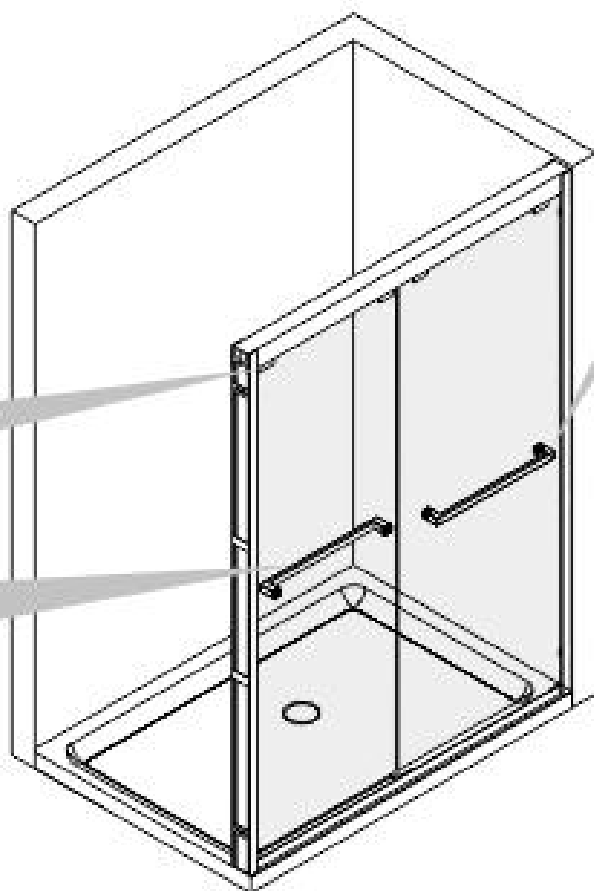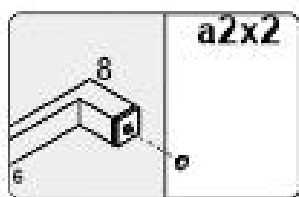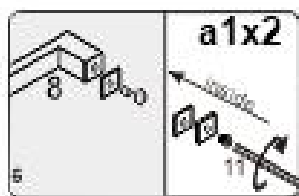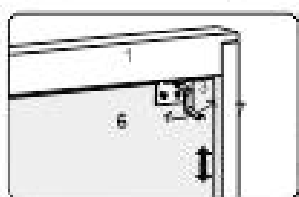

13

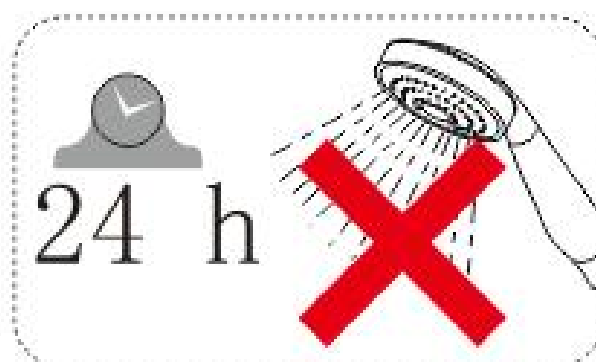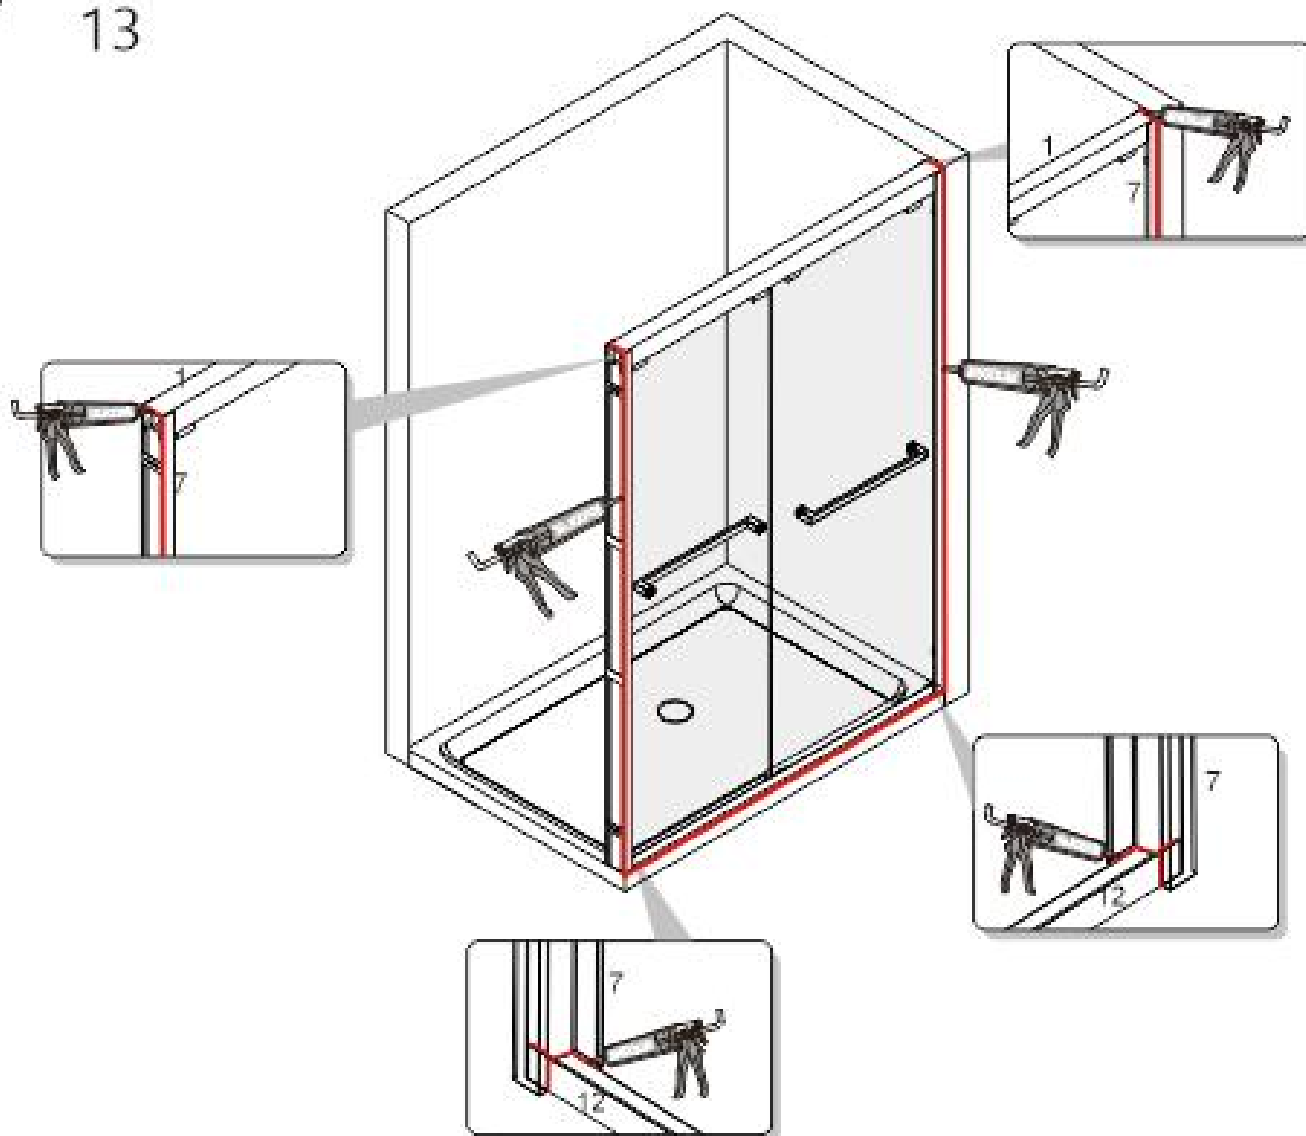

Do not use the shower enclosure for at least 24 hours in order to allow the silicone sealant to cure fully.

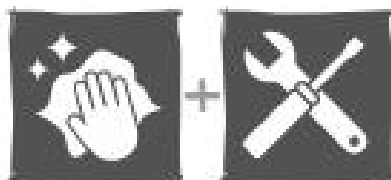

Care & maintenance

EN

The golden rules for care

NOTE: Use warm soapy water and a soft damp cloth to keep the glass clean. Wipe dry with a clean cloth. Glass cleaner can be used if required. Scourers, abrasives and chemical cleaners can damage the glass and pattern, and should not be used.

In hard water areas, insoluble lime salts may be deposited on the glass. If this is allowed to build up it becomes increasingly difficult to remove and looks unsightly. Regular cleaning will minimize this effect.

- ✓ Do not attempt to cut the glass.
- ✓ Do not strike the glass with hard or pointed items.
- ✓ Regularly check moving parts such as rollers and hinges to ensure they are secure and adjusted correctly. Tighten and adjust where required. Also check all sealed joints to ensure seal has not deteriorated. Re-seal if required.

TOOLkiss



Customer service



sales@toolkiss.com



+1 (832)3768443

If you have any questions please do
not hesitate to contact us.

.....

TOOLKISS is the destination for all things home and a
place that helps everyone, anywhere, create their
feeling of home.

🌐 www.toolkiss.com