



Thank you for choosing our panels...

- Bring out your creativity
- Dramatically change your walls
- All you need is simple tools

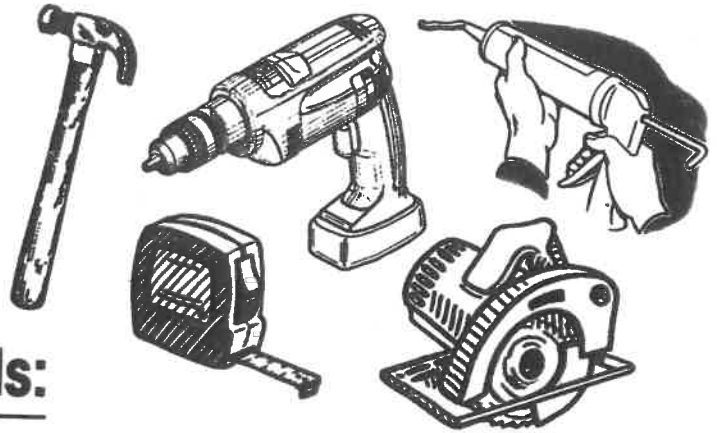

• How to install DPI panels:

**3/16" & 1/4"
thickness**

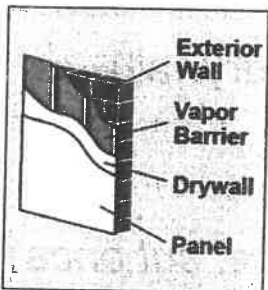

- Stand panels around the room where they will be installed
Allow air to circulate around front & back of panels
24 hrs. above grade / 48 hrs. below grade

Apply panels to a smooth, solid surface, (ie: drywall)
Exterior walls use at least a 4-mil visqueen vapor barrier
1/4" thick panels may be installed directly to studs

Measure & cut panels to size - (*measure twice, cut once*)
If installing multiple panels, leave a gap between them
A dime's width gap will allow for seasonal expansion

Use quality construction adhesive (i.e: Loctite PowerGrab)
Extrude a bead 1/4" in diameter, or less, around the
perimeter of the panel and vertical lines 12" or 16" O.C.

Wait for adhesive to set up, but still be tacky
Apply panel to wall, position as needed, press into place
Use paneling nails to secure panels, along with adhesive

Trim molding may also be used for a professional look
Clean panels with mild soap and water if needed
Do not use abrasive cleaners on paneling



- for more information go to www.decpanels.com



DPI
DECORATIVE PANELS
INTERNATIONAL
An American Standard Brands Company