




Not sure how many boxes of RECLAIMED WOOD PANELS to order?

Use this guide to help determine how much product is needed to complete your project

Each box contains 10 panels, offering 19 square feet (sqft) of coverage
 Panel measurements: Depth: 1/2 in. Height: 12 in. Width: 24 in.

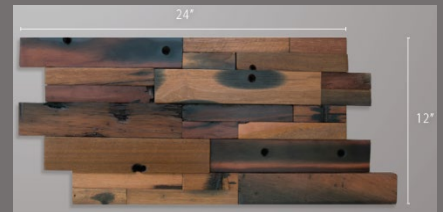

Calculate My Space

1. Determine the total wall square footage by multiplying the length by the height of each surface area to be covered. Repeat this step for measuring doors, windows, and other openings you will not be covering.

$$\text{Wall Width in Feet} \times \text{Wall Height in Feet} = \text{Project Square Footage}$$

2. Take the Project Square Footage and deduct the square footage of doors/windows/and other openings.

$$\text{Project Square Footage} - \text{Sqft of Doors/Windows \& Other Openings} = \text{Adjusted Project Square Footage}$$

3. Divide the Adjust Project Square Footage by 19 and round up to the nearest whole number to reach the number of boxes required for your project. Some may choose to add an additional 5-10% buffer.

$$\text{Adjusted Project Square Footage} / \text{Square Feet per Box} = \# \text{ Boxes}$$