





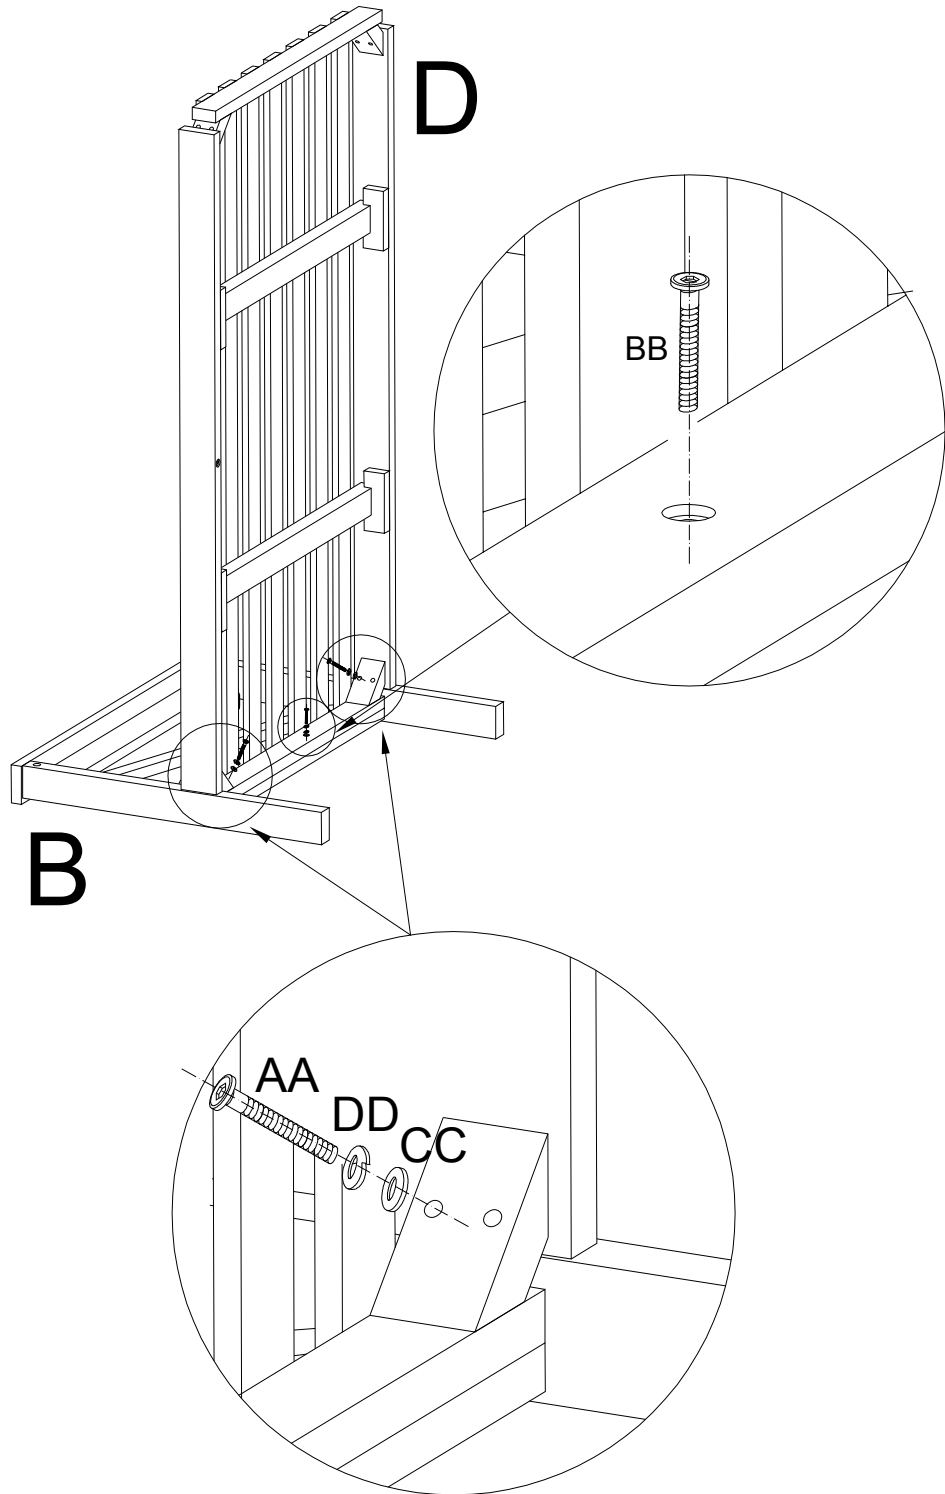
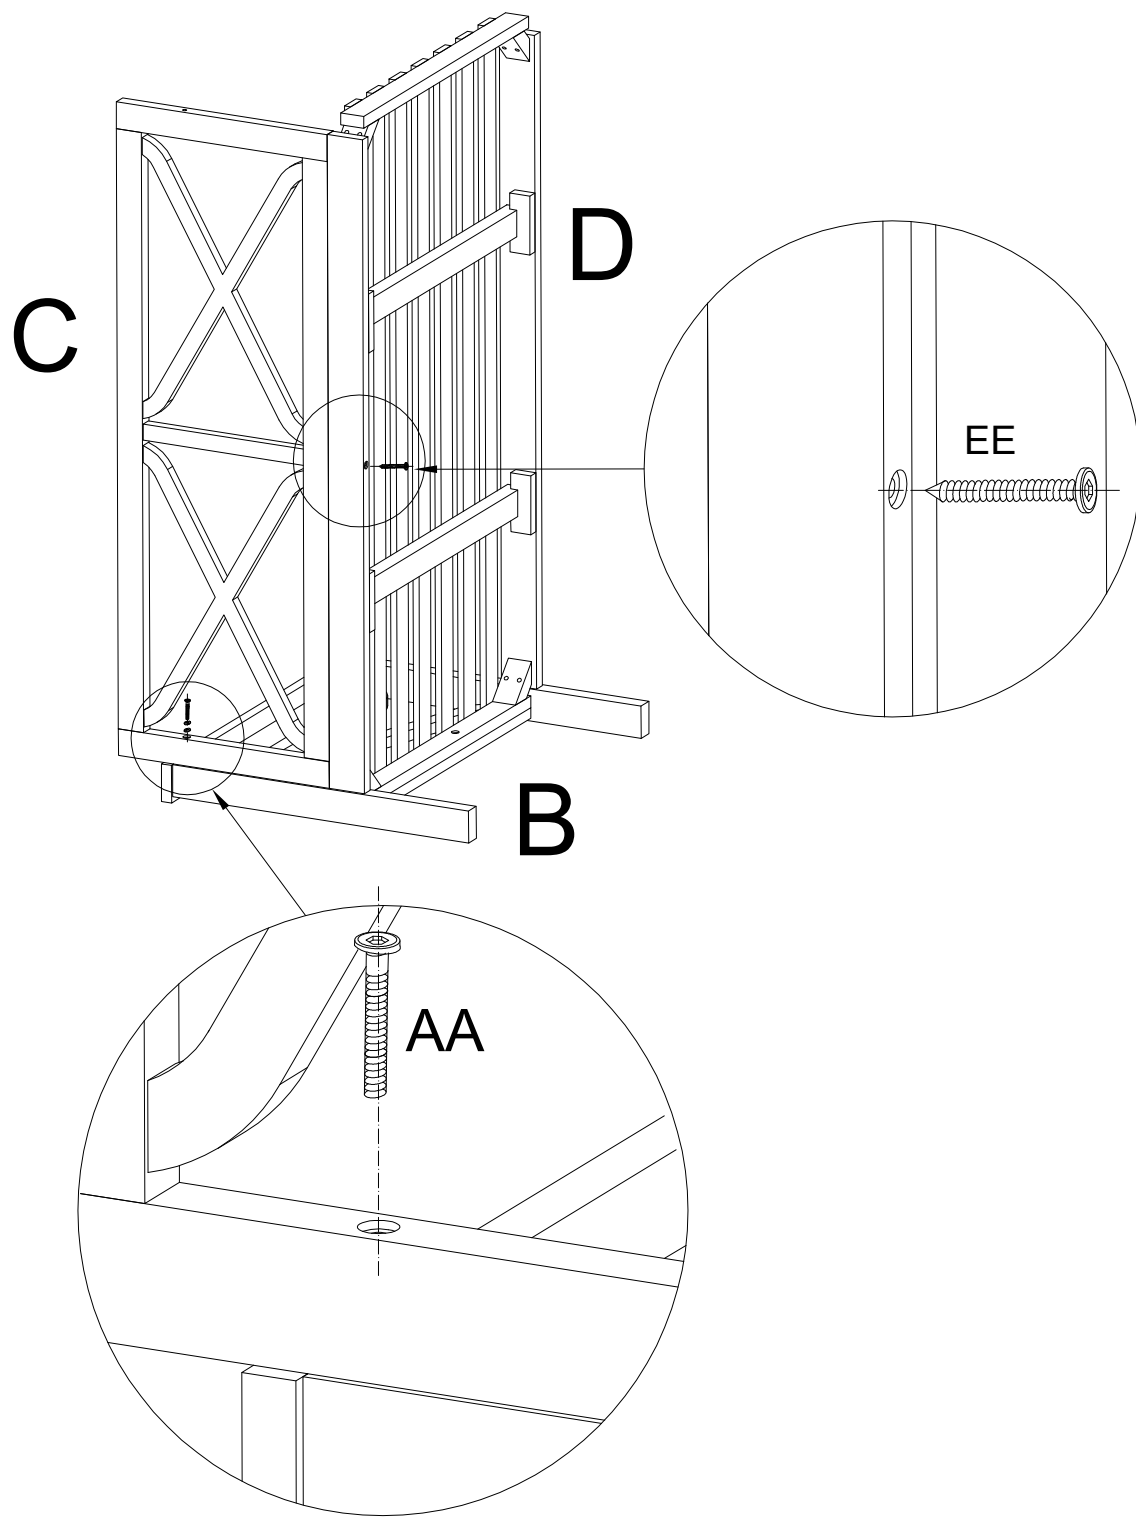


AA	 Bolt M6x65	10 PCS
BB	 Bolt M6x32	2 PC
CC	 Flat washers M6	8 PC
DD	 Spring washers M6	8 PC
EE	 Screws M6x90	1 PC
FF		1 PC




# STEP 1








# STEP 2




# STEP 3

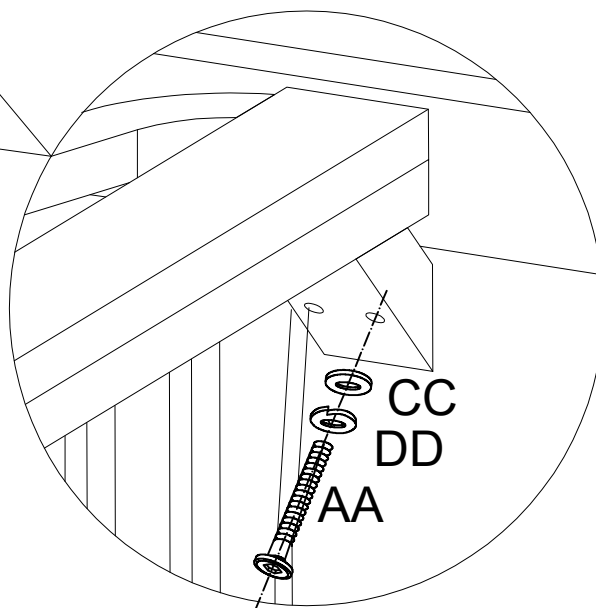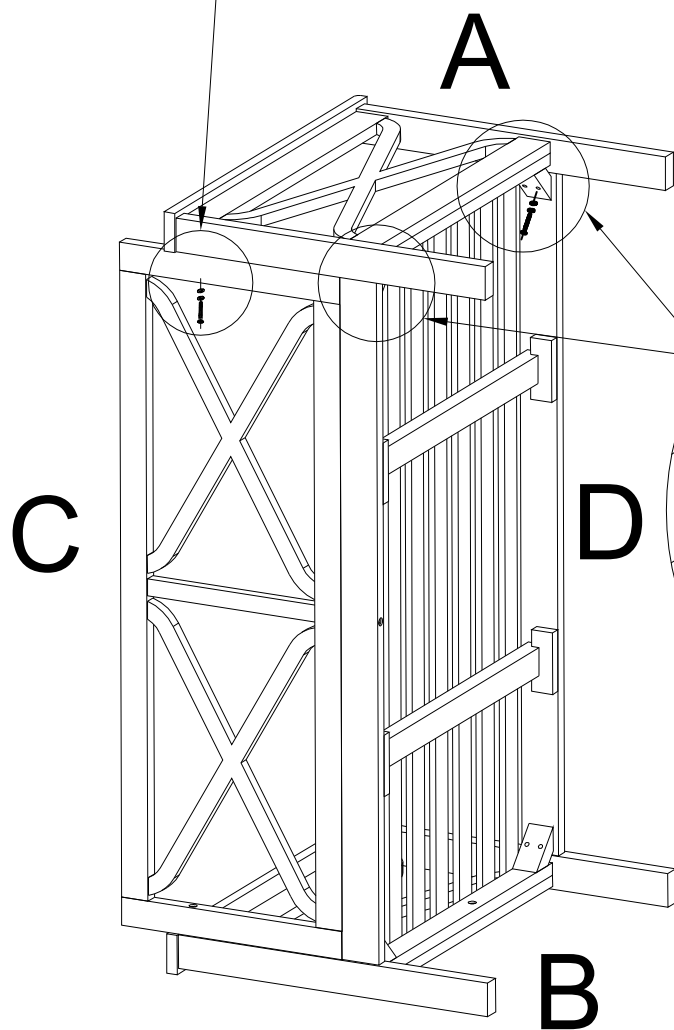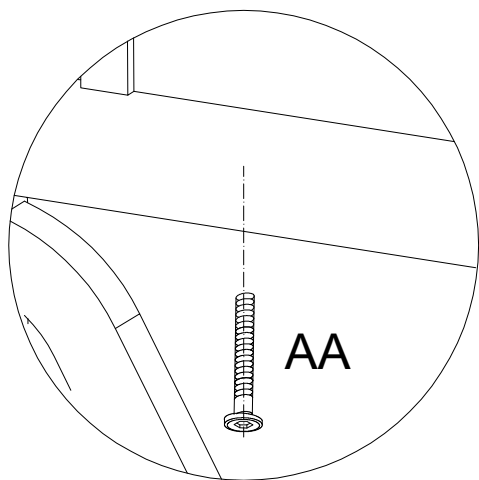

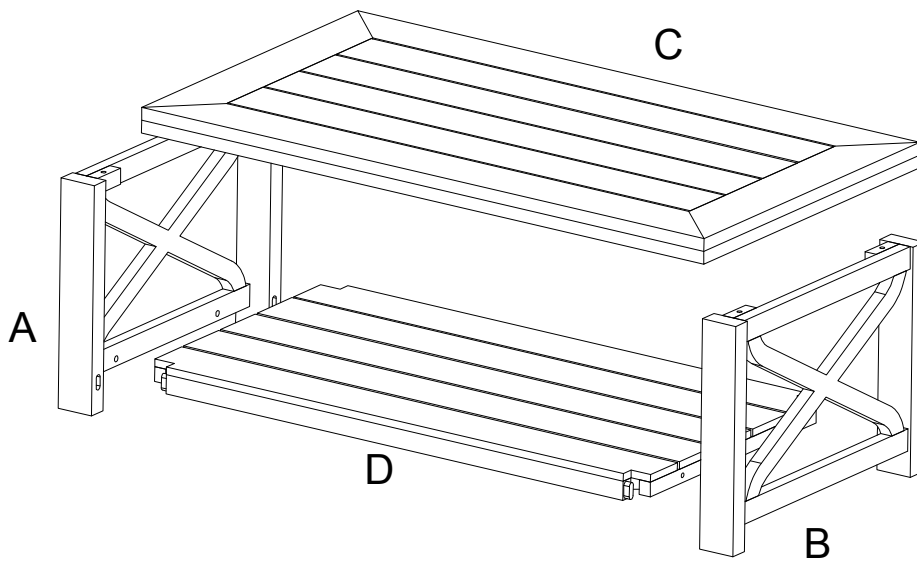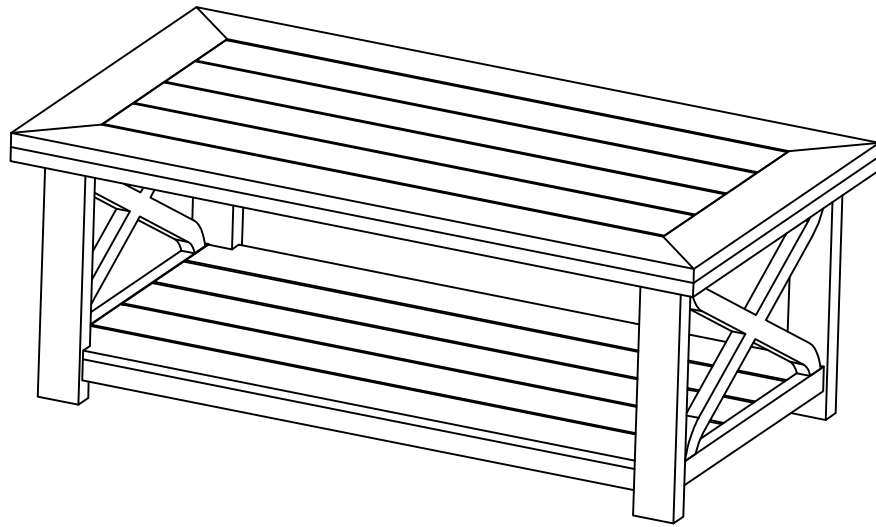





AA	 Bolt M6x32	4 PCS
BB	 Screws M6x45	8 PCS
CC		1 PC





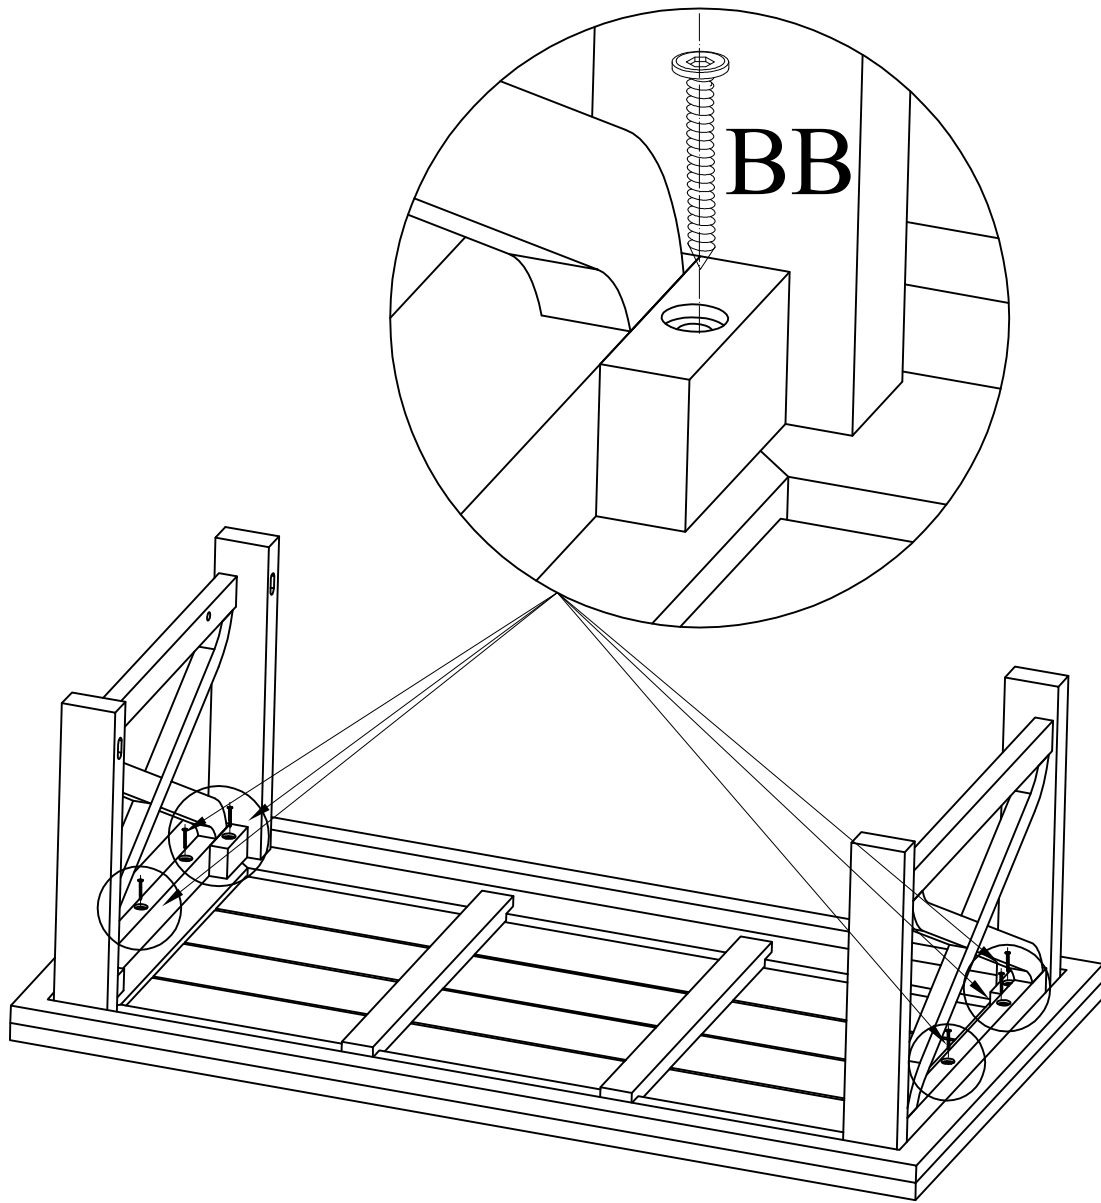
# STEP 1

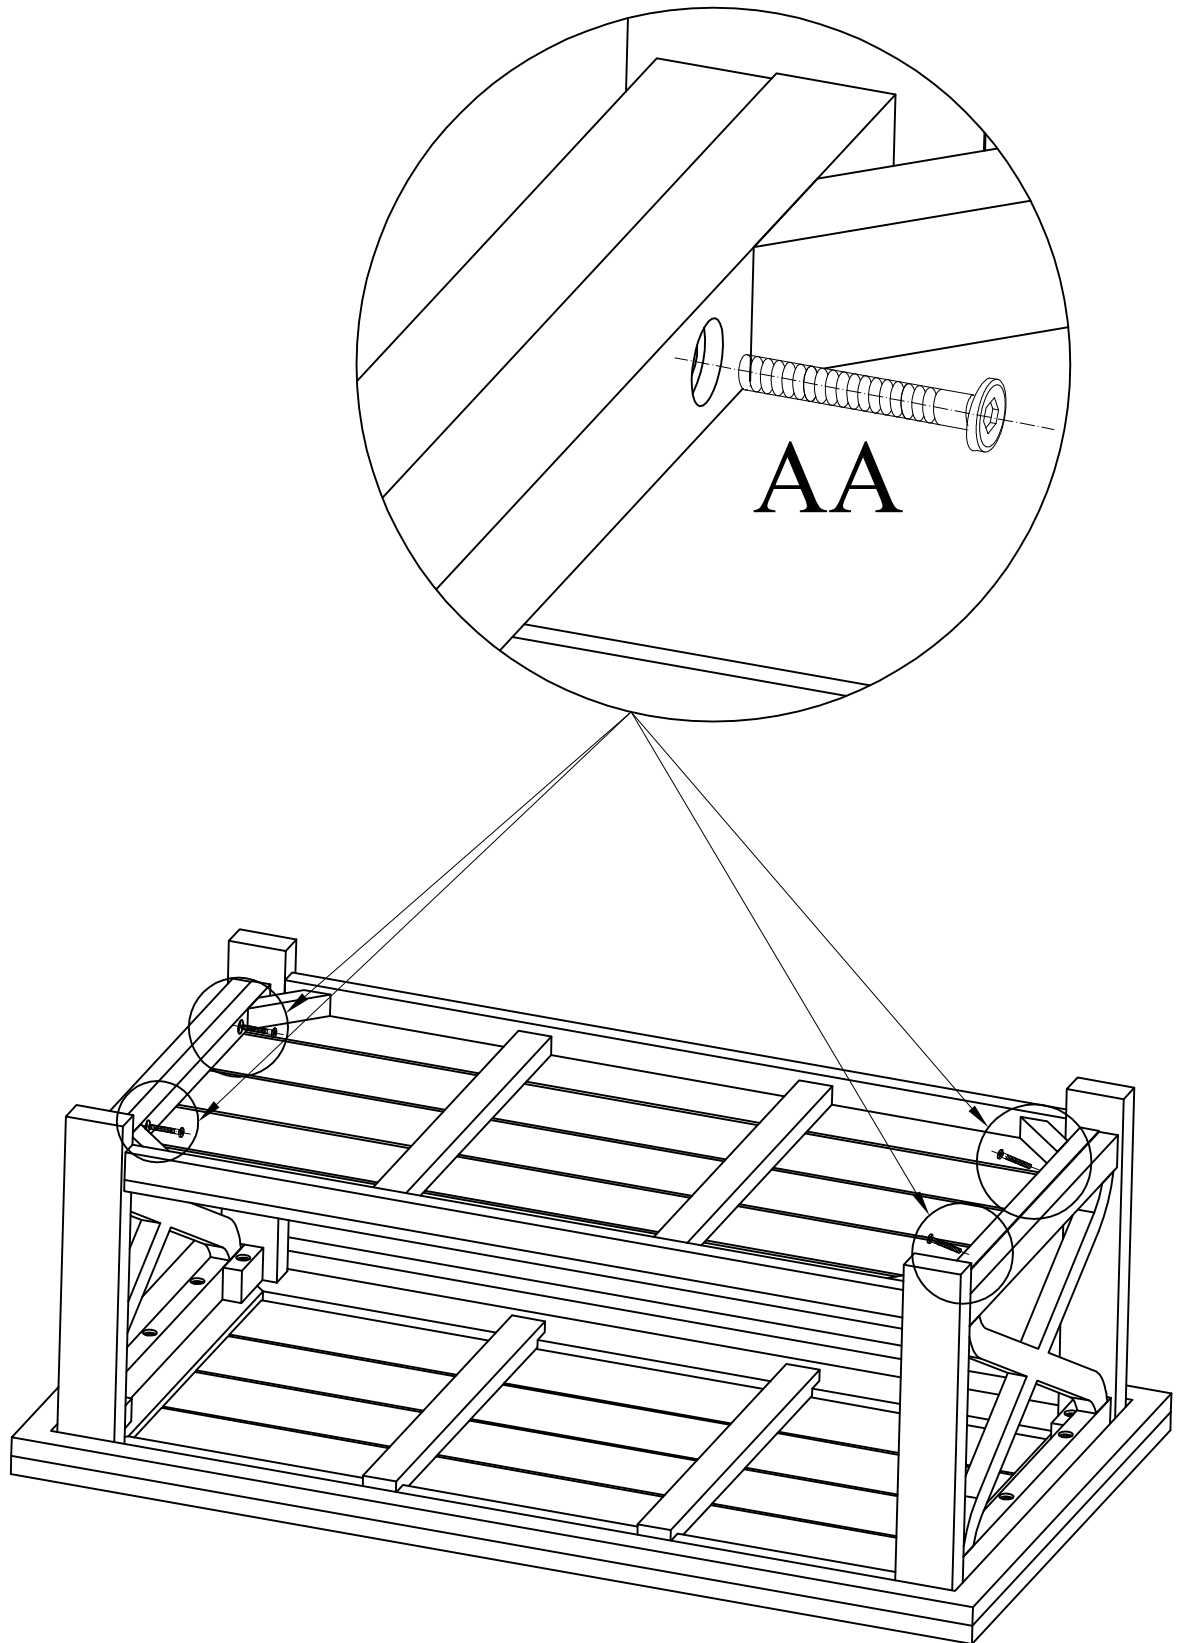

# STEP 2

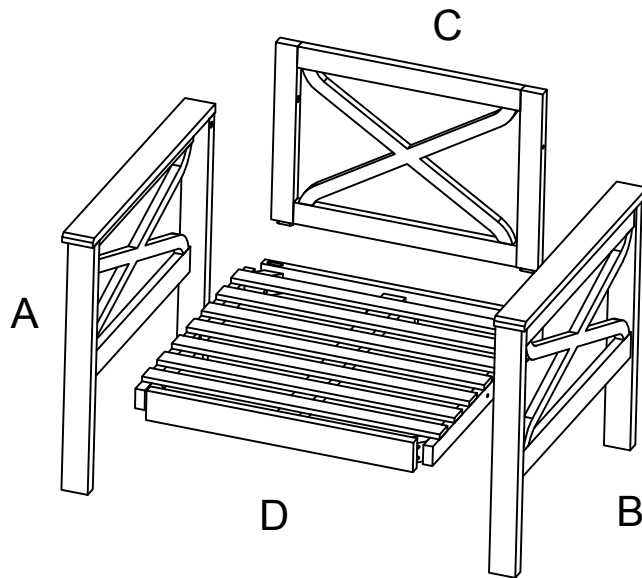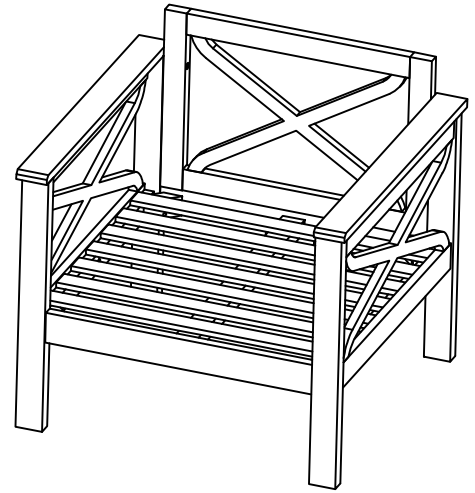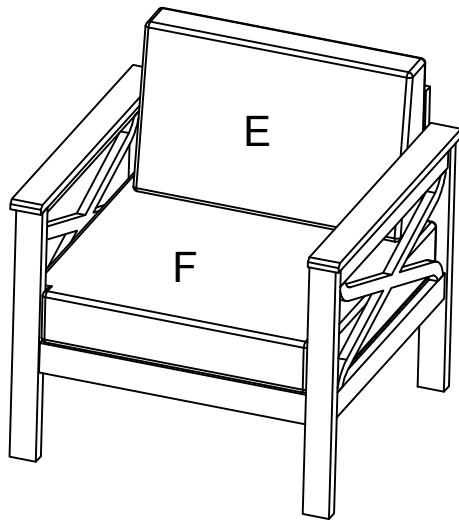





AA	 Bolt M6x65	10 PCS
BB	 Bolt M6x32	2 PC
CC	 Flat washers M6	8 PC
DD	 Spring washers M6	8 PC
EE		1 PC



# STEP 1

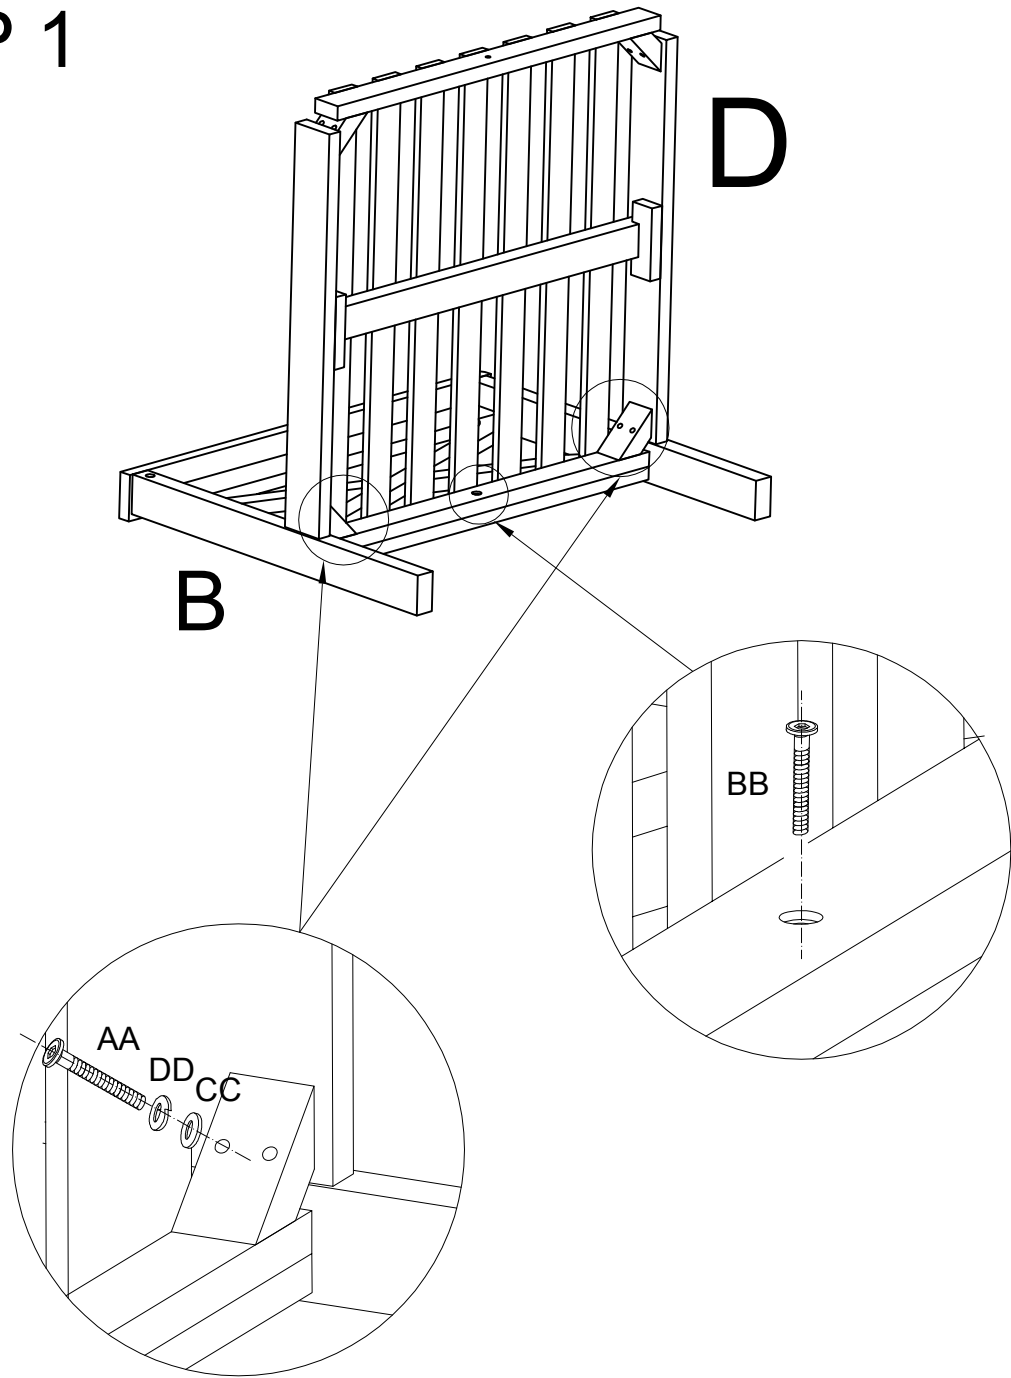

# STEP 2

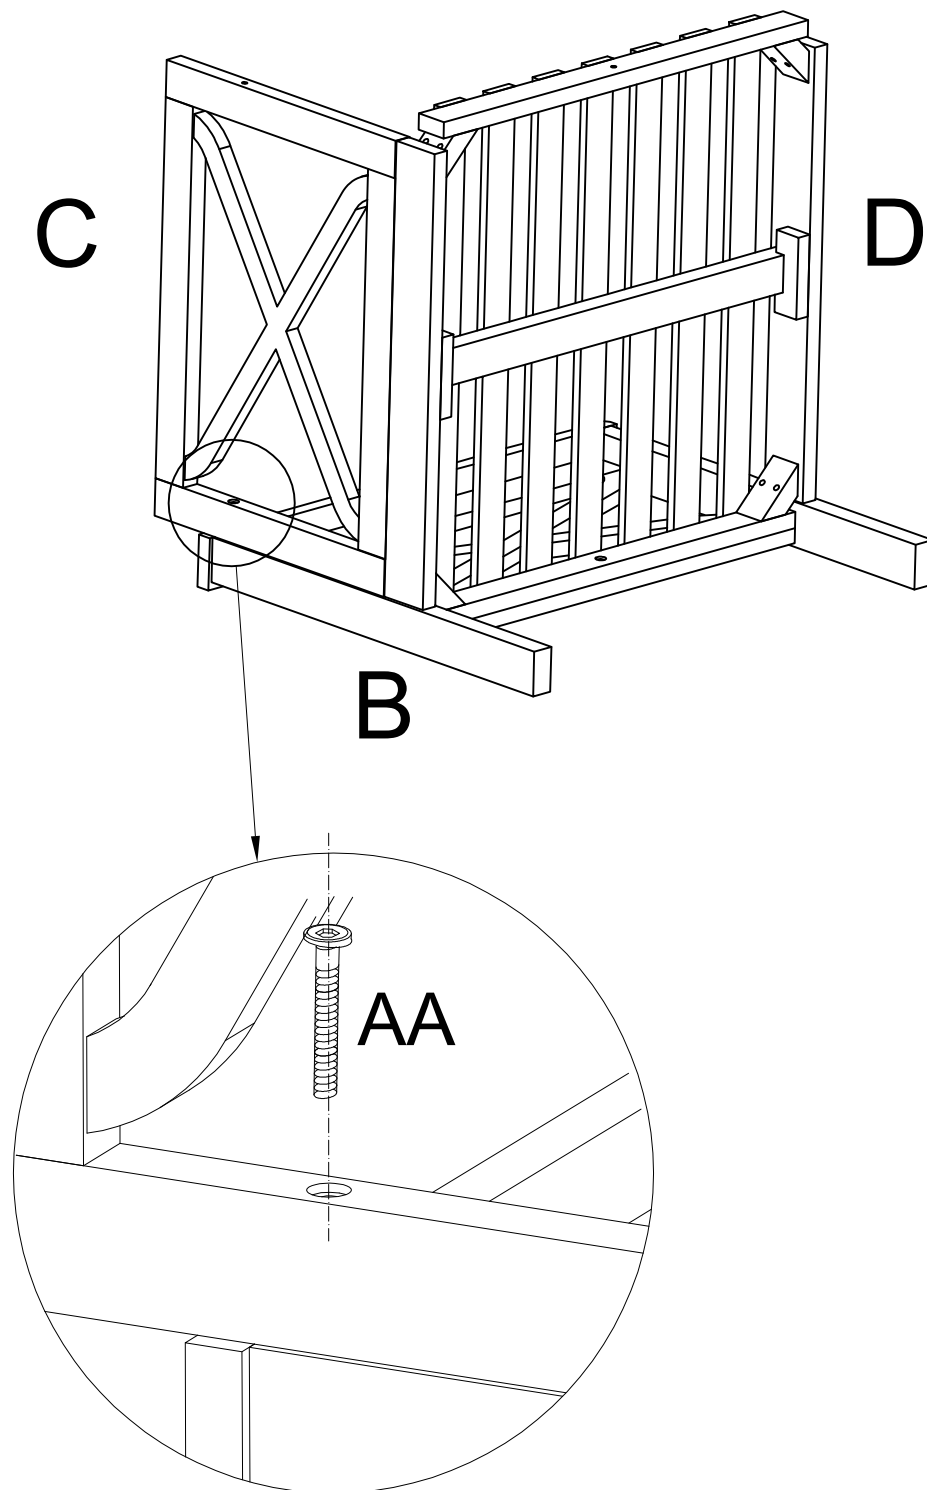

# STEP 3

