



HOW TO USE *Flair-It* FITTINGS:

1 Cut the tubing square and slide nut over tubing.

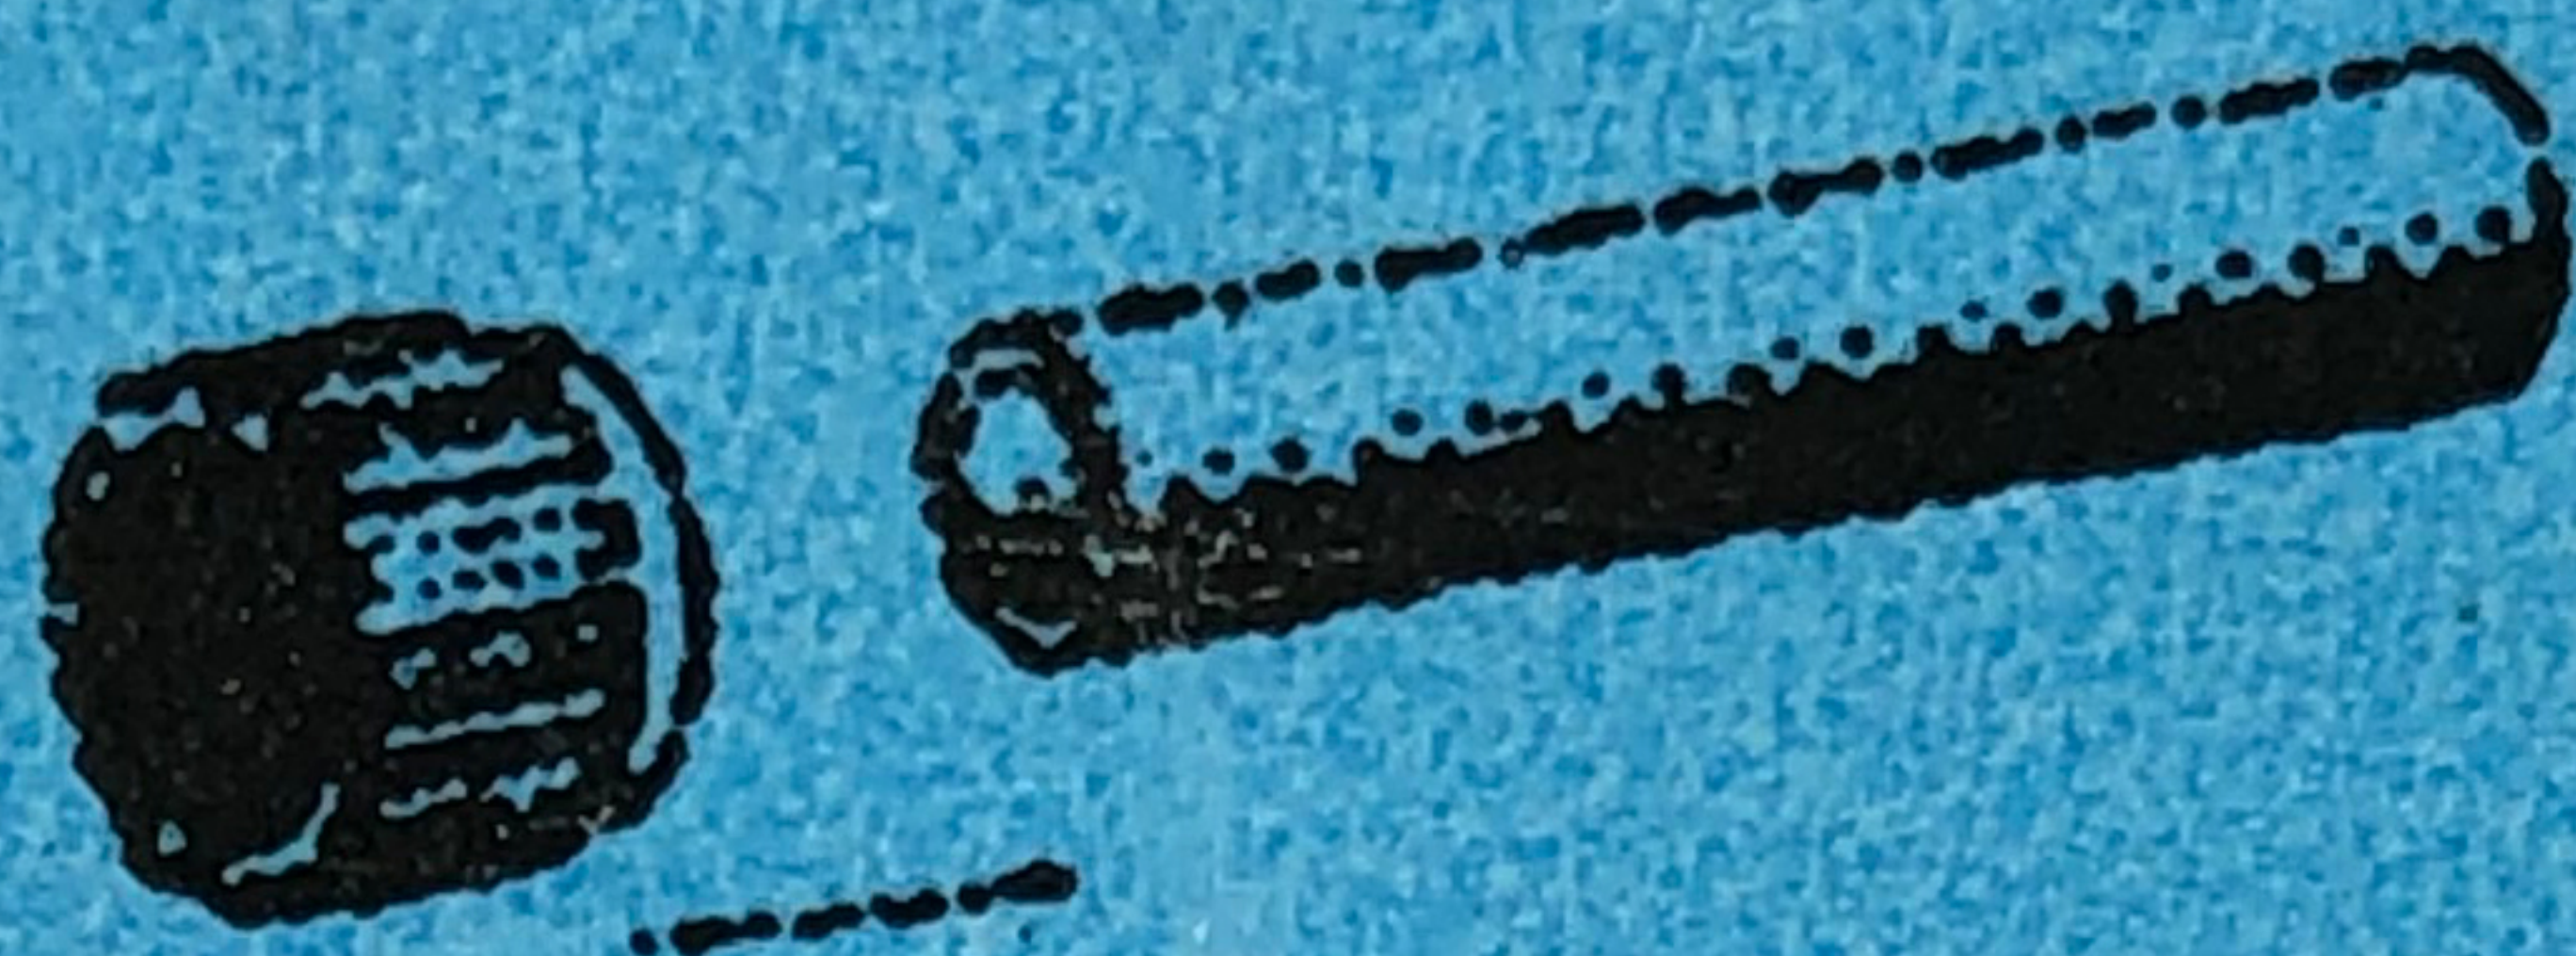

2 Firmly press tubing onto the flare of the fitting using a rocking motion until the tubing rests against the fitting.

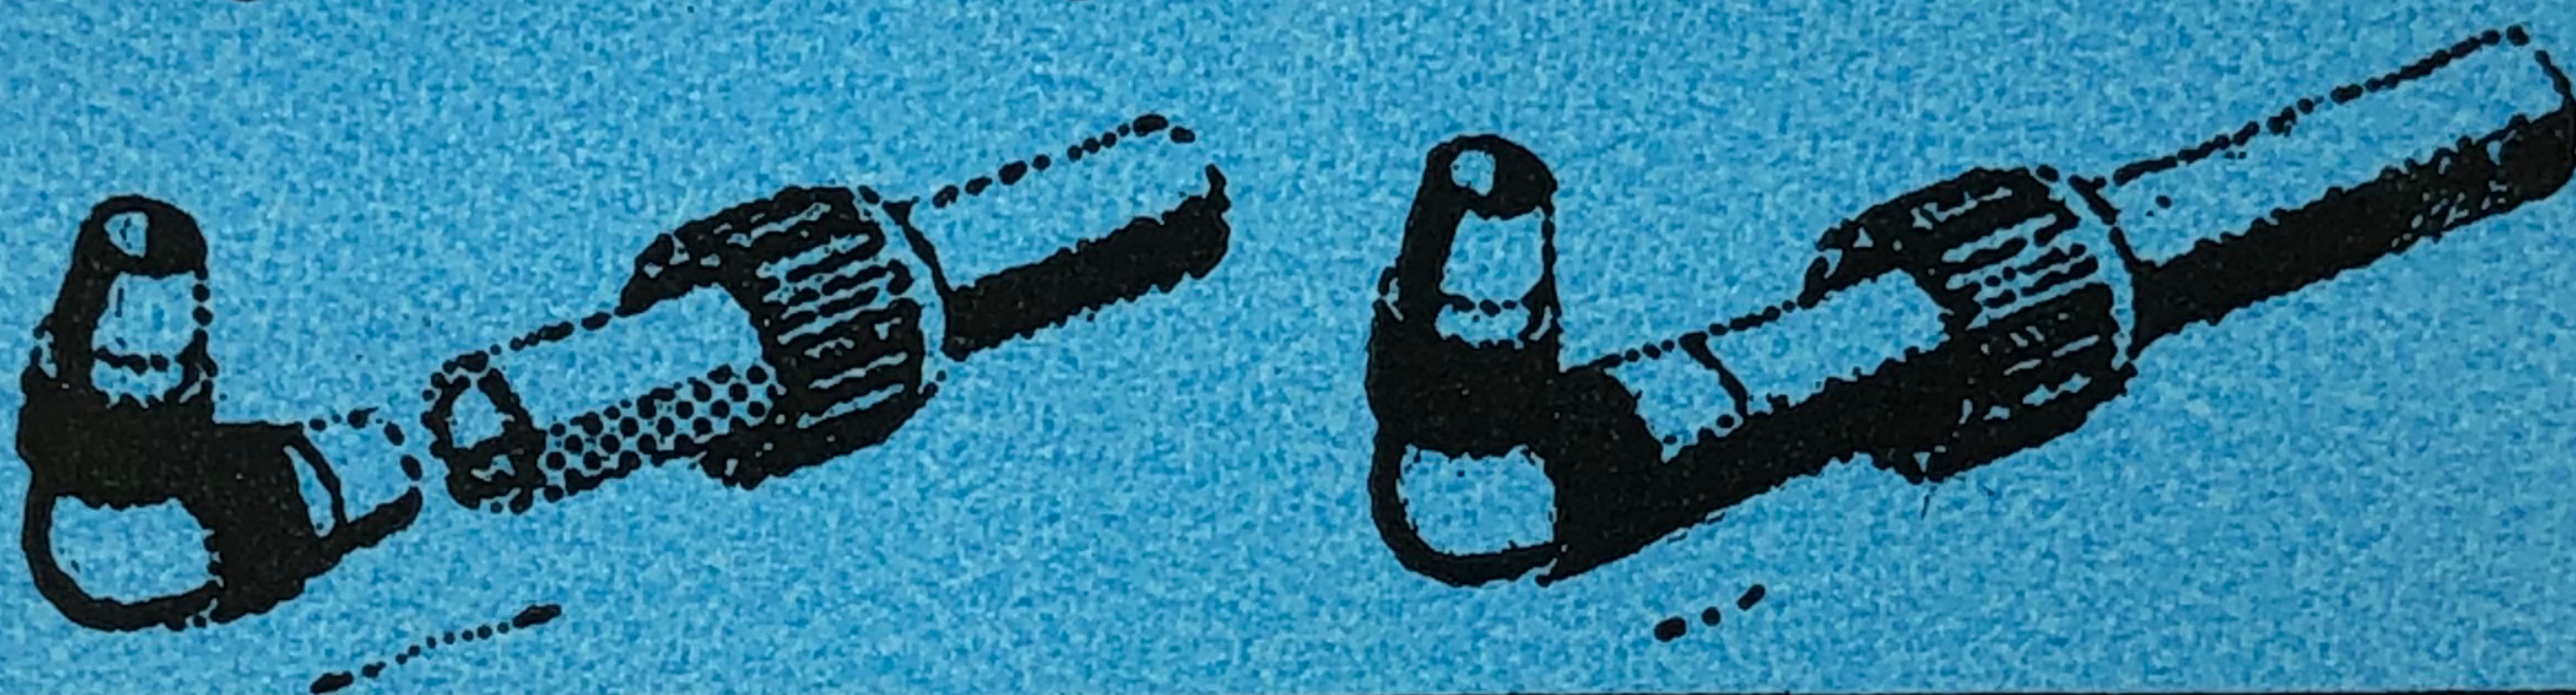

3 Slide the nut to the threads and hand tighten securely onto the fitting.



(Applications) for Hot & Cold Potable Water Fittings ONLY 180 Degrees F at 100 psi.

When connecting to Brass, Galvanized, or CPVC tubing use a male *Flair-It* fitting instead of a female fitting. *Flair-It* nuts do not require Teflon tape or any other sealants. Teflon tape should be used on Male Pipe Threads when connecting to Female Pipe Threads.

When using 3/4" *Flair-It* PEX fittings on Polybutylene you must use a 26790 adapter. 3/8" and 1/2" *Flair-It* fittings will work on both PEX and Polybutylene tubing.