


WOOD FINIAL POST TOP INSTALLATION INSTRUCTIONS

ITEMS YOU WILL NEED


- Power drill with 1/4" drill bit
- Ruler/straight edge
- Carpenter's pencil
- Safety glasses/goggles
- Gloves

INSTALLATION INSTRUCTIONS


Step 1: Use a ruler/straight edge to locate the center of the top of the treated deck post. Mark the center with a pencil.

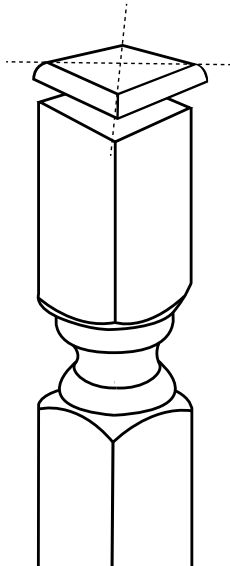

Step 2: Use power drill with a 1/4" drill bit to predrill a hole at the center mark on the treated deck post.

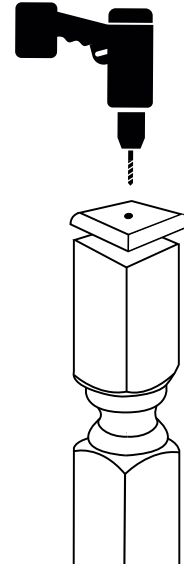

Step 3: Place threaded screw located on bottom of the finial post top, into the predrilled hole. Screw until tightly fastened and flush with the treated deck post.

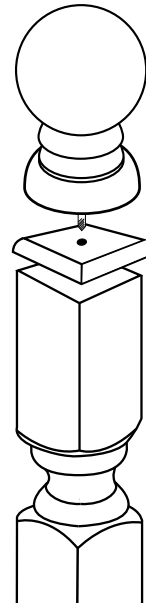

This brochure is for illustration purposes only. Use of this product must be in accordance with all local zoning and/or building codes. Consumer assumes all risks and liability associated with the use of this product. For details on safe handling and warranty information, go to UFPI.com/ptinfo.

©2016 Universal Forest Products, Inc. All rights reserved.

2801 East Beltline NE, Grand Rapids, MI 49525
616.365.4201
www.ufpi.com

8875_6/16