

EVERBILT

TM




LEAK TIGHT WASHERS
Arandelas Anti-filtraciones

FPO Need Fonts to Replace


PATENT OVERFLOW PLUG

Tapón para Rebosadero con Patente

1. Apply plumbers putty for seal under the flange **(A)**.
2. Install PO assembly **(B)** through the sink hole.
3. While holding down on the PO assembly **(B)**, slide the rubber washer **(C)** up to bottom of sink hole.
4. Push the friction washer **(E)** up to the bottom of the rubber washer **(C)** and then thread nut **(D)** on.
5. Tighten nut **(D)**.
6. Cut PO assembly **(B)** to desired length and attach drain. CHECK for LEAKS.

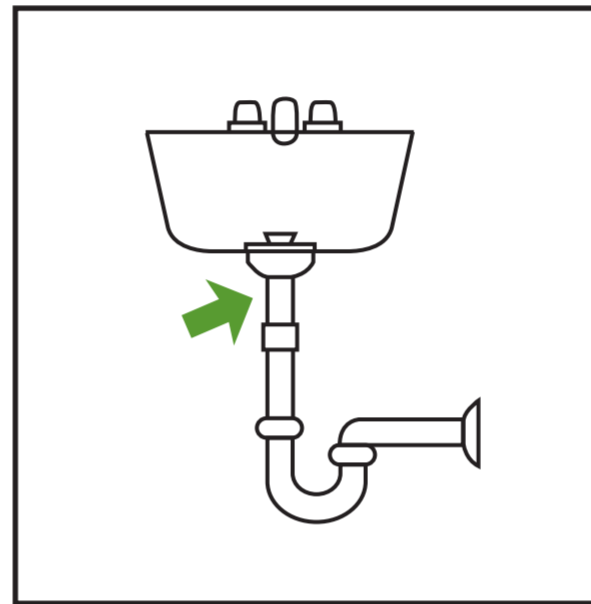

1. Coloca masilla de plomero para el sellado debajo de la brida **(A)**.
2. Instala el ensamblaje emergente **(B)** a través del orificio del fregadero.
3. Presionando el ensamblaje emergente hacia abajo **(B)**, desliza la arandela de goma **(C)** hacia arriba hasta alcanzar la parte inferior del orificio del fregadero.
4. Empuja la arandela de fricción **(E)** hacia arriba hasta alcanzar la parte inferior de la arandela de goma **(C)** y luego enrosca la tuerca **(D)**.
5. Aprieta la tuerca **(D)**.
6. Corta el ensamblaje emergente **(B)** al largo deseado y conecta el desagüe. VERIFICA QUE NO HAYA FILTRACIONES.

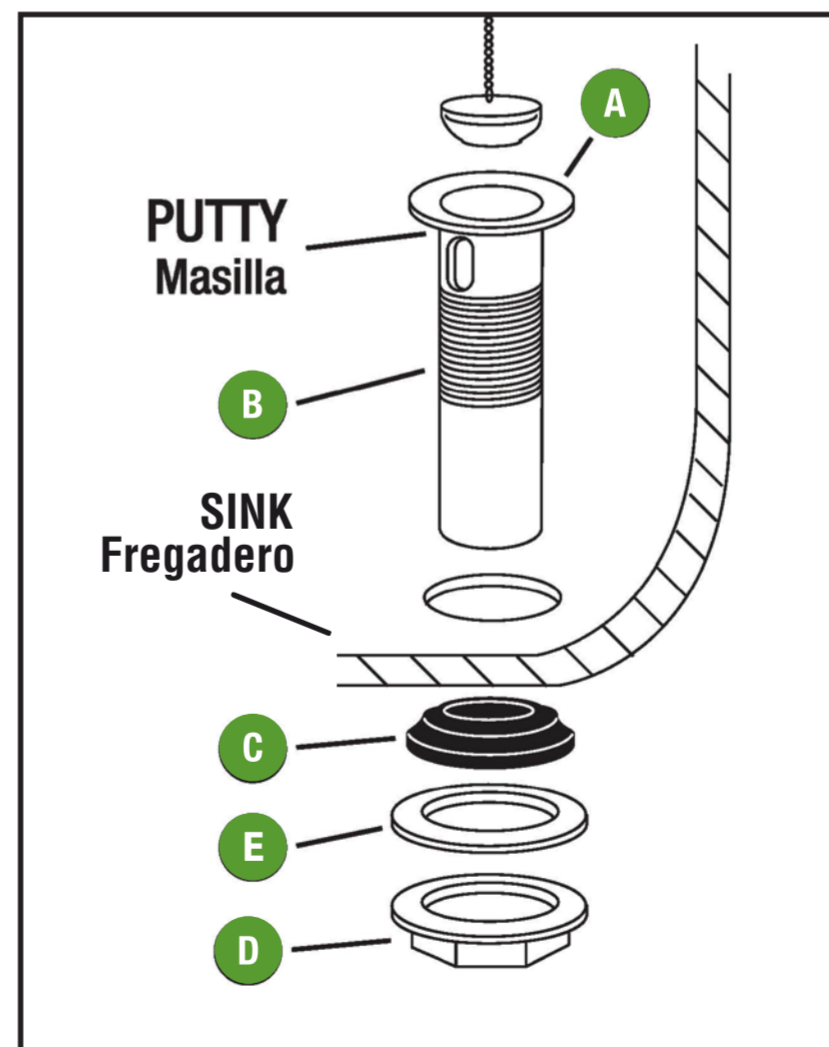

CONTENTS: (1) PO ASSEMBLY, (1) PO ASSEMBLY NUT, (1) RUBBER WASHER, (1) FRICTION WASHER, (1) CHAIN, (1) RUBBER PLUG

Contenido: (1) Cuerpo Emergente, (1) Tuerca para Cuerpo Emergente, (1) Arandela de Goma, (1) Arandela de Fricción, (1) Cadena, (1) Tapón de Goma

1000050637