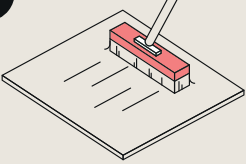
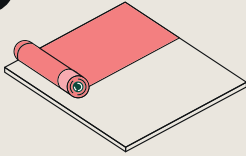
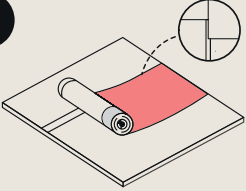
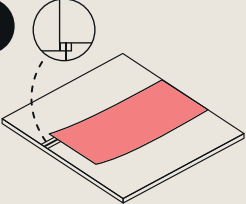
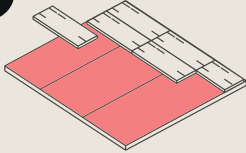


<p>1</p> 	<ol style="list-style-type: none"> 1. Make sure the subfloor is structurally sound, level and is free of dust and debris. 2. Check for protruding nails and/or defects in the subfloor. If installing over concrete, the concrete must be dry with moisture emission rates that do not exceed the floor covering manufacturer's specifications.
<p>2</p> 	<ol style="list-style-type: none"> 1. Start in a corner with the tape strip side next to the wall and the overlapping film toward the open room. 2. Install floorMuffler® UltraSeal (film side down) parallel to the wall in the opposite direction that you plan to install the flooring planks. 3. When installing the floorMuffler® UltraSeal, leave at least 2" going up the wall.
<p>3</p> 	<ol style="list-style-type: none"> 1. Be sure to unfold the film, extending it 3" from the foam. 2. Roll out the next roll of floorMuffler® UltraSeal in the same manner, making sure that the foam seams are butted together. 3. Be sure to overlap only the moisture barrier lip and not the foam pad.
<p>4</p> 	<ol style="list-style-type: none"> 1. Remove the adhesive liner and adhere the foam to the film overlap
<p>5</p> 	<ol style="list-style-type: none"> 1. Install the flooring per manufacturer's instructions.

For glue down installations, always follow the adhesive manufacturer's instructions. Make sure to use a floorMuffler approved adhesive. The list of approved adhesives can be found on each product page on the floorMuffler website.