




WHEEL BARROW

6CU POLY DUAL FLAT FREE

SKU#1006456732

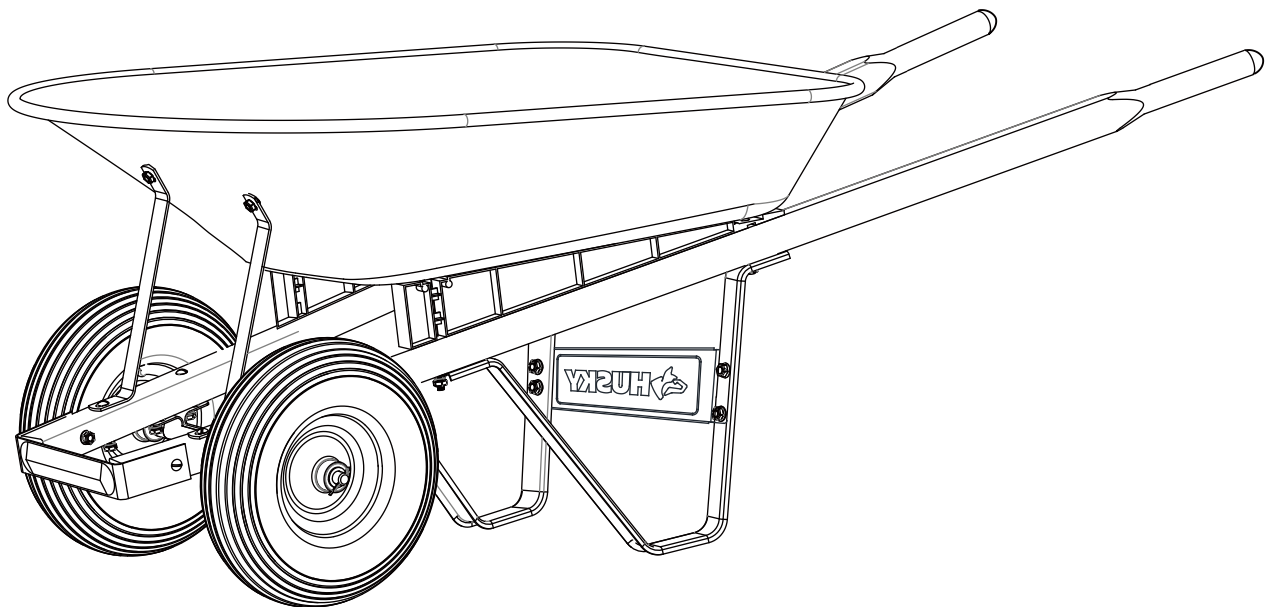






IMPORTANT:


Read and follow all safety rules and operating instructions before using this product.

Instruction
Manual

IMPORTANT SAFETY INSTRUCTIONS



1. Before using this product, please read, understand and follow all instructions.
2. Do not exceed the total maximum load capacity of 400lbs (180kg). The rated weight is based on a uniformly distributed load.
3. Do not allow children to use the trolley without supervision.
4. Do not use this cart to transport passengers.
5. This cart is not suitable for use on highways or high-speed use.
6. Distribute the load evenly on the surface of the tray.
7. Do not place items on the top edge of the tray.
8. If any parts are damaged, cracked or misplaced, please do not use the cart before replacing the parts.
9. Do not use the cart on the surface that will damage the tires.
10. It is recommended to check each usage of the cart.
12. Keep this description for future reference.

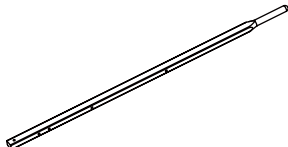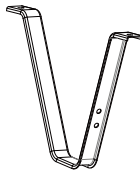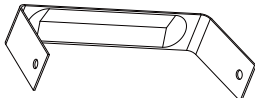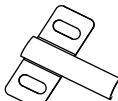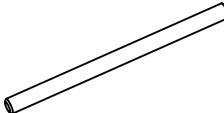 Tray 1x 1	 Handle 2x 2	 Leg 2x 3	 leg brace 1x 4		
 Wedge 2x 5	 Nose Guard 1x 6	 Wheel 2x 7	 Axle bracket 2x 8	 Flat Washer 2x 9	
 Axle 1x 10	 M8X130 bolt 2x 12				
 Tray Brace 2x 11	 M8X70 bolt 2x 13				
		 M8X60 bolt 6x 14		 M8X25 bolt 6x 15	
		 Cotter pin 2x 16			

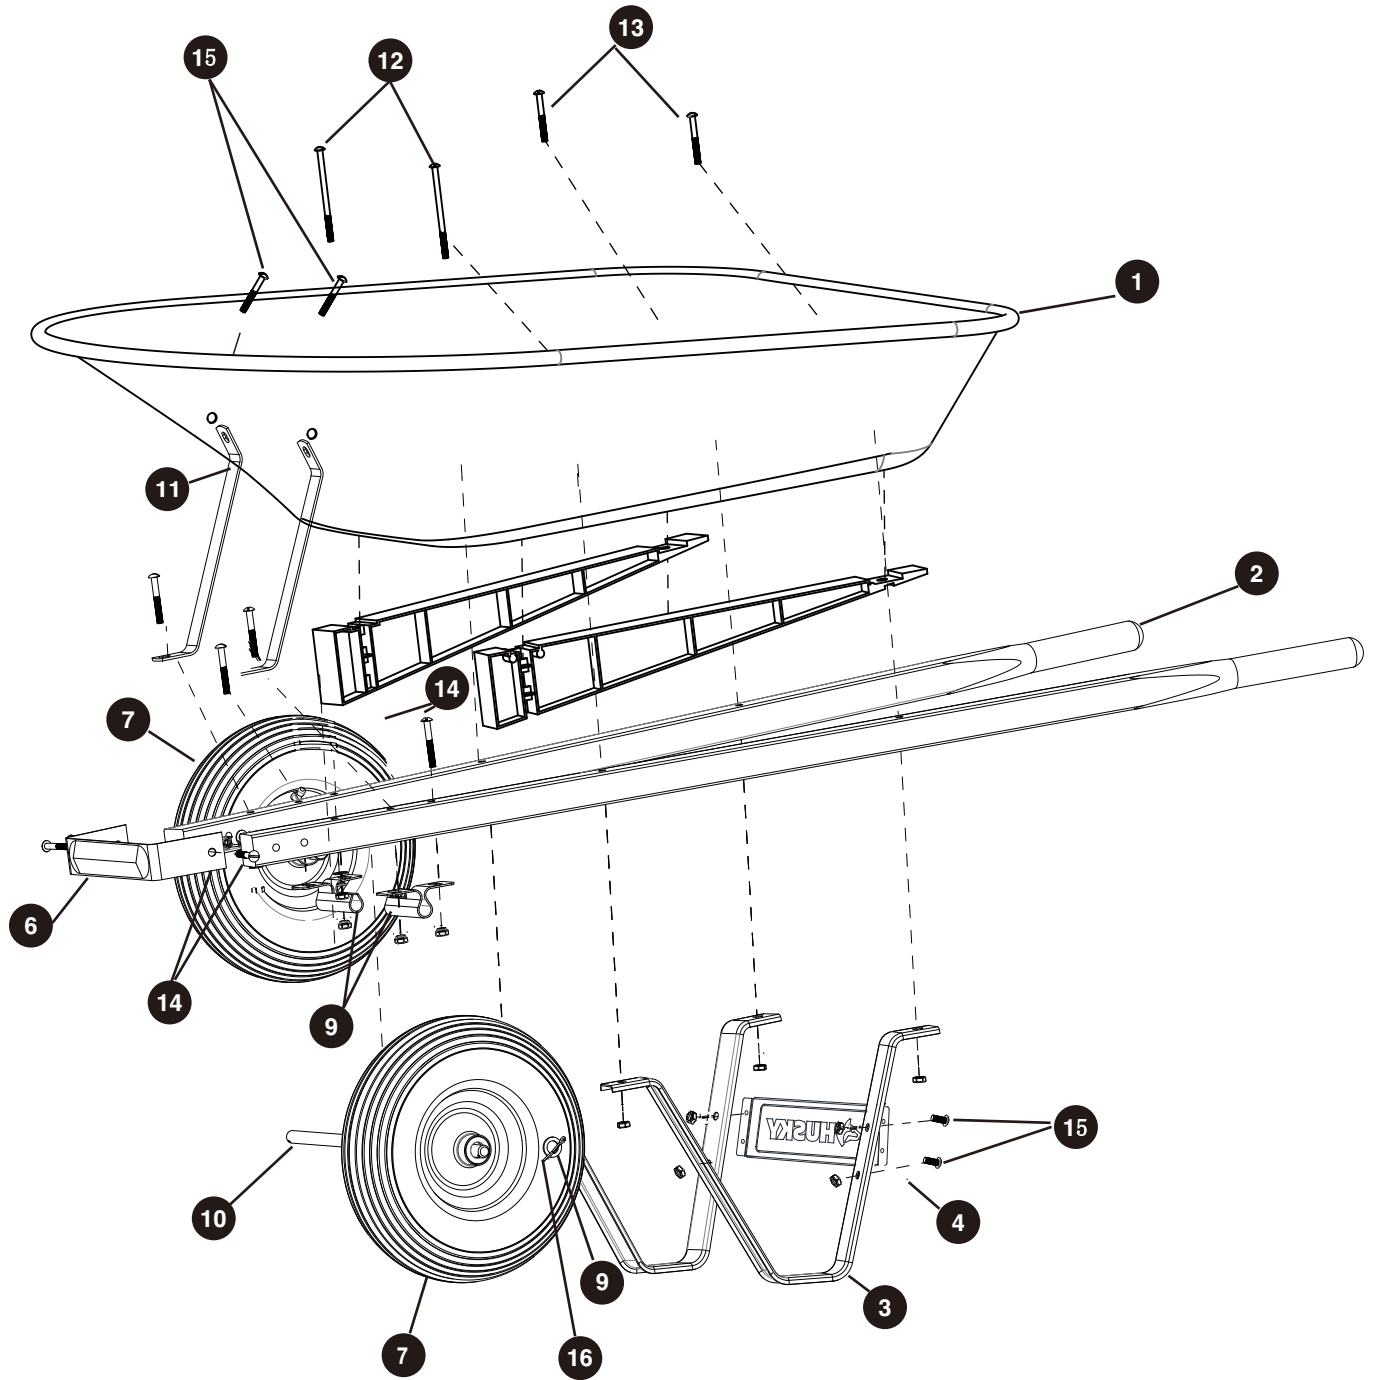

STEP1 :

Push (12-13) through bottom of tray (1) and through (5) Wedge. Repeat for second Wedge.

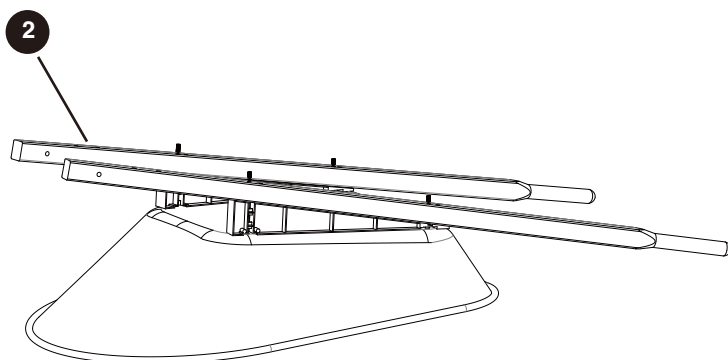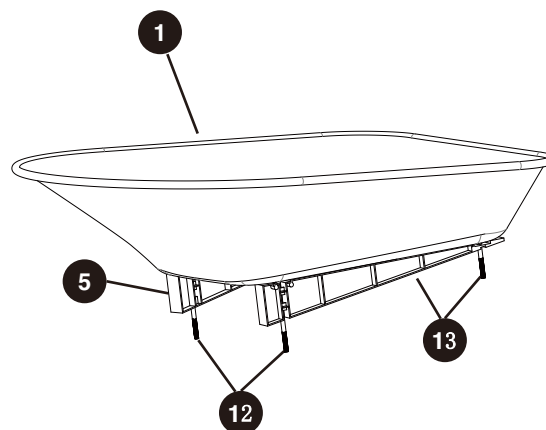


STEP2 :

Turn tray over ,place handles(2) over bolts and lower onto Wedge.


STEP3 :

Make sure the holes in leg (3) are facing the back of the tray and then place leg over bolts and loosely attach to handle with nuts. Repeat for other leg .

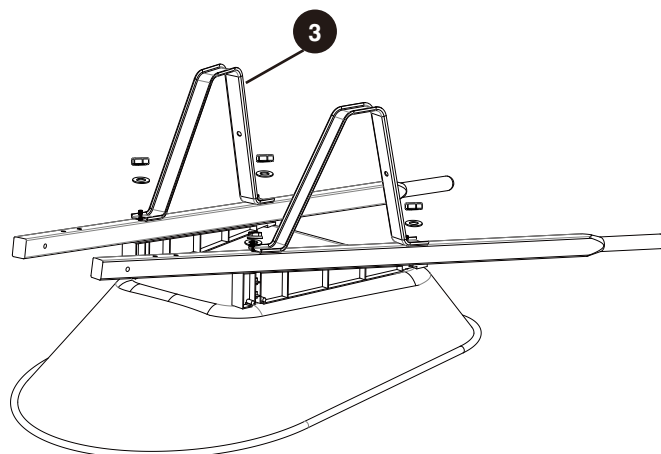


STEP 4 :

Place (4) across back of leg and loosely attach using bolts and nuts (15). Repeat to attach the other end of the leg brace to the other leg .

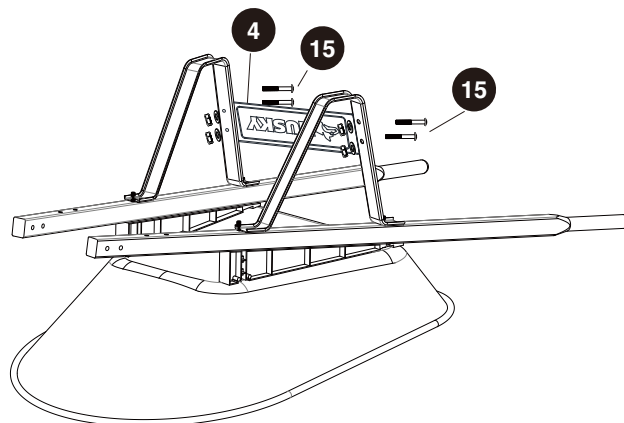



STEP5 :

Use bolt and nuts(14)to attach Nose guard(6)to front of handles

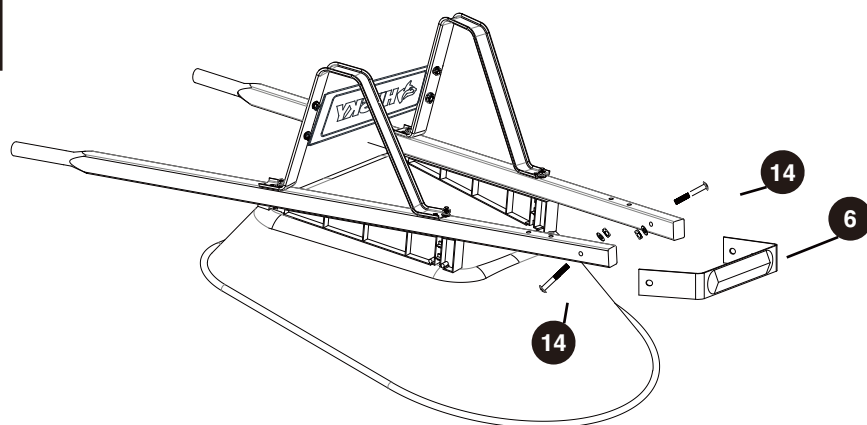

STEP6 :

Attach axle bracket(8)to bottom of handle using a bolt(14)pushed through the hole closest to tray.Push second bolt(14)through hole with tray brace(11)then through handle Repeat for second axle bracket(8)

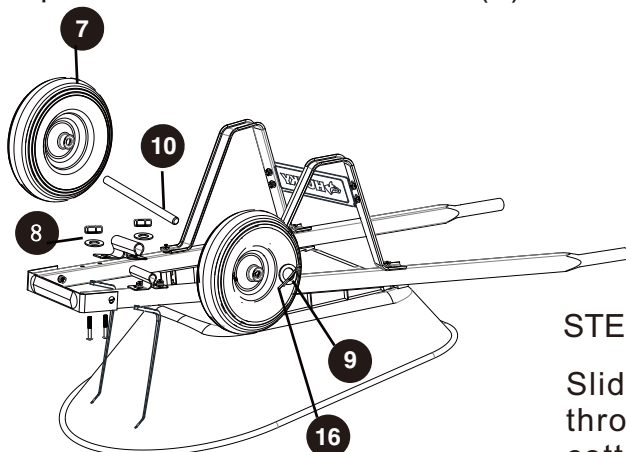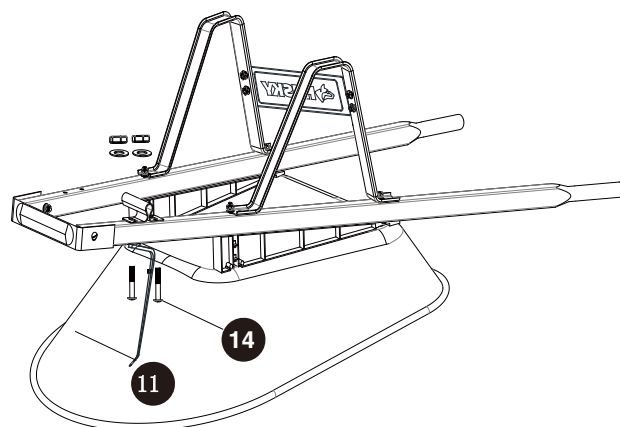

STEP7 :

Slide axle(10)through into attached bracket(8)and through wheel.Then push the flat washer(9)and used cotter pin(16)locked.

* Fully tighten all nuts