1. REMOVE THE PULL KNOB AND BASKET ASSEMBLY

2. DISASSEMBLE THE OUTLET BY REMOVING THE MAIN CONNECTING SCREW .


3. SEPARATE THE PARTS AND PLACE THE THIN RUBBER GASKET UNDER THE STAINLESS STEEL OUTLET TOP AND CENTRE IT IN THE 90 mm SINK HOLE FROM ABOVE .

4. FIT THE LARGE RUBBER WHASHER INSIDE THE TOP RIM OF THE PLASTIC UNDERBODY AND CENTRE IT ON THE SINK HOLE FROM UNDERNEATH .

5. FIT THE MAIN CONNECTING SCREW FROM ABOVE AND TIGHTEN , TAKING CARE THAT THE THIN GASKET STAYS CORRECTLY POSITIONED .

6. REPLACE THE PULL KNOB AND BASKET ASSEMBLY AND TEST FOR LEAKS .

7. CONNECT TO WASTE PLUMBING ACCORDING TO RELEVANT PLUMBING REGULATIONS .

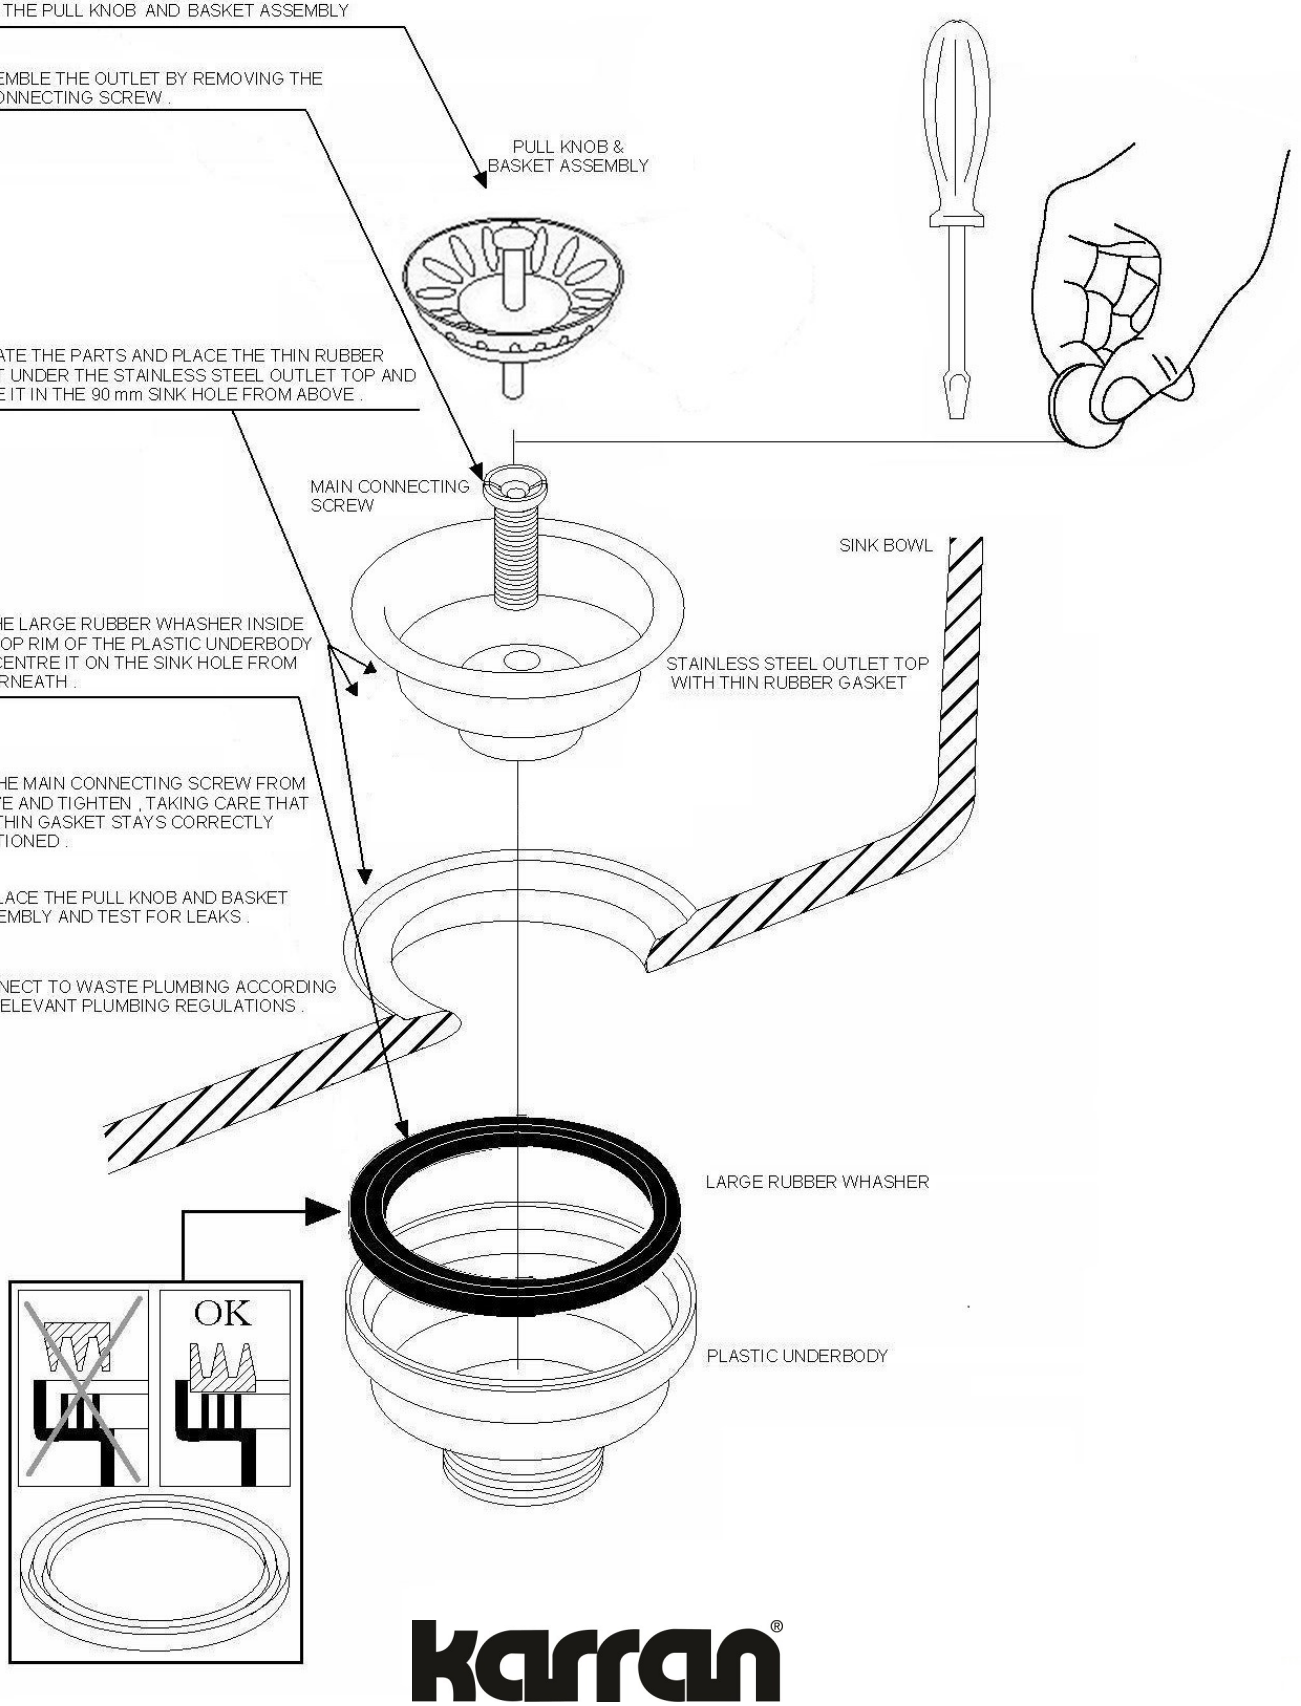

karran®