



FLOOR REGISTER MEASURING TIP:

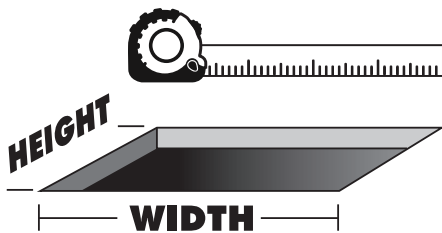


1 MEASURE FLOOR DUCT OPENING FIRST.
(HEIGHT x WIDTH)

NOTE: DO NOT MEASURE THE FRONT SIDE OF REGISTER.



FRONT


2 REVERSE SIDE OF FLOOR REGISTER FITS FLOOR DUCT OPENING $\pm 1/2$ "

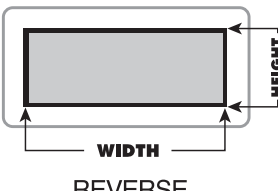

REVERSE

IF DUCT OPENING MEASURES:
HEIGHT: $3\frac{1}{2}$ "
WIDTH: $9\frac{1}{2}$ "
 THEN SELECT: **4" x 10"**


3 INSTALL NEW REGISTER INTO FLOOR OPENING



FLOOR REGISTER

YOU'RE DONE. GREAT JOB!

SCAN CODE FOR VIDEOS & TIPS



FLOOR REGISTER INSTALLATION INSTRUCTIONS

Step one: Determine the correct size register by measuring the opening in the floor. (Example: an opening that measures 4 x 10 will require a register labeled 4 x 10).

Step two: Open the register package and discard the cardboard and wrapping paper.

Step three: Simply set the register into the opening in the floor. There are no screws required to hold the register in place.

Step four: Locate the damper adjustment device on the face of the register, and move it to open or close the damper as desired.

