



Step 3 Attach the VESA Plate to the Monitor

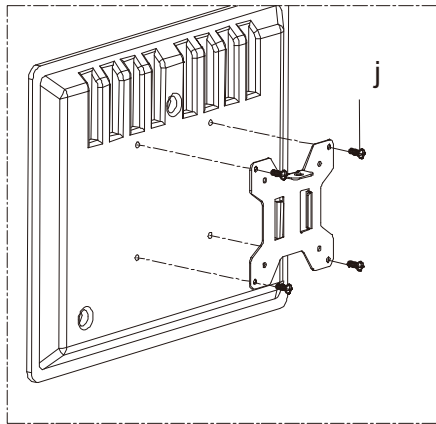


For Monitor with Flat Back

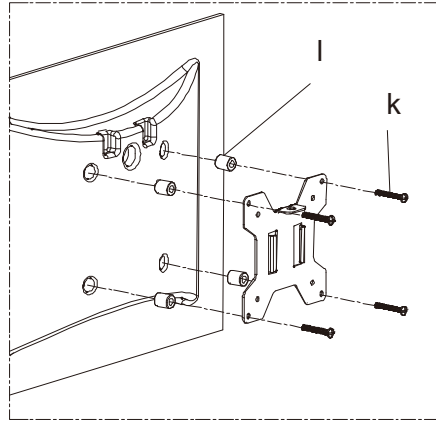


For Monitor with Curved or Recessed Back

Step 5 Make the Necessary Adjustments

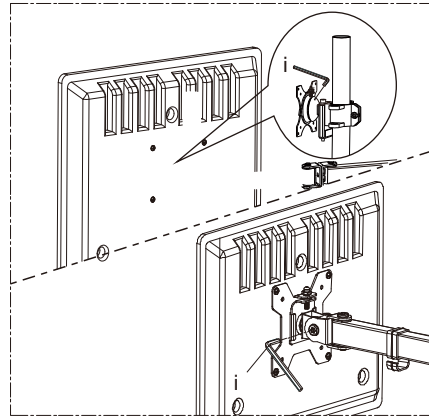


Adjust and tighten the bolt with the supplied Allen Key (i) to fix the tilt angle

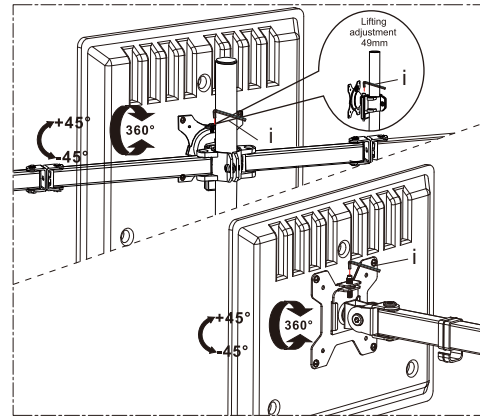


If one monitor is lower, turn the bolt counter-clockwise with supplied Allen key(i) to raise the monitor. Install the Nut after the adjustment.

Note: Never swivel forward or backward too much, accidental falling might occur.

Step 6 Manage the Wires and Store the Allen Keys on Wire Clip

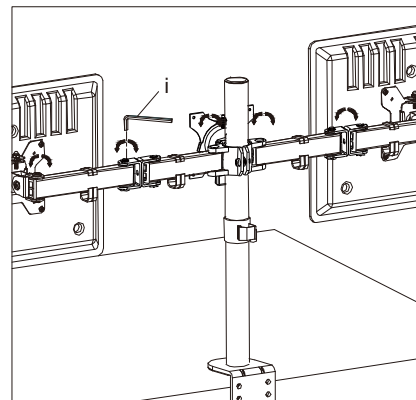

Use the provided Allen Key (i) to make the necessary adjustments to each arm

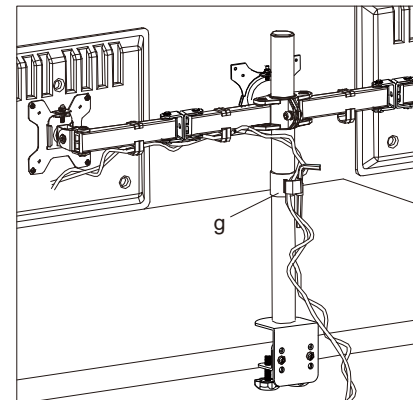

Hold wires in place with a cable clip (Wire Clip – g)

Thank you for choosing our products!


- VISIT US AT MOUNT-IT.COM FOR PRODUCT REGISTRATION AND WARRANTY INFORMATION.
- CONTACT US AT SUPPORT@MOUNT-IT.COM OR 855-925-5668 FOR QUESTIONS OR COMMENTS.



MOUNT-IT!
Premium AV & Office Products

MI-753XL
INSTALLATION MANUAL

TRIPLE MONITOR DESK MOUNT

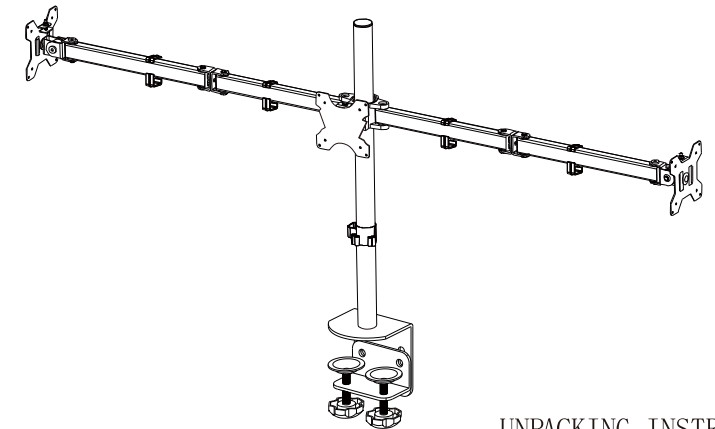

UNPACKING INSTRUCTIONS


- Carefully open the carton, remove contents and lay out on cardboard or other protective surface to avoid damage.
- Check package contents against the Supplied Parts List in the next page to assure that all components were received undamaged. Do not use damaged or defective parts.
- Carefully read all instructions before attempting installation.

IMPORTANT SAFETY INFORMATION


- Install and operate this device with care. Please read this instruction before installation, and carefully follow all instructions contained herein. Use proper safety equipment during installation.
- Please call a qualified installation contractor for help if you don't understand these directions or have any doubts about the safety of the installation.

Do not use this product for any purpose or in any configuration not explicitly specified in this instruction. We hereby disclaims any and all liability for injury or damage arising from incorrect assembly, incorrect mounting, or incorrect use of this product.


Supplied Parts List




(1) Pole-a




(1) Clamp-b



(1) Clamp Brace-c



(1) Swivel Arm-d



(2) VESA Plate-e



(1) VESA Plate-e1



(2) M10X12 Bolt-d



(1) Support Plate - e



(1) Grommet Base Plate - f



(1) Wire Clip - g



(4) Wire Clip - h



(1) Allen Key - i



(12) M4X12 Bolt - j



(12) M4X30 Bolt - k



(12) M8 Spacer - l

Tools Required

Phillips Screwdriver



WARNINE

CAUTION!

This monitor desktop mount must be securely attached to the horizontal desk. If the mount is not properly installed it may fall, resulting in possible injury and/or damage.

Step 1



Install the Pole to the Desktop

Option A: Desk Clamp Install

1.Remove the 3pcs M5X20 bolts at the bottom of the pole(a) with Allen key,see Figure1A.

2.Install the “c”-Clamp Brace(c) to the pole (a) using 3pcs M5x20 Bolts, and tighten using the Allen Key(i) , see Figure 1.

3.Install the “c”-Clamp(b) to the pole assembly according to the thickness of the desktop. The thickness can be changed of three positions.Connect it using 2 pcs M10x12 Bolts(d),and tighten using the Allen Key(i). Tighten the “c”-Clamp to the desktop by twisting the plastic knob, see Figure 2.

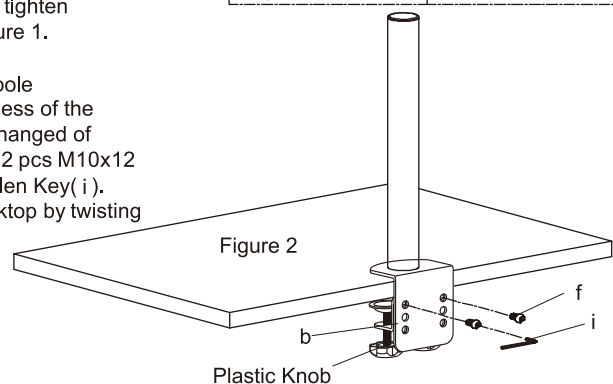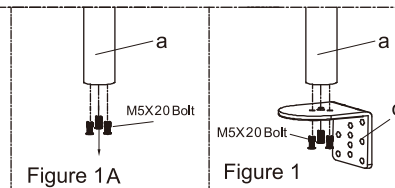

Option B: Grommet Base Install

Existing Grommet Hole Installation



If the existing grommet hole comes with a plastic protector, remove it to ensure a flat surface before installing the desk mount.

1.Remove the 3pcs M5X20 bolts at the bottom of the pole(a) with Allen key,see Figure1A.

2. Install the Grommet Base Plate(f) to the Pole(a) using 3 pcs M5x20 Bolts , and tighten using the Allen Key(i) , see Figure 3.

3.Use screwdriver counter-clockwise release the screw, and counter-colcowise release the plastic knob. see figure 3A

4.Position the Pole(a) on the mounting surface and secure using the Support Plate (e),see Figure 4.

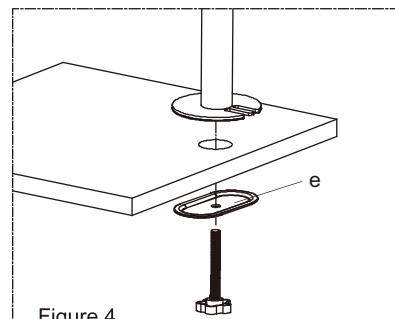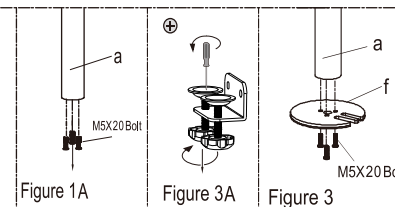

Step 1

Install the Pole to the Desktop

Option B: Grommet Base Install

Self Drilled Grommet Hole Installation



Position the Pole(a) on the mounting surface and amark the center hole. Drill a 3/8” (10mm) diameter hole at the marked position through the mounting surface.

1.Remove the 3pcs M5X20 bolts at the bottom of the pole(a) with Allen key,see Figure1A.

2. Install the Grommet Base Plate(f) to the Pole(a) using 3 pcs M5x20 Bolts , and tighten using the Allen Key(i) , see Figure 5.

3.Use screwdriver counter-clockwise release the screw, and counter-colcowise release the plastic knob. see Figure 5A.

4.Position the Pole(a) on the mounting surface and secure using the Support Plate (e) , see Figure 6.

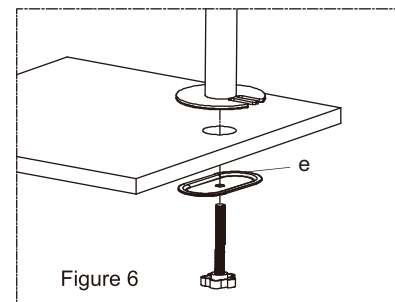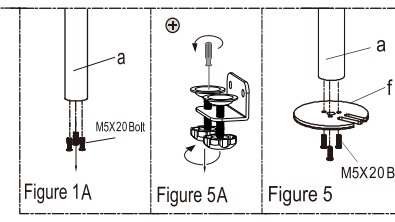

Step 2

Install Arm to the Pole

Place the Swivel Arm(d) over the pole, and tighten with Allen Key (i)

