

HOW TO INSTALL THIS DEADBOLT LOCK


1 MARK DOOR & BORE HOLES

A: Fold template on edge of door and mark hole for 2-3/8" or 2-3/4" backset.

B: Drill 2-1/8" hole through door (from both sides to avoid damaging door).

C: Drill a 1" hole in edge of door.


D: Cut out a 2-1/4"x1-1/8"x1/8" for 2-3/4" backset or 2-1/4"x1"x1/8" for the optional 2-3/8" backset.

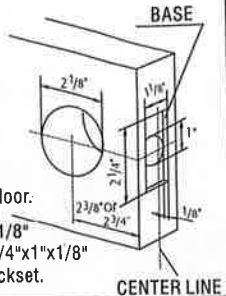


2 INSTALL LATCH

A: Install security shield.

B: Install deadbolt oriented with cam slot down.

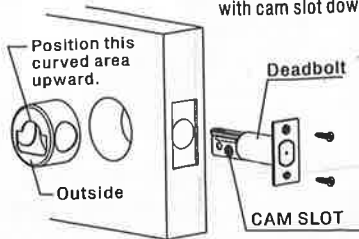


3 INSTALL OUTSIDE CYLINDER

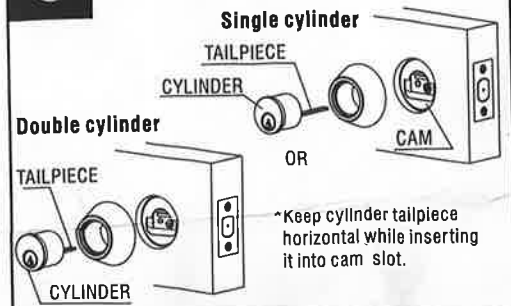


4 INSTALL INSIDE TRIM OR CYLINDER

Single cylinder

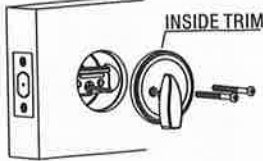


Double cylinder

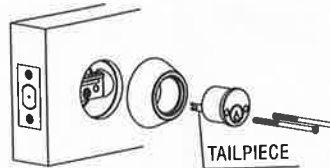

When finishing install, check operation of deadbolt by extending the deadbolt using the key and then removing the key, then retract the deadbolt using the key and then remove the key. Make sure tailpiece is inserted through slot correctly, if not adjust tailpiece rotation and reinstall trim and tailpiece.


*Keep cylinder tailpiece vertical while inserting it into cam slot.

5 INSTALL STRIKE

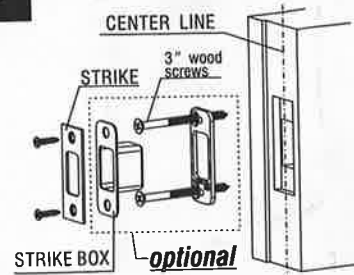

UH70A

Fold and fit around door edge

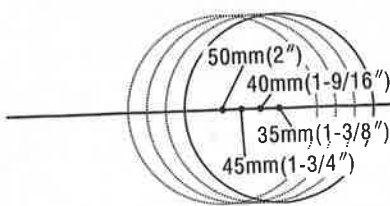

Make a 25mm (1") hole in the center of door edge

TEMPLATE

BACKSET 60mm (2-3/8")

BACKSET 70mm (2-3/4")

Make 54mm (2-1/8") hole