

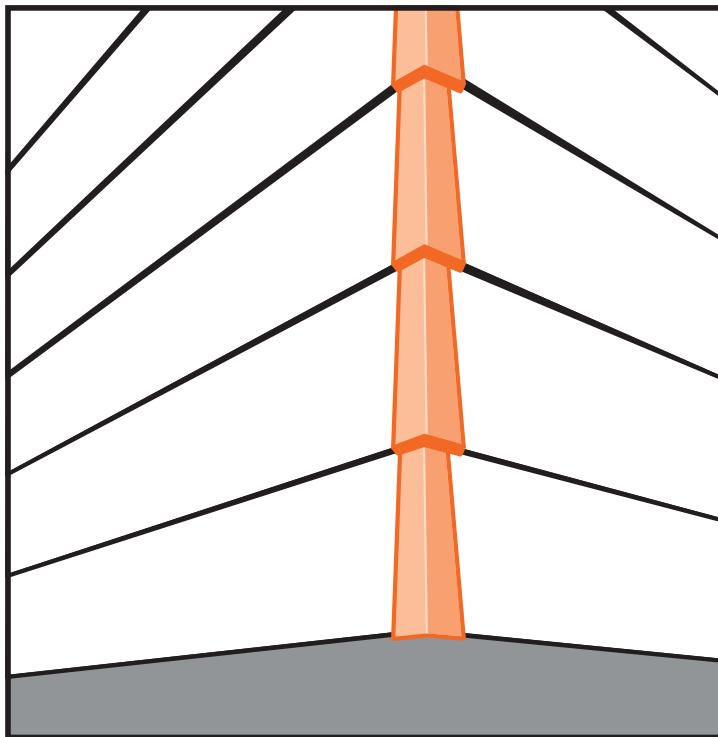


1. Start with the bottom course of siding. Carefully slide the first corner up and under the second course. Continue until the bottom wrap around lip is fully fitted to the bottom courses.

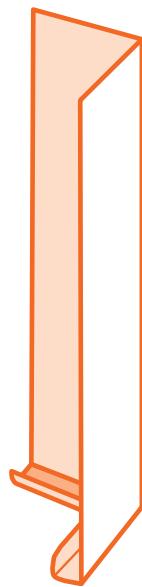

2. Continue working from the bottom up. While driving the nails pay attention to the vertical and horizontal alignment of the siding corner. Trim the last corner to fit.

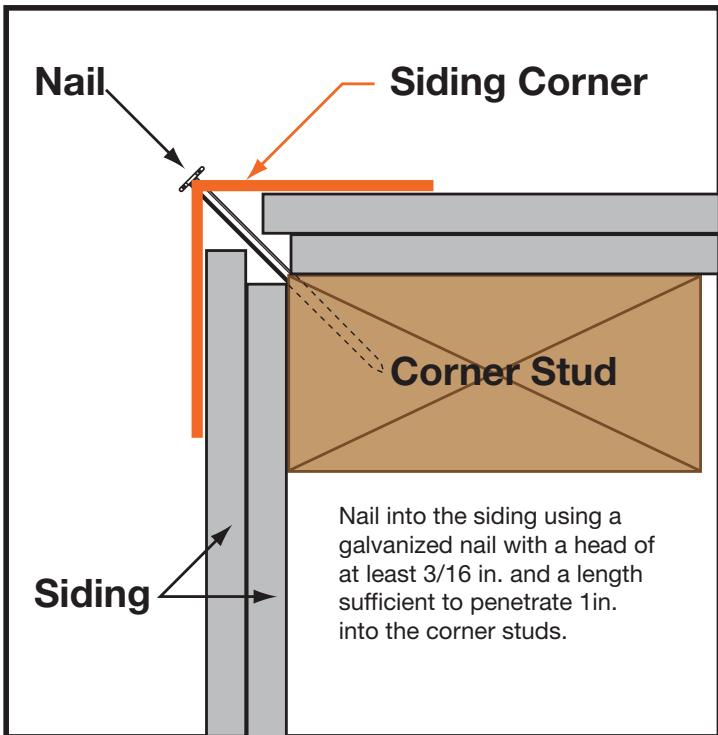

These installation guidelines are for use with typical or standard applications. It is always recommended to seek advice from a licensed professional, and to check with your local building inspector or building permit office for approvals and possible variations that may apply.