

Easy-Fit Drain by Freshjet Showers

Shower Easy-Fit Drain (EFD) conveniently allows shower remodeling to **do away** with messy and expensive subfloor drainpipe replumbing or concrete slab breaking and cutting. EFD connects mispositioned drain hole of the shower base to the existing floor drain with an 1-1/4" drainpipe (not included) horizontally under the shower base but above the room floor.


https://youtu.be/wXa7M8_mDB8

EFD includes: drain flange, drain body elbow, strainer, drain cover, rubber gasket, 45 degree coupling



EFD Installation Procedure:

1. Peel the protective plastic films and clean the area around the drain hole in the shower base especially the plastic burns around the edge from the cutting.

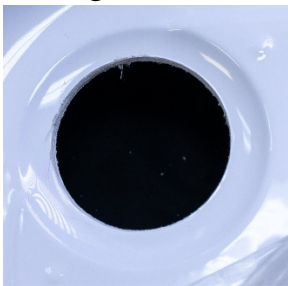

2. Apply silicone sealant round the edge and screw the flange from the top of the base to the elbow on the bottom.



3. Connect 45 degree coupling to the drain elbow with only a black rubber seal washer.
4. Connect either an 1-1/4" hard PVC pipe or an 1-1/4" flexible PVC pipe of appropriate length to the floor drain to the coupling. Neither hard PVC pipe nor flexible PVC pipe are provided. The brand name of the flexible PVC pipe is called EZ Flo. Make sure to put slip nut, red washer, and rubber seal washer in sequence to the pipe first, then tighten the slip nut.



5. Connect drainpipe to your floor drain (or a sewage pump system).
6. Place the strainer inside the drain, and place the drain cover on top

