




Perma-Boot®  
Base

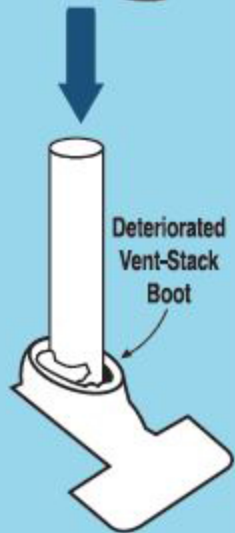


Deteriorated  
Vent-Stack  
Boot

### Step 1

Slip Perma-Boot® base over the weathered boot. The Perma-Boot® automatically adjusts to roof slope.

## 3" INSTALLATION

Perma-Boot®  
3" Cap

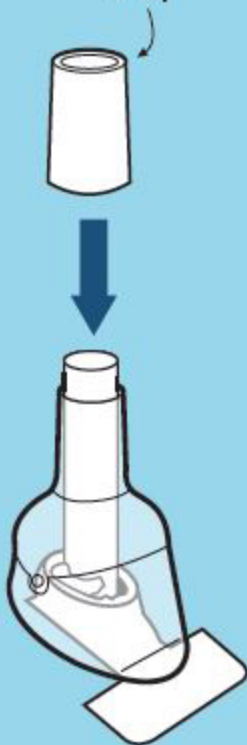

### Step 2

Slip the 3" cap over the base. If your pipe is 3", installation is complete.

## 1.5" AND 2" INSTALLATION

Perma-Boot®  
1.5" or 2" Cap



*Roofing,  
construction  
or silicone  
adhesives  
may be used  
in high wind  
areas but are  
not required.  
Only apply to  
designated  
areas as  
shown.*

### Step 3

Add appropriate 1.5" or 2" cap with optional adhesive, then installation is complete.