

IMPORTANT NOTES


- 1) CHECK YOUR PANEL SIZE TO ENSURE A PROPER FIT: REQUIRES 10 IN. OF VERTICAL SPACE ON DOOR PANELS FOR MINIMUM SPACING, CHECK YOUR GARAGE DOOR PANELS TO ENSURE A PROPER FIT
- 2) MUST BE INSTALLED ON A STEEL OR STEEL ALLOY GARAGE DOOR
- 3) USE THE INCLUDED MAGNETIC RULER TO HELP PLACE AND ALIGN MAGNETS

BEFORE YOU START

- 1) Clean the surface of your garage door panels where you will apply the magnets
- 2) Using the included Magnetic Ruler, follow the guidelines below for your window style

APPLYING WINDOWS

- 1) On a standard 12" x 16" traditional raised panel garage door, use the included ruler to place each magnet 1" from the inner panel edge and leave 2" between each magnet.
- 2) Feel free to adjust the spacing between each magnet to what looks best for your home. Another option is to use a 1.5" outside border and to space the magnets 1" apart.

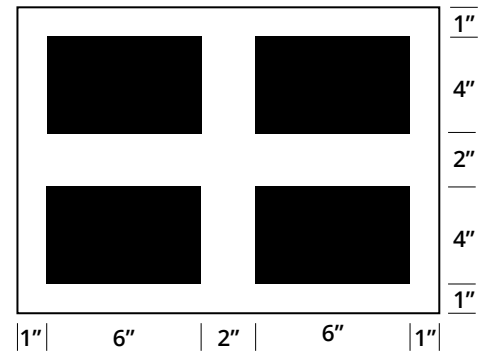

FREQUENTLY ASKED QUESTIONS

Q: Do they reflect like windows?

A: No, reflective coatings make it easier to tell these are not actually windows. Our magnets are matte black intentionally.

Q: Will they fit on my garage door?

A: Your door panels **MUST** be at least 10" tall to provide the minimum spacing required.

Questions / concerns?

info@duralifthardware.com

www.duralifthardware.com