

Installation Overview

1




Determine where to locate the bracket for the shorter panel (Fig. 1).

2

Mark the screw holes and pre-drill with a 1/8" drill bit. (Fig. 2). Attach the bracket to the post with #10 x 3/4" Panhead screws (not included).

3

Insert the rail from the shorter panel into the bracket on the post of the taller panel (Fig. 3).

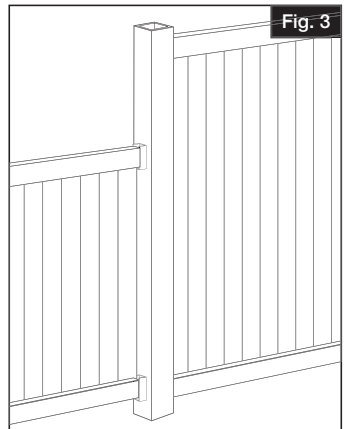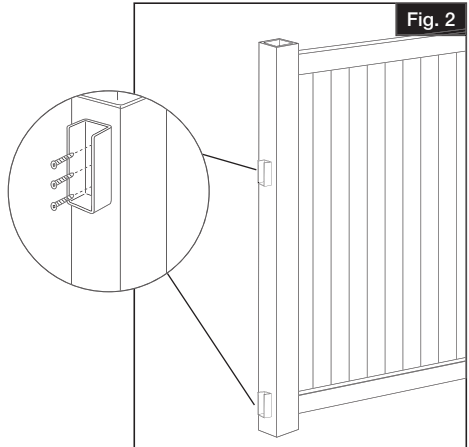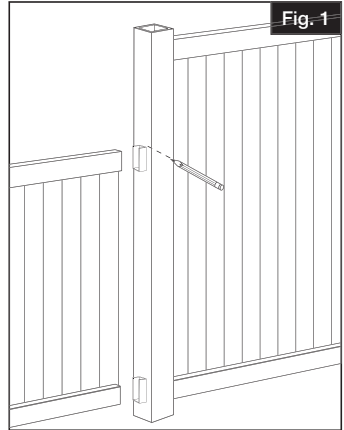

Transition bracket styles vary – illustrations shown for reference only.

To obtain and review a copy of the warranty please go to: Veranda.BarretteOutdoorLiving.com/warranty.

You can also contact 1-877-279-4496 or write to Veranda, 7830 Freeway Circle, Middleburg Heights, Ohio 44130 to obtain a copy of the warranty.