

SEASONAL DESIGNS

10000 W. 10th Avenue, Suite 100, Golden, CO 80401
www.seasonaldesigns.com


AP-20- 84' FLAG POLE 20'

INSTALLATION


Prepare a hole in the ground 20" deep for the 20' pole.
Fill the bottom with gravel and sand to depth of 6". Place
the PVC setting tube into hole and work the bottom into the
sand. Plumb and brace tube, then pour concrete into hole around
tube to within 1" of top. Be careful to keep inside of tube
clean and free of concrete. Re-plumb setting tube before concrete sets
by temporarily inserting bottom section of pole and plumbing it instead
of tube. Allow concrete to cure 24 hours before installing flagpole.

Slide sections together, with swaged ends extending upward into the
next section. The top section will always be the un-swaged section, the
second section from the bottom will always be a swaged section drilled for the
cleat. The remaining sections complete the flagpole. Attach the cleat using
the self-tapping screws supplied. Screw the ball-stem tightly into the top
of the truck. Thread the rope halyard over the pulley in the truck and tie
each flag snap into place about mid-rope, using a simple overhand knot.
Fasten truck to pole, using a screwdriver to tighten the setscrews. Make
certain that pulley in truck is aligned over cleat. Adjust distance between flag
snaps to fit the size flag being flown. Attach flag to flag-snaps, use off
halyard on cleat.

EXTREME CAUTION SHOULD BE EXERCISED WHEN INSTALLING
FLAGPOLES NEAR OVERHEAD POWERLINES OR IN THE VICINITY
OF BURIED CABLES.

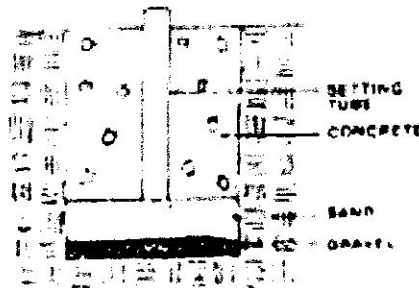

INSTALLATION DETAIL

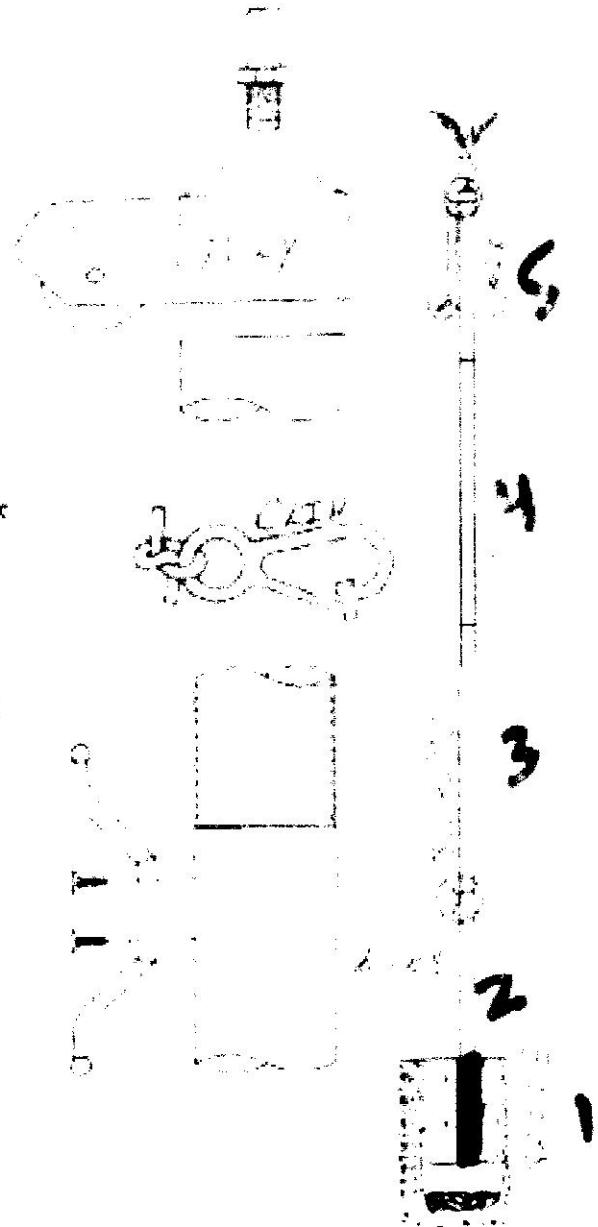

AP20 Wind Resistant

84 MPH Un flagged

66 MPH Flagged

Each AP20 section is \$10.00 + 9.95 shipping

Order is shipped UPS Ground