

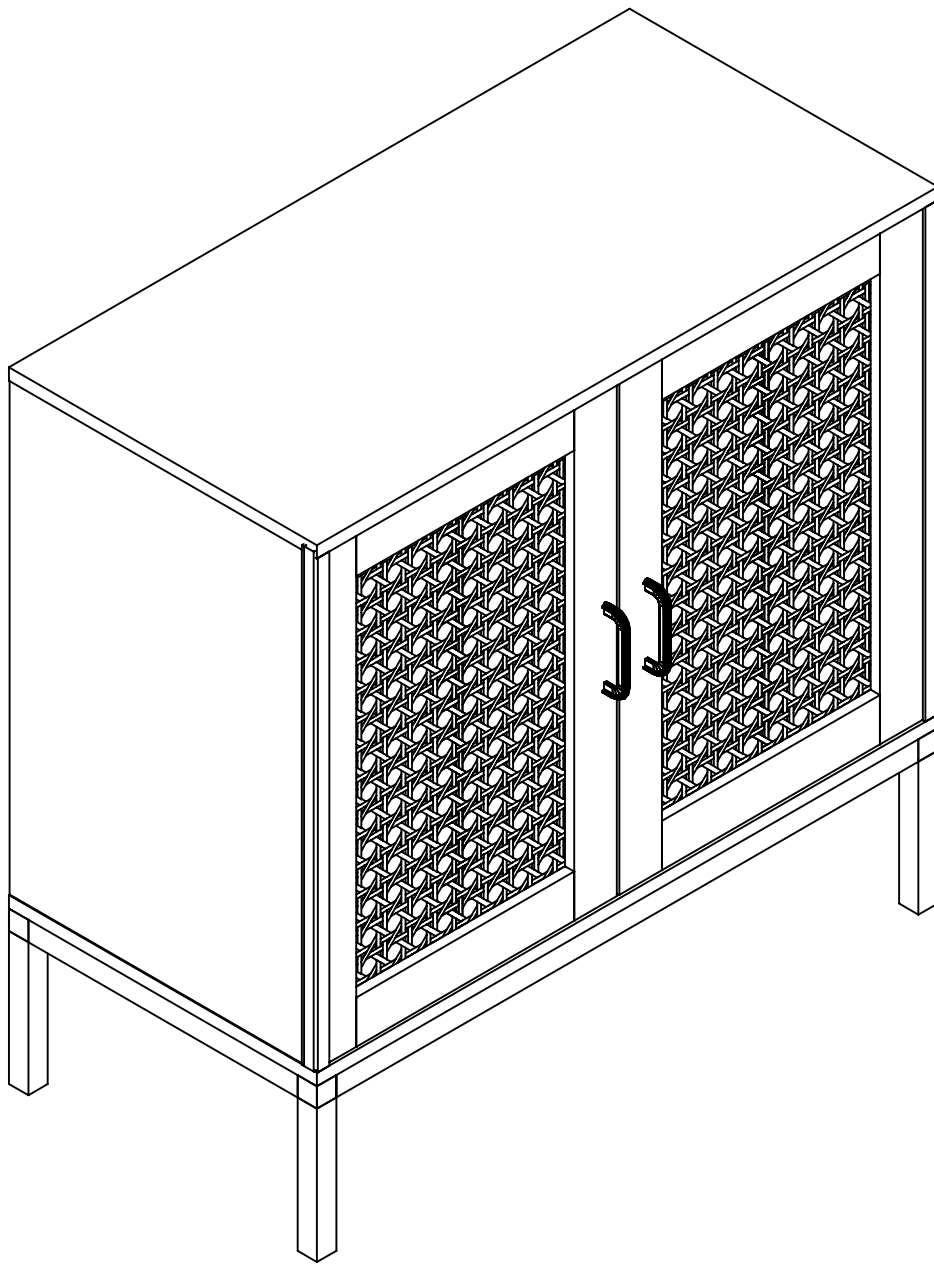


Assembly Instruction

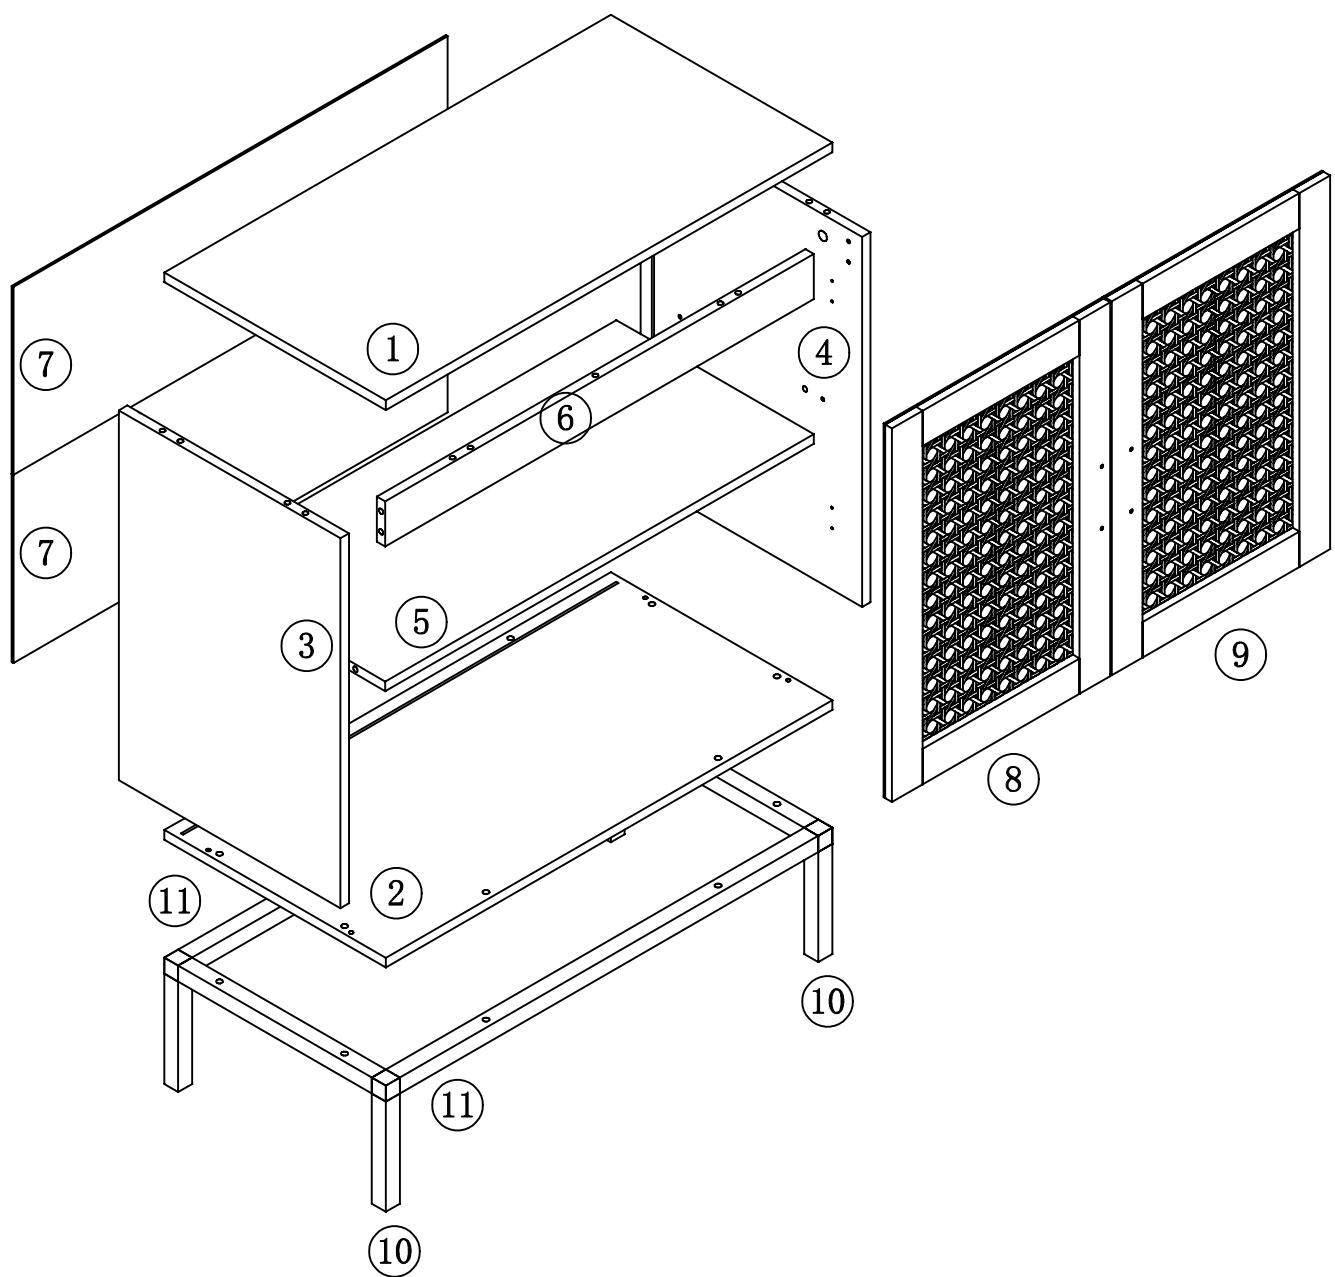



PARTS LIST




Cam Bolt 15pc  A	Cam Nut 15pc  B	Wood Plug 10pc  C	Hangle 2pc  D	Screw 4pc  E	4pc  F	Back panel buckle set 12pc  G
Screw 4pc  H	Screw 24pc  I	1pc  J	Screw 4pc  K	Screw 8pc  L	2pc  M	Screwdriver 1pc  N

Step 1

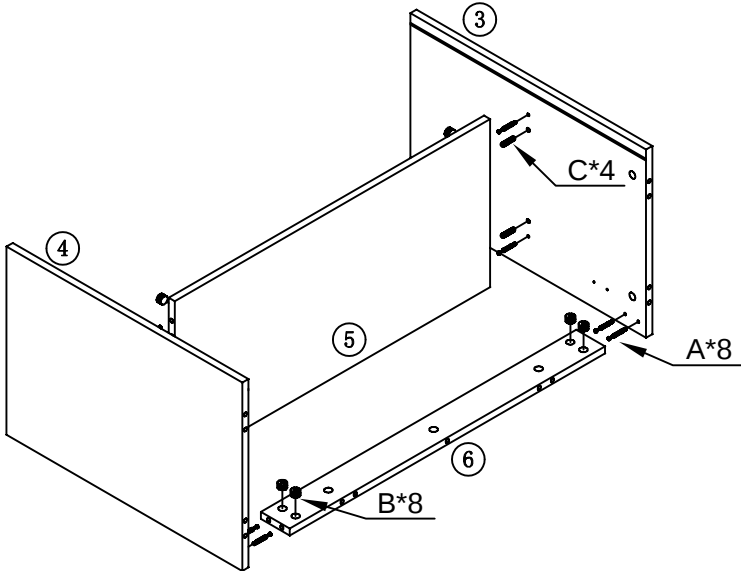


	
C	
4x	
	
A	B
8x	8x

Step 2

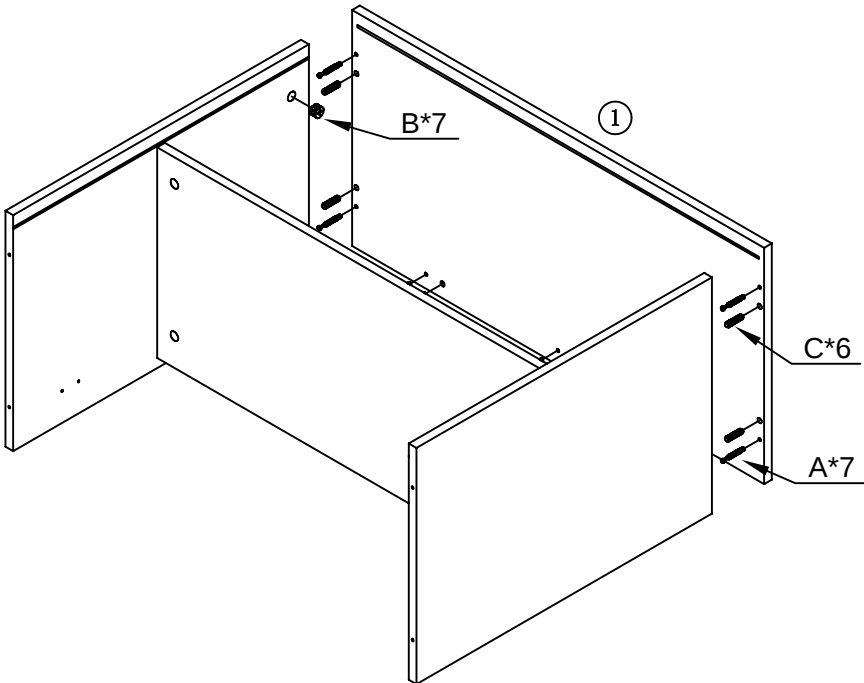



	
C	
6x	
	
A	B
7x	7x

Step 3


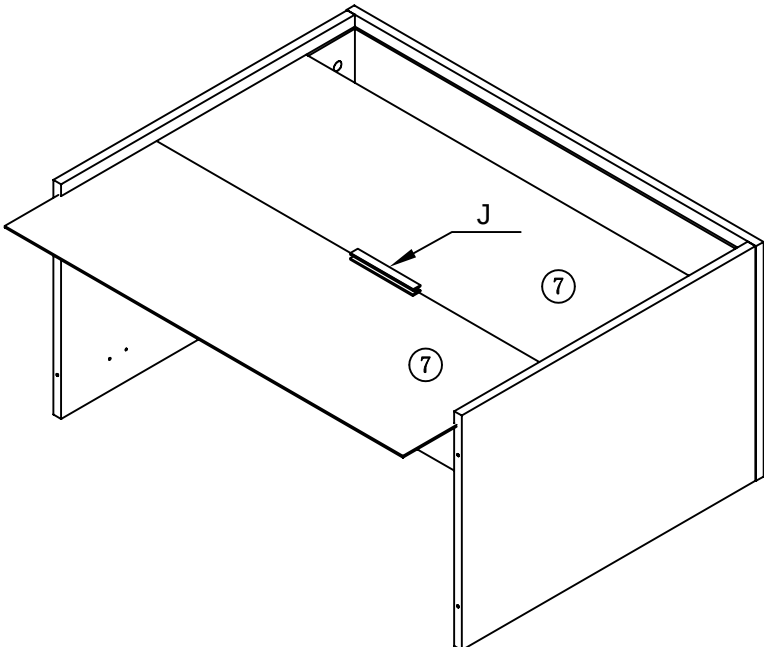


	
J	
1x	



Step 4

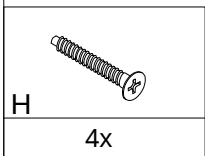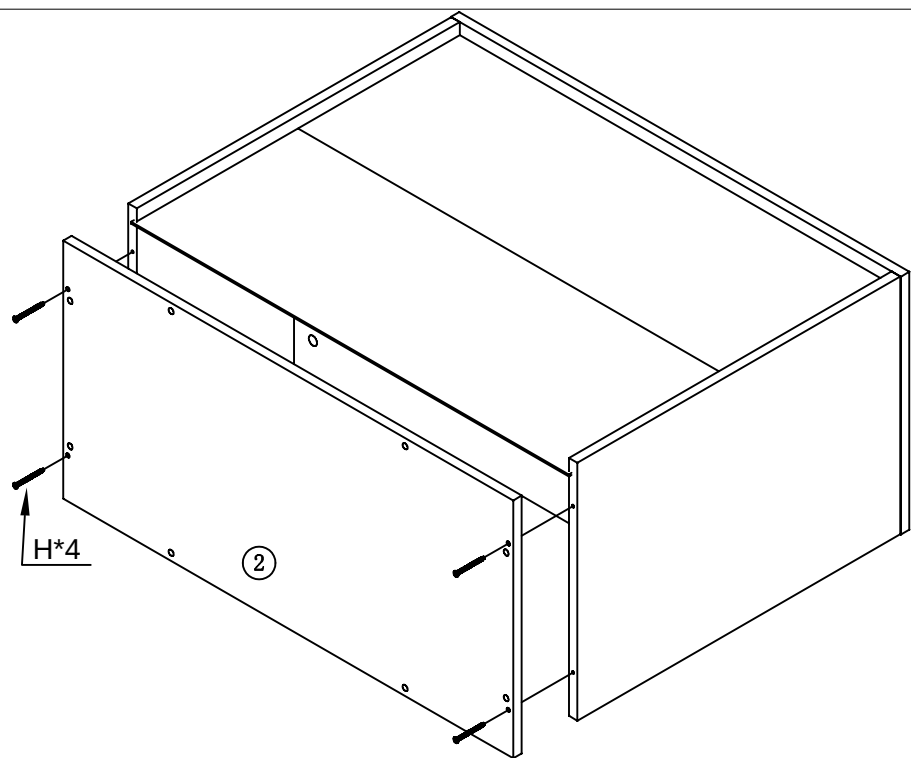


Step 5

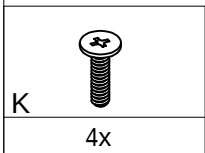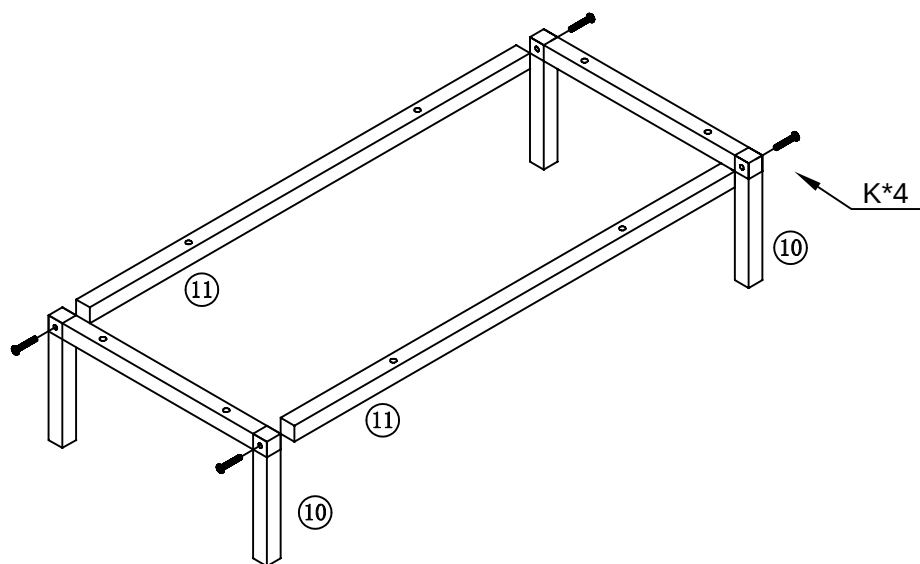


Step 6

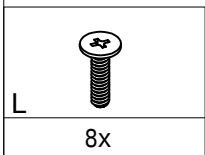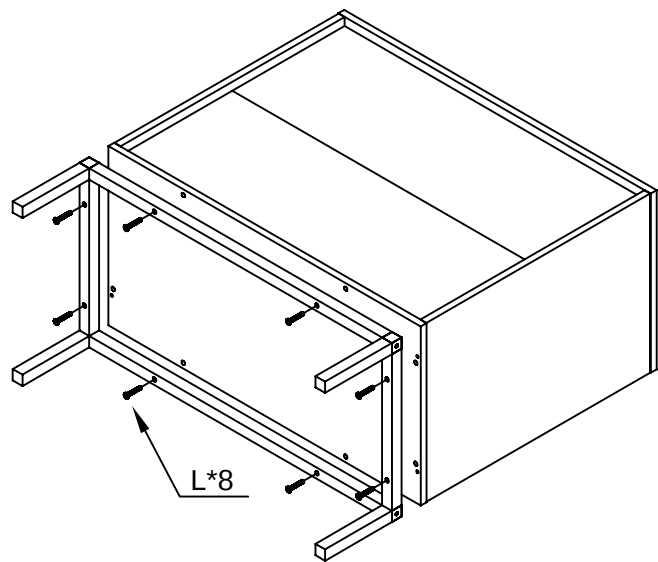

Step 7

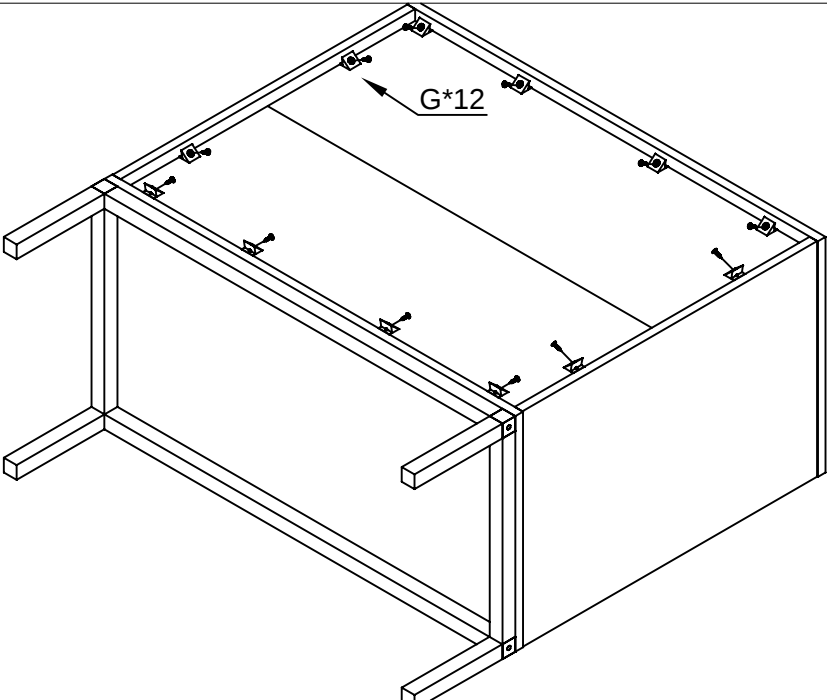


Insert the gap

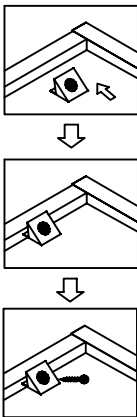


G	
	3x14mm
12x	

Step 8

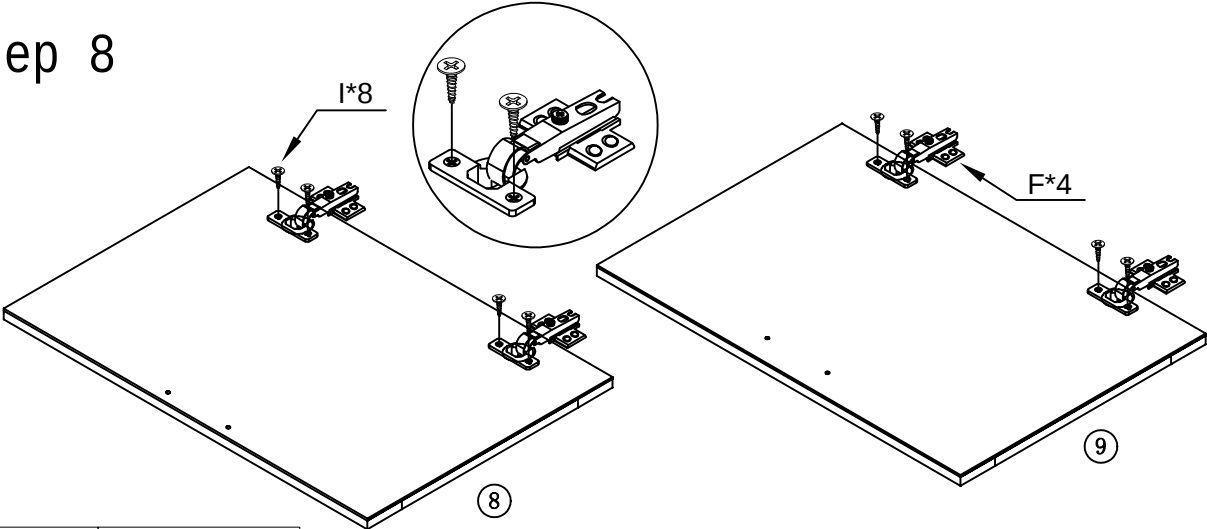


F		I	
	4x		8x


Step 9

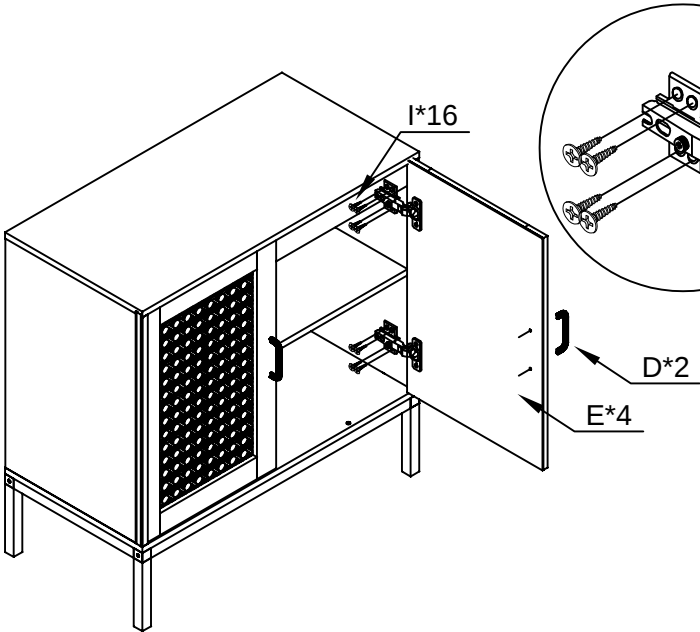



Hight Adjustment

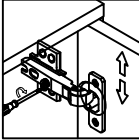

Internal Adjustment

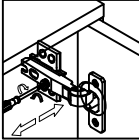


Depth Adjustment

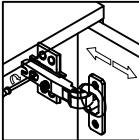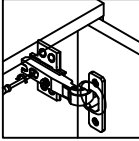

I		D		E	
	16x		2x		4x

Step 10

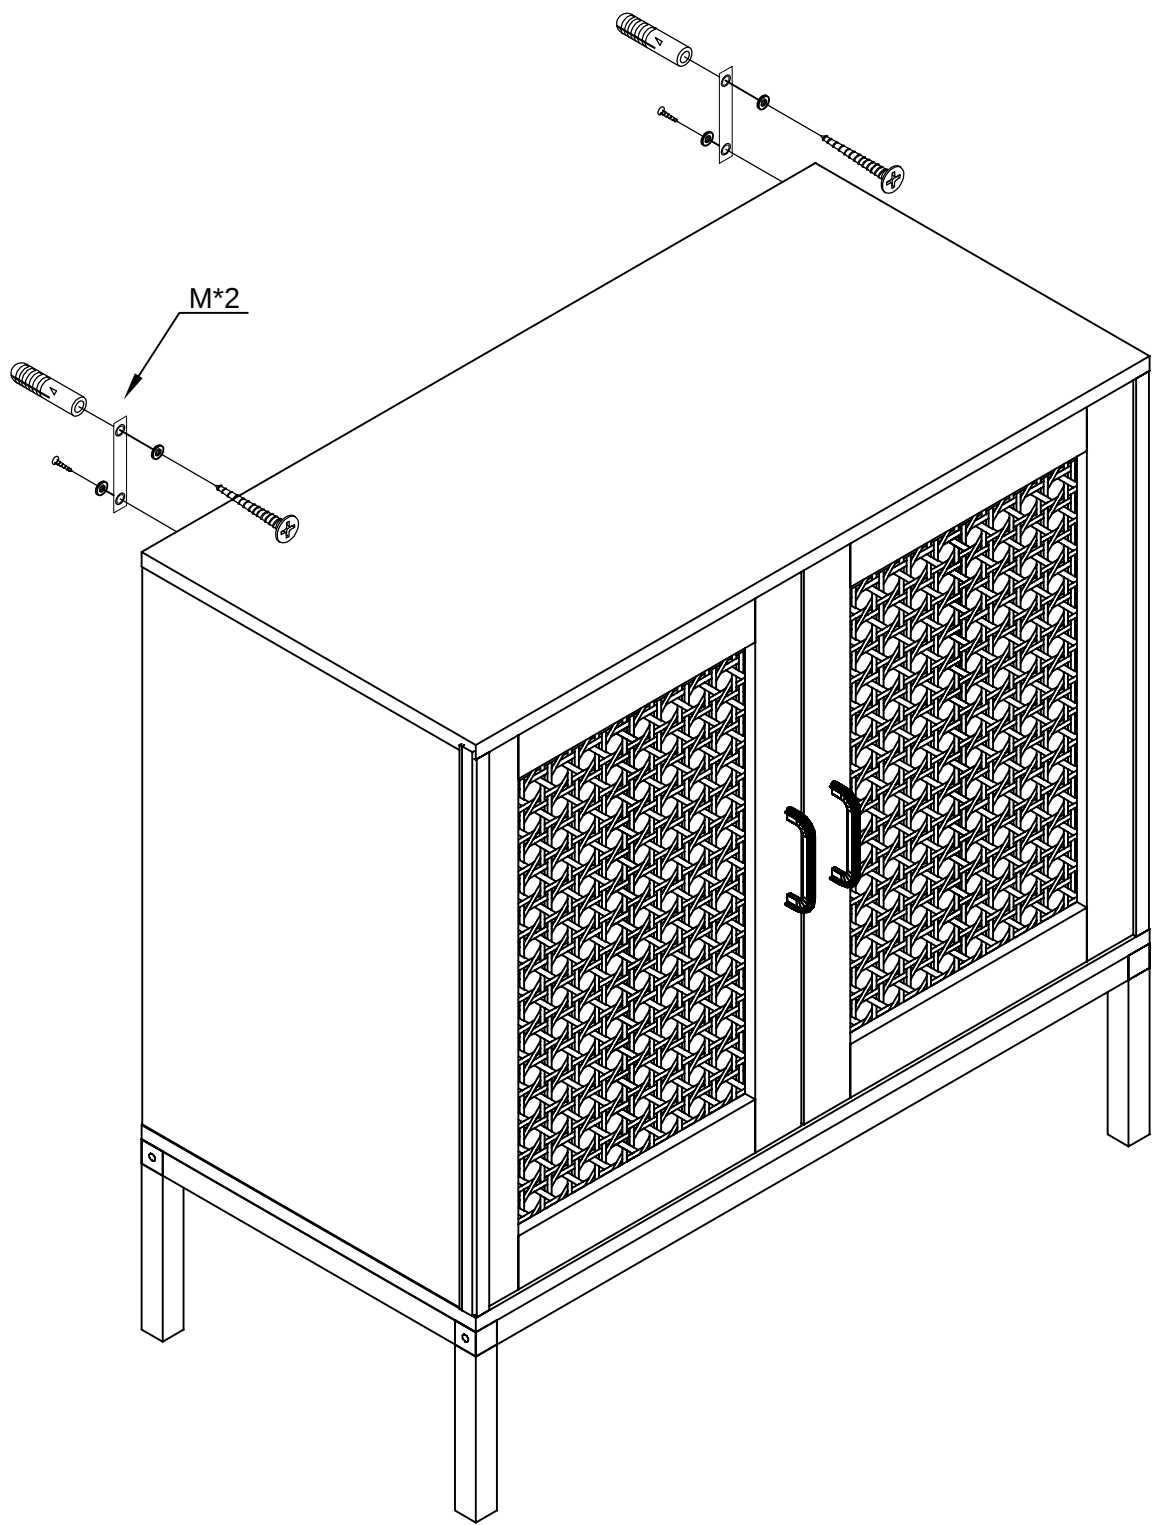


M
3.5"14 3.5"35
2x