


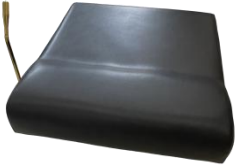










Barber Chair Instruction



Part List				
				
A.Seat Cushion 1PC	B.Armrest 2 PCS		C.Backrest 1PC	D.Headrest 1PC
				
E.Bolt 6PCS	F.Connect iron 4PCS	G.Base 1PC	H.Footrest 1PC	I.Pedal 1PC
				
J.Foot Bar 1PC	M.Pump 1PC			

Step 1: Insert threaded bolts on bottom of pump “ M ” into the holes on top of base “ G ” .Tighten and locking 6 nuts “ E ” onto threaded bolts.

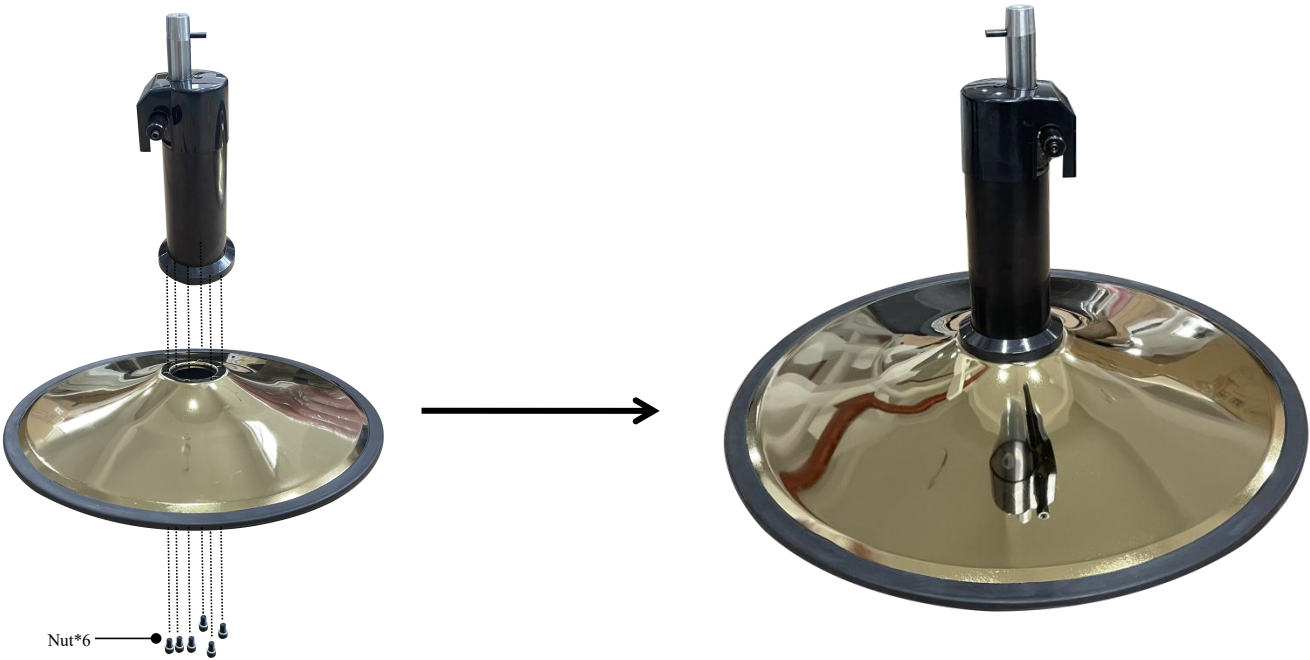


Step 2:Insert foot bar “J” into the assembled hydraulic pump “M”,tighten the black set screws to firmly hold the foot bar in place.(pay attention to the direction of foot bar)



Step 3:Unscrew the screws on both sides of the armrests “B”,assemble connecting iron “F” to armrests by those screws. Tighten.(Noted: The direction of connecting iron)



Step 4:Unscrew the screws on the seat cushion “A”,assemble the armrests “B” to seat cushion by those screws,tighten.(Please pay attention to the direction of the armrests and install it exactly as shown in the picture)

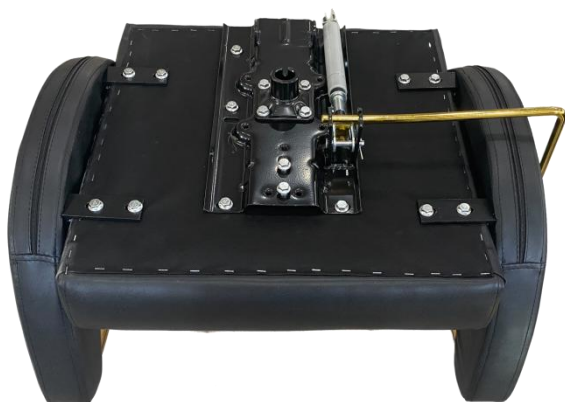


Use a screwdriver to align the holes when you felt it's hard to assemble.

Step 5: Firstly: Loosen the 2 embedded black screws on the both sides of the round tube under the bottom of the backrest iron. Photo ① for reference

Secondly: Attach the backrest to the assembled seat of chair, make sure the angle of backrest correct, Tighten by the 2 black screws in last step (Noted: Need tighten the two screws in the middle of the round tube as well). Photo ①② for reference

Finally: Loosen nut and bolt on the iron of backrest, Link gas pump and the iron on backrest by the nut and bolt as photo ③.


①

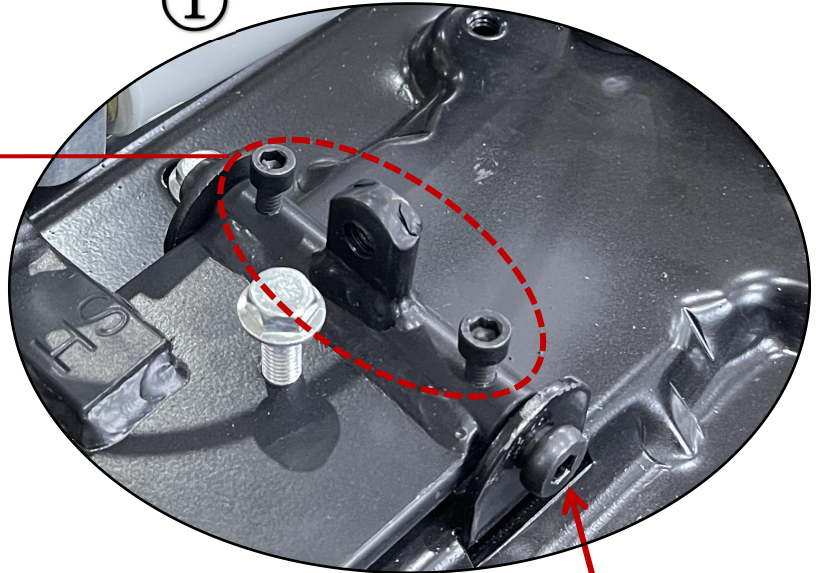

Tighten the two screws after attached the backrest to the assembled seat of chair

Do not rotate the gas pump to change the distance between the gas lever and the rocker lever.

②

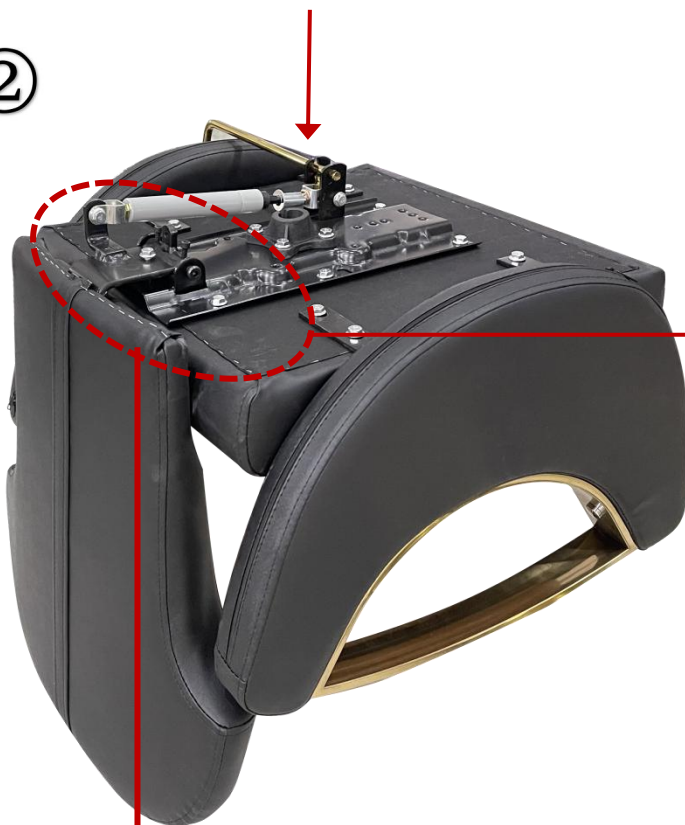


Attach backrest and assembled seat of chair by the 2 screws


Tighten this screw after assembled gas pump (Noted: Please push the reclining lever backwards, make the backrest reclining a little bit, then the iron on the backrest will be much closer to the gas pump. When you feel it's hard to link the gas pump and the iron of backrest)

③



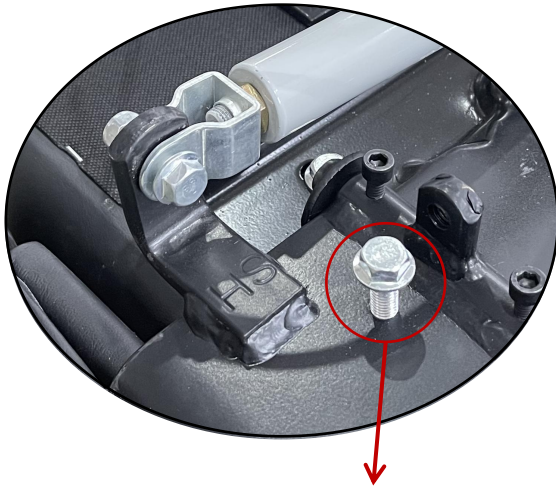

Please notice that the more you tighten the screw in, the greater the Angle between the back and the seat cushion; When you loosen this screw outward, the smaller the Angle between the back and the seat cushion (closer to 90 degrees).

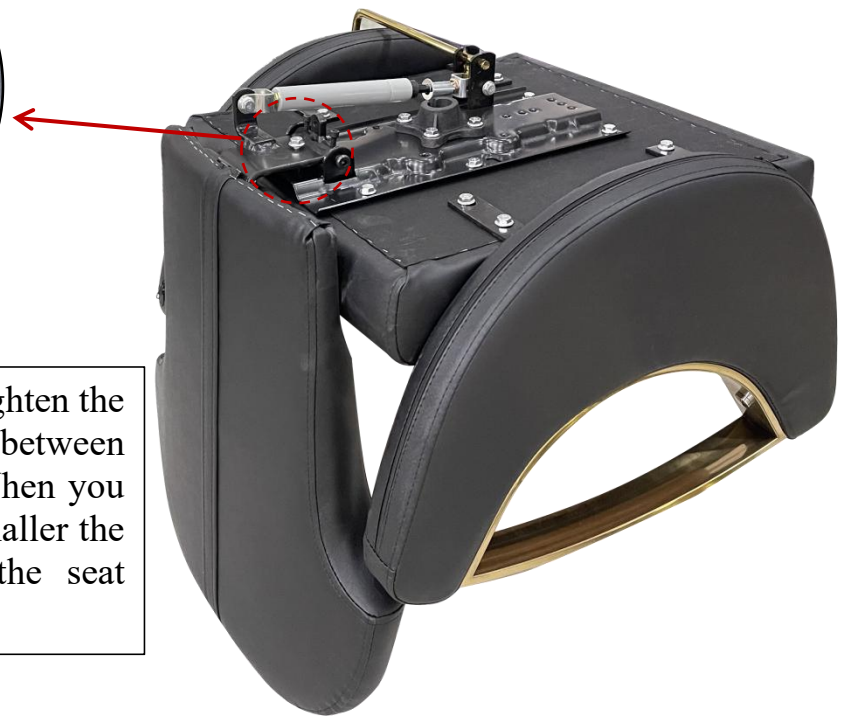

Step 6: Unscrew 2 screws previously assembled on the pedal, Attach the pedal “H” to footrest “I” by those screws. Tighten, as picture.



Step 7: Loosen 2 screws previously assembled on the seat cushion, attach footrest to seat cushion by those screws. Tighten, as picture.



Step 8:Put the assembled seat to the hydraulic pump.insert pillow into backrest.



Noted:the tray on the set plate must be aligned with the black pin of hydraulic pump.

