


# Attachment Instructions


## for stakWEL™ Cover Retainers

For additional information or questions,  
please contact The Bilco Company at:  
1-800-854-9724 or [www.bilco.com](http://www.bilco.com)

Four (4) plastic retainers are provided. Remove retainers from plastic runner and attach as follows:

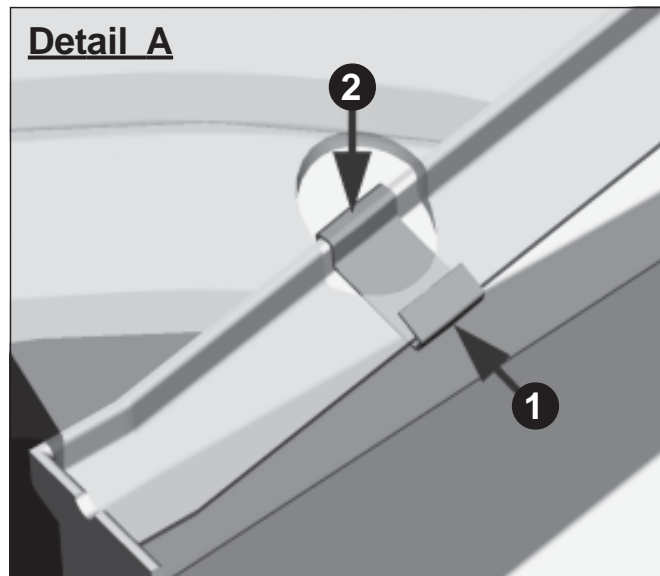

- 1** Push plastic retainers onto cover flange as shown in Detail A. The four clips should be spaced and located approximately as shown in Detail B
- 2** Lower the cover onto the well. Push down on each of the plastic retainers to fully engage them with the vertical flange on the top of the well.

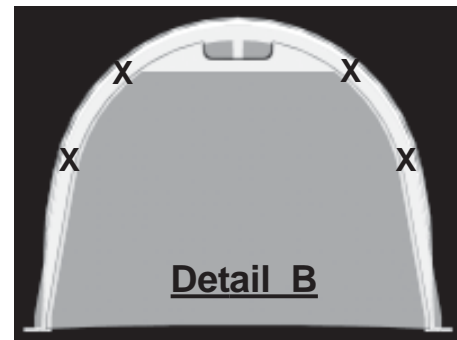

For Emergency Egress: **Place both hands in the center of cover and push up and away from the house. Make sure everyone in the household understands how the cover is removed.**



Imagine . . .  
What Bilco can do for your Basement