

ASSEMBLY INSTRUCTIONS

Before assembling your headboard, please read through these instructions carefully and familiarize yourself with the different parts.

ATTENTION! If you receive a damaged or defective item, please contact afifurnishings at customerservice@afifurnishings.com or 1-800-955-3726



PARTS LIST

- 1 TOP / BOTTOM RAIL 2 PCS
- 2 SLAT 10 PCS
- 3 WIDE SLAT 1 PC
- 4 LEFT LEG 1 PC
- 5 RIGHT LEG 1 PC

Instructions apply for bed sizes
QUEEN

HARDWARE

- A JCB M6 X 110mm - 4 pcs
Spare - 1 pc
- B Barrel Nut - 4pcs
- C JCB M8 X 15mm (5/8") - 4 pcs
Assembly headboard to open bed frame
- D Allen wrench - 1pc
Spare - 1pc


HARDWARE FOR METAL BED FRAME

- E JCB M6 X 25mm (1") - 4 pcs
Spare - 1 pc
- F Flat washer - 4 pcs
Spare - 1 pc
- G Split washer - 4 pcs
Spare - 1 pc

NOTE: WE INCLUDE SPARE HARDWARE IN CASE DAMAGE OCCURS DURING ASSEMBLY.

Step 1


Attach the slat (2) and wide slat (3) to the top and bottom rail (1) as shown.

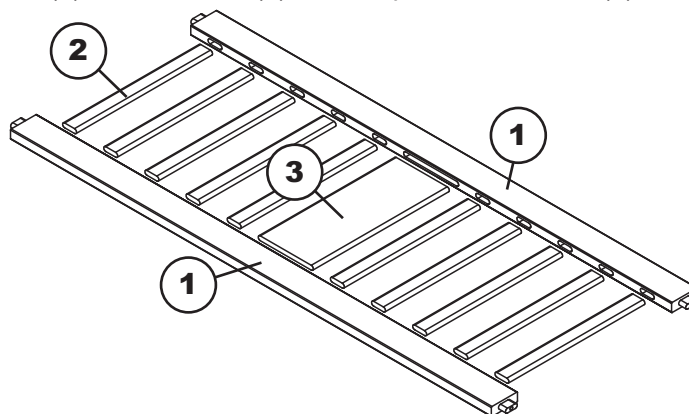

Adult assembly

Step 2

Attach the left leg (4) and right leg (5) to the rail assembly as shown. Using JCB (A) and barrel nut (B). Tighten with Allen wrench (D).

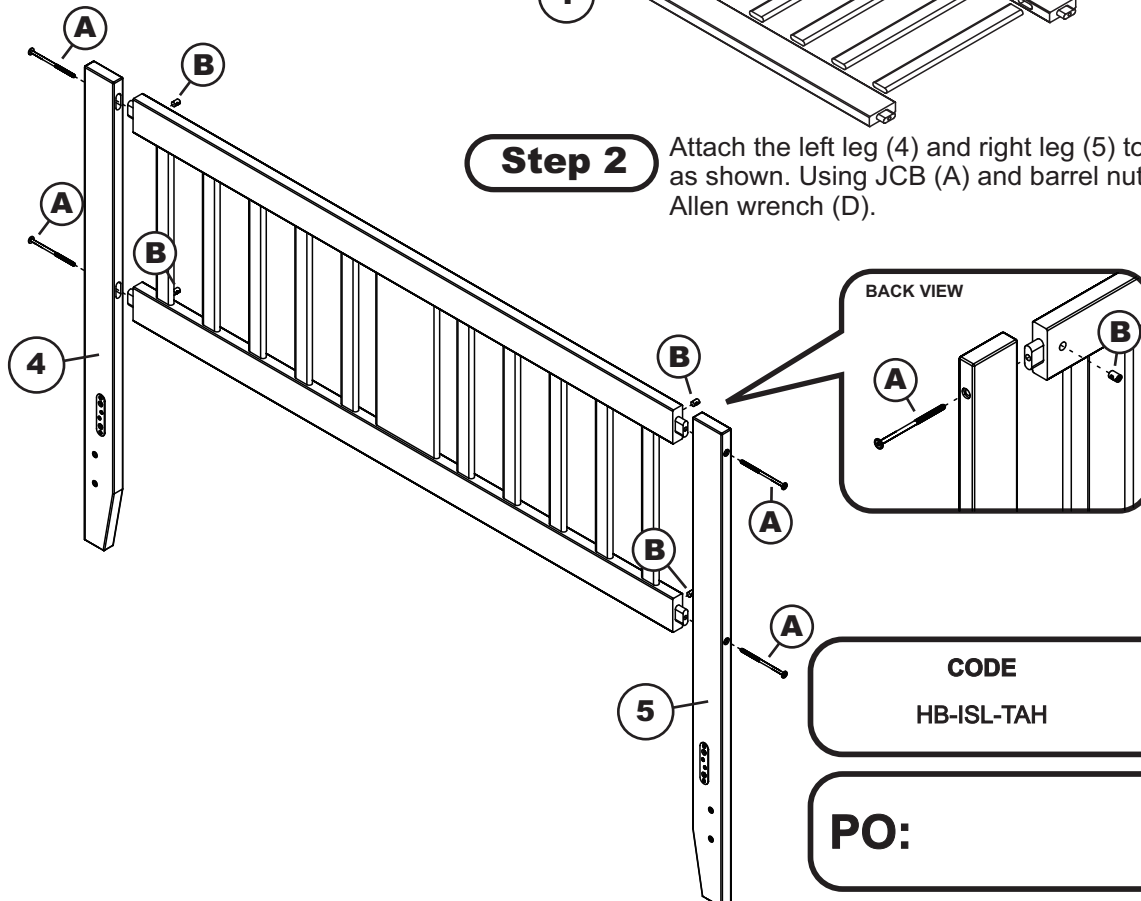

A

JCB M6 X 110mm

B

Barrel nut

CODE

HB-ISL-TAH

ITEM

G-11894X

PO:

FOR BED FRAME ASSEMBLY follow assembly instructions included with your bed frame.
If you purchased a wood headboard to attach to metal bed frame, please refer to page 2.

ASSEMBLY INSTRUCTIONS

Before assembling your bed, please read through these instructions carefully and familiarize yourself with the different parts.






Instructions apply for bed sizes
Twin > Full > Queen



Metal bed frames are sold separately from wood headboards. The hardware shown on this page is supplied with your wood headboard for attaching the bed frame to the headboard. The metal bed frame is supplied with its own assembly instructions and hardware.

Step 1

Attach the headboard assembly to the metal bed frame using JCB M6 X 1" (E), flat washer (F), and split washer (G) then tighten with Allen wrench (D) as shown below.

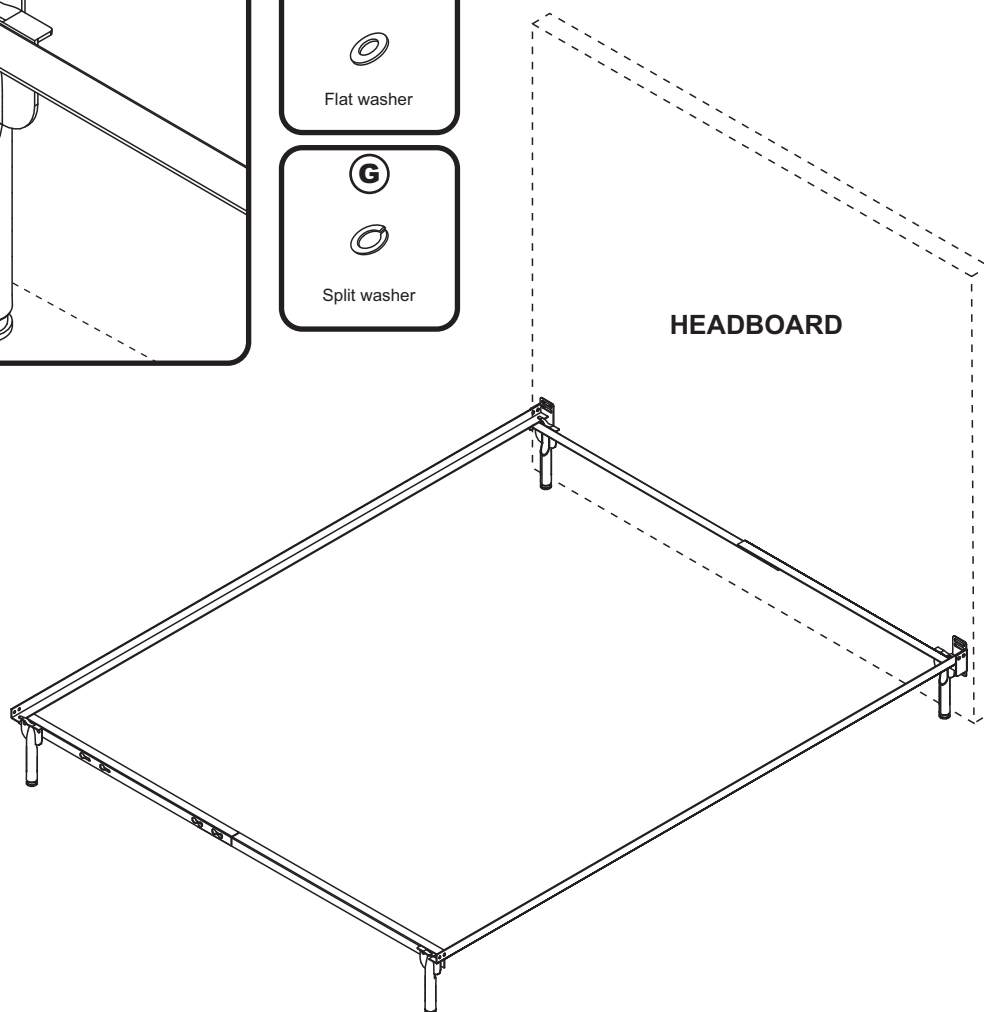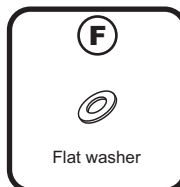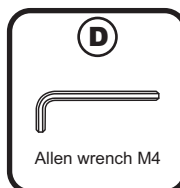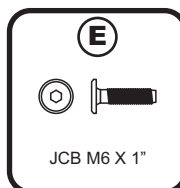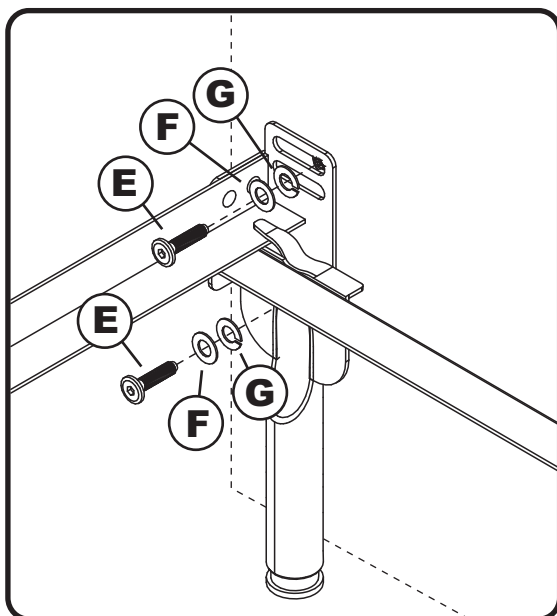

Congratulations!

Your bed is now ready for use.

To ensure lasting safety, we recommend that you periodically check that all screws are tight and all parts are secure.

QUEEN

ASSEMBLY INSTRUCTIONS

Before assembling your bed frame, please read through these instructions carefully and familiarize yourself with the different parts.

ATTENTION! If you receive a damaged or defective item, please contact [afifurnishings.com](mailto:customerservice@afifurnishings.com) or 1-800-955-3726



PARTS LIST

HARDWARE




- | | |
|------------------|--------|
| ① FOOT RAIL | 1 PC |
| ② LEFT LEG | 1 PC |
| ③ RIGHT LEG | 1 PC |
| ④ SIDE RAILS | 2 PCS |
| ⑤ SLAT KIT | 2 SETS |
| ⑥ SLAT SUPPORT 1 | 1 PC |
| ⑦ SLAT SUPPORT 2 | 1 PC |
| ⑧ SUPPORT LEGS | 3 PCS |

- | | |
|---|--|
| ① JCB M6 X 110mm (4 3/8") - 2 pcs
Spare - 1 pc | ⑤ JCB M6 X 30mm (1 1/4") - 6pcs |
| ② Barrel nut - 2 pcs | ⑥ Cap nut - 6pcs |
| ③ JCB M8 X 15mm (5/8") - 4 pcs | ⑦ Allen wrench M6 - 1pc |
| ④ JCB M8 X 40mm (1 5/8") - 3pcs | ⑧ Allen wrench M4 - 1pc
Spare - 1pc |
| ⑤ Wood screw (1 1/4") - 29 pcs
Spare - 2 pcs | ⑨ Split washer - 3pcs
Spare - 1pc |
| | ⑩ Flat washer - 3pcs
Spare - 1pc |

NOTE: WE INCLUDE SPARE HARDWARE IN CASE DAMAGE OCCURS DURING ASSEMBLY.



Step 1

Attach the legs (2) and (3) to foot rail (1), using JCB M6 X 110mm (A) and barrel nut (B).
Tighten with the Allen wrench M4 (I).

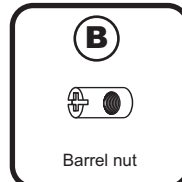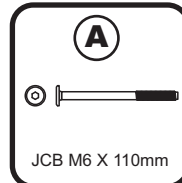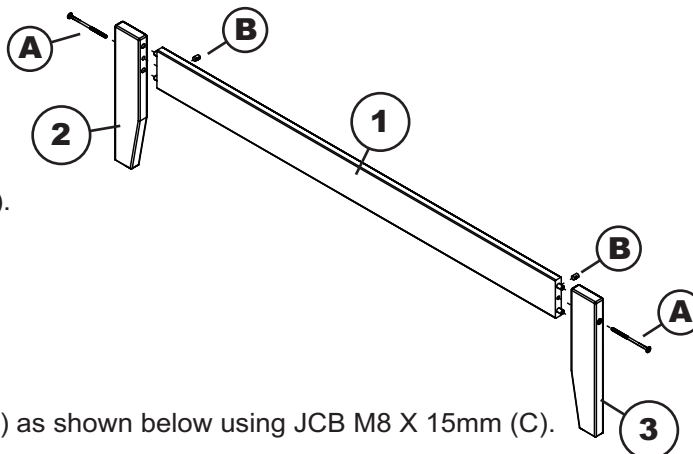

Step 2

Attach side rails (4) to the foot rail (1) as shown below using JCB M8 X 15mm (C).
Tighten with Allen wrench M6 (H).

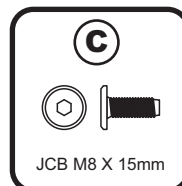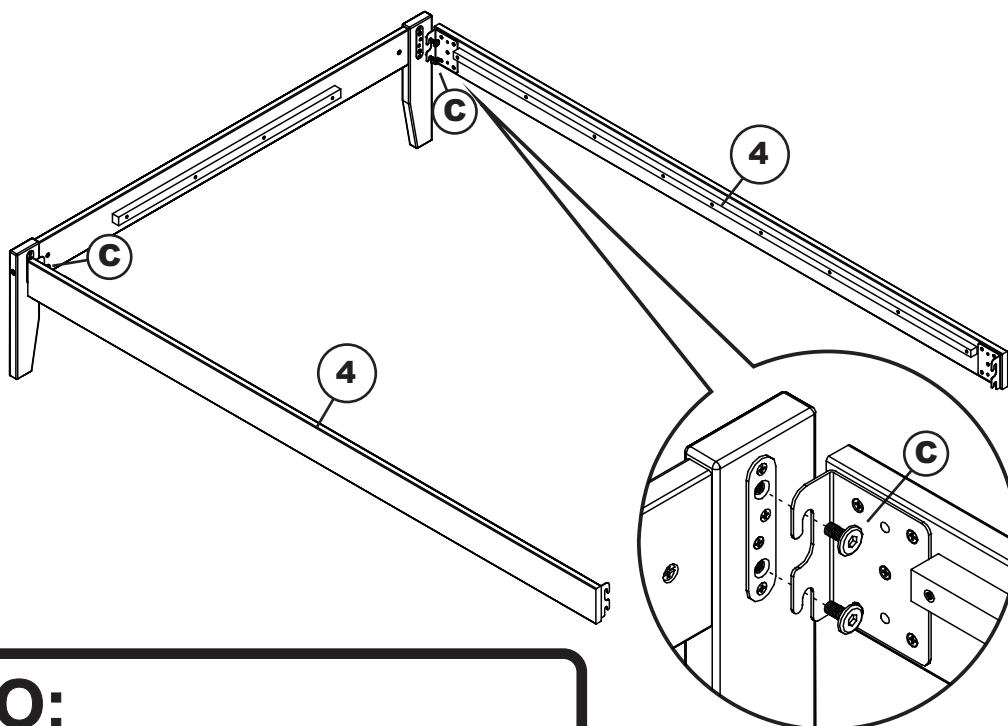





PO:

QUEEN



Step 3





Attach open bed frame to the headboard as shown below using 4 JCB M8 X 15mm bolts that are supplied with your headboard. Tighten with the Allen wrench M6 (H).

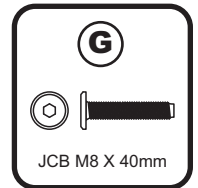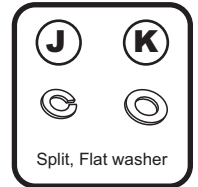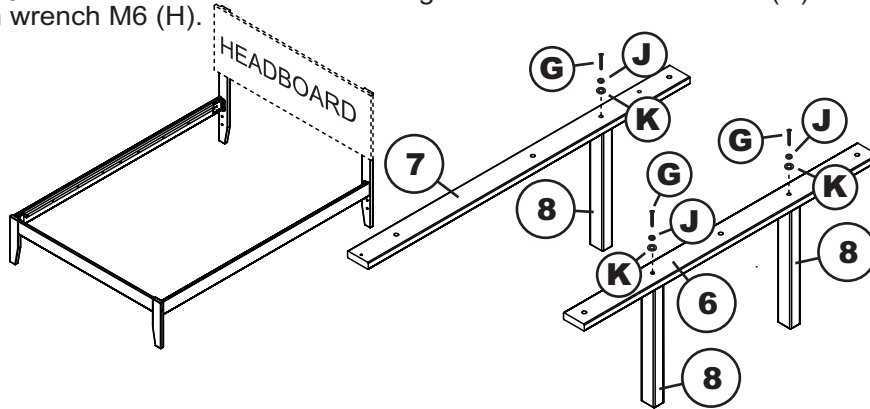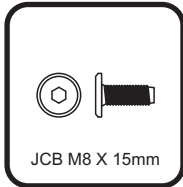

Step 5

Attach slat support 1(6) and slat support 2 (7) to the slat kit (5) as shown below using JCB M6 X 30mm (E) and cap nut (F). Tighten with Allen wrench M4 (I).



2 legs at headboard section.

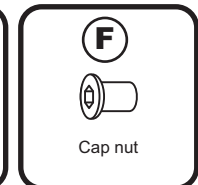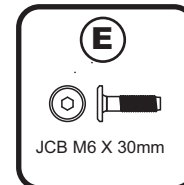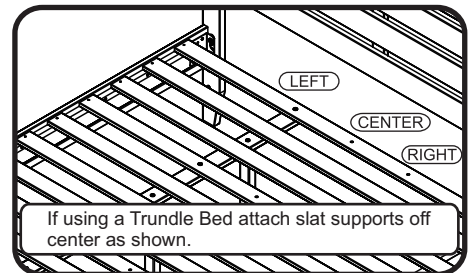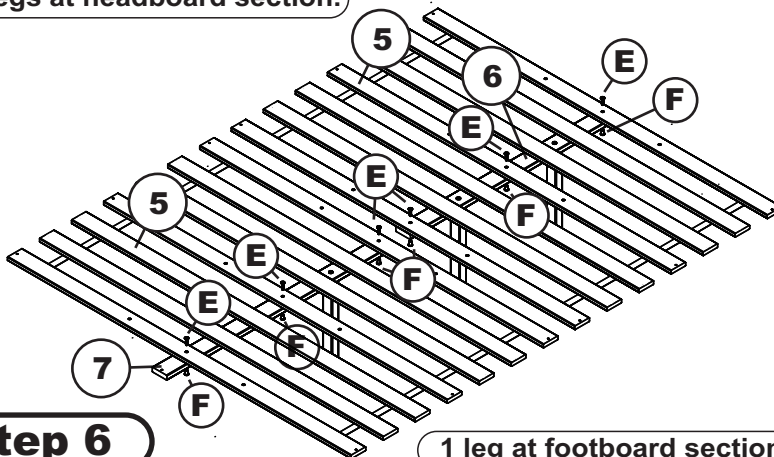

Step 6

1 leg at footboard section.

Attach 2 slat kits (5) to the open bed frame as shown below using wood screws 1 1/4" (D). Tighten with Phillips head screw driver. (customer supplied)

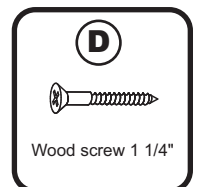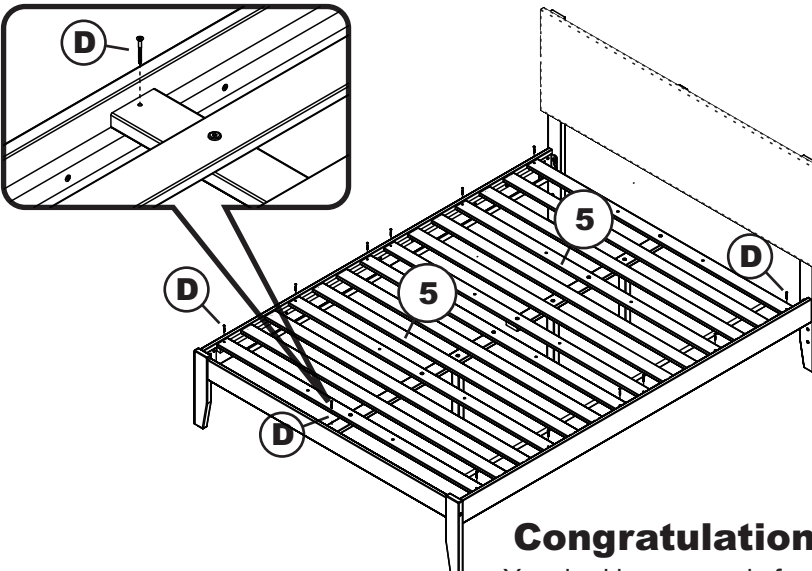

Congratulations!

Your bed is now ready for use.

We recommend that you periodically recheck that all screws are tight to ensure lasting safety.