



*Elizabethan Classics*

## **Assembly Instructions for BF10**


**CAUTION: DO NOT OVER TIGHTEN NUTS AND SCREWS- THIS CAN LEAD TO STRIPPING OR CRACKING AND WILL VOID YOUR WARRANTY.**

**NOTE: TO BE INSTALLED ONLY BY QUALIFIED, LICENSED PLUMBER**

**NOTE: WRAP AT LEAST 3 LAYERS OF TEFLON TAPE ON ALL THREADED CONNECTIONS**

### **FAUCET INSTALLATION:**

1. Shut off the water supply valves before installation.
2. Unscrew the mounting nut, and remove the metal washer and rubber washer from the hot valve body. From the top, install the hot valve body into the left faucet hole. From underneath, place the rubber washer, metal washer, and thread the mounting nut onto the threaded shank and tighten tight.
3. Repeat step 1 for the cold valve body.
4. Connect the supply lines (not included) to the threaded shanks.
5. After installation is completed, turn on the water supply valves and allow both hot and cold water to run at least one minute each. While water is running, check for leaks, especially at hook-ups to supply lines. Tightening nuts slightly will stop any minor leaks.

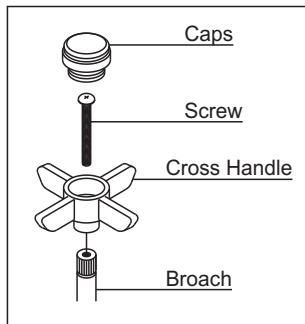

### **Cross Handles:**

1. Put the cross handles on the broaches and then tighten the screws.
2. Insert the caps on the cross handles.

