


MIRRORS BY DW

SIZE GUIDE & DESIGN TIPS

DW
Mirrors
Reflections
For Your
Fabulous Decor

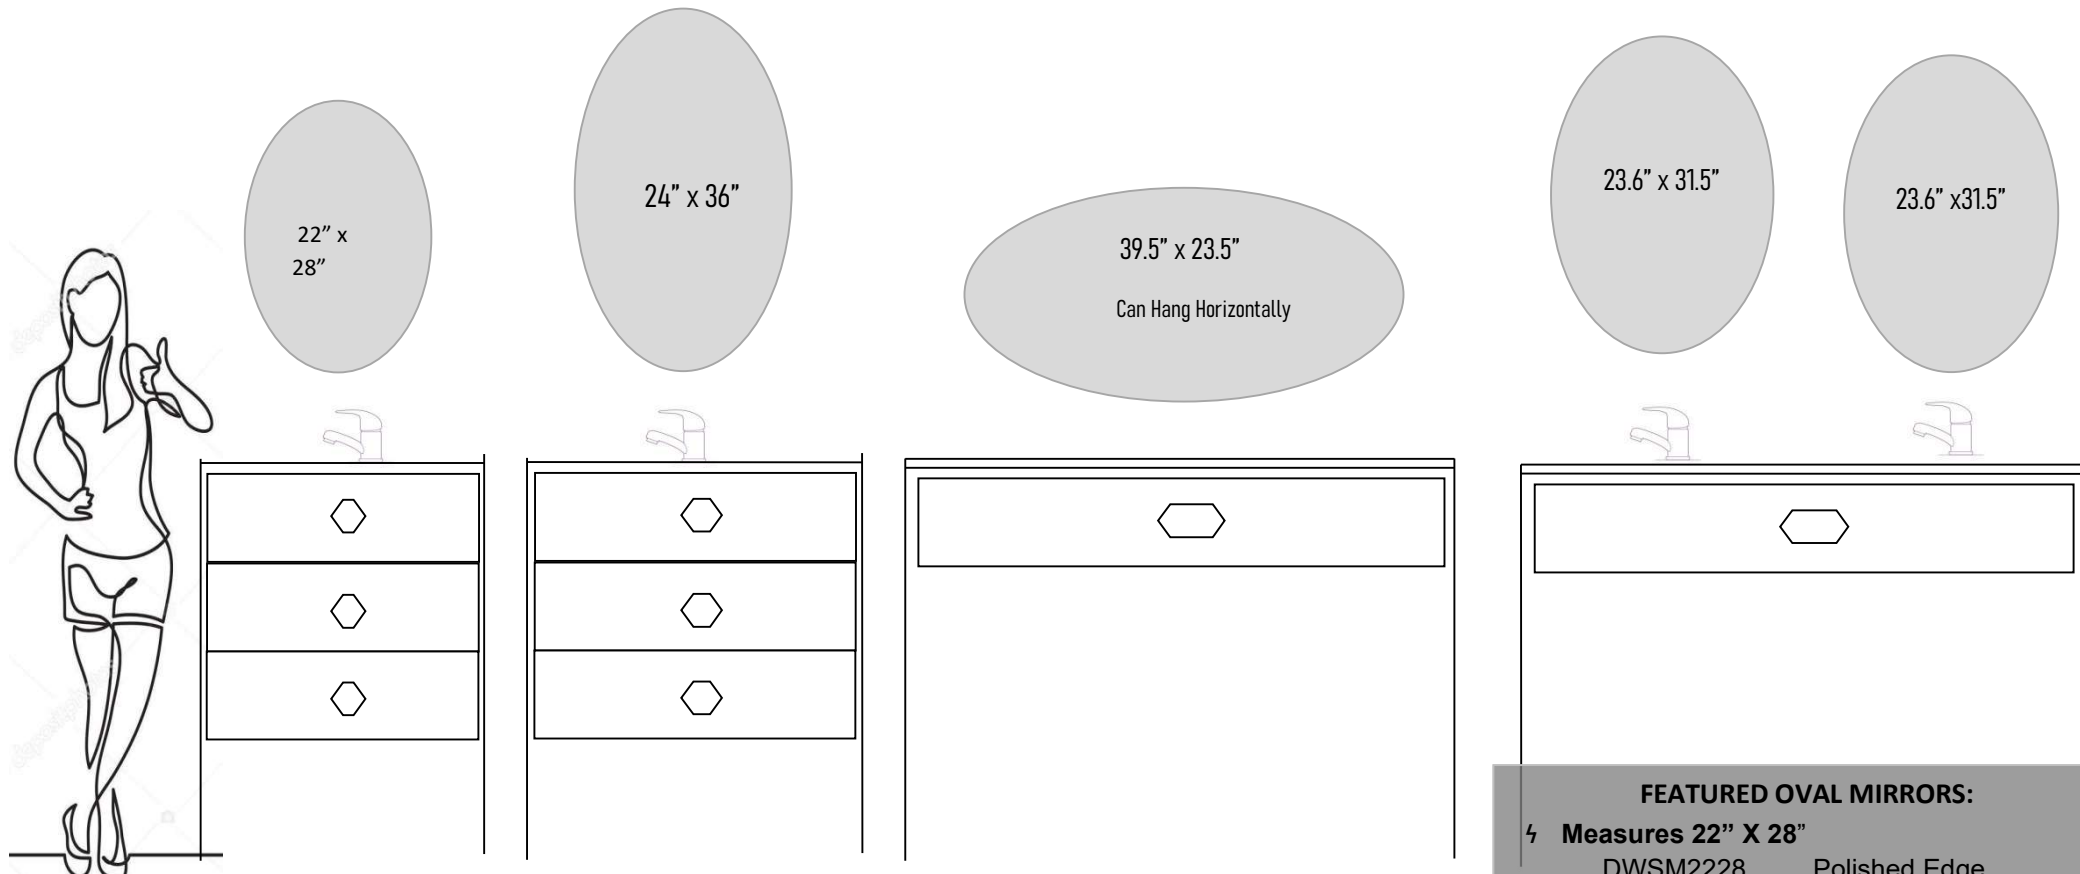

INTERIOR DESIGNER TIPS

- ⚡ When hanging your mirror above a vanity, console table, arm chair or fire place – place it 6” – 8” above the visual line. In bathrooms this will protect your mirror from water splashes
- ⚡ Choose a mirror that is 1”-2” smaller than the width of the countertop of your bathroom vanity
- ⚡ Make sure the mirror is **tall enough** so your head doesn’t get cut off when looking into it
- ⚡ When hanging above a nightstand, center the mirror above the night stand
- ⚡ When hanging on a blank wall, place it so the vertical center is at eye level- usually 60” from the floor
- ⚡ Hang your mirror with a friend so you can ‘eyeball’ your placement standing a few feet back
- ⚡ ADA COMPLIANT MIRRORS – Hang the mirror with the bottom edge no higher than 40” off the ground

FEATURED OVAL MIRRORS:

- ⚡ **Measures 22” X 28”**
DWSM2228 Polished Edge
- ⚡ **Measures 23.6” x 31.5”**
DWSM202 0.5” Bevel
DWSM1033 Scalloped & 0.5” Bevel
DWSM492 Frosted edge
DWSM9016 Double V-Groove
DWSM500-86 Grey Glass
DWSM5016-4 Molten Glass Frame
DWSM1058O U-Groove & Polished
- ⚡ **Measures 24” x 36”**
DWSM2436 1” Bevel
- ⚡ **Measures 39.5” x 23.5”**
DWSM1067 Polished Edge